

John Deere 8RT

(09-10) 8295RT, 8320RT, 8345RT (11-13) 8310RT, 8335RT, 8360RT (14-19) 8320RT, 8345RT, 8370RT (19- ) 8RT 310, 340, 370, 410

**READ complete manual CAREFULLY** BEFORE attempting operation.

	LIOKL	attempt	ilig (	pera	tion.			
BO	LT TO	RQUE SP	PECI	FICA	TIONS	)		
			SIZE	GR	TORQUE			
1/2"	5 60	Oft/lbs.	3/4"	5	225 ft/lbs.	)		
		4		3 a a a a a a a a a a a a a a a a a a a	actor 8	72	1) Install (#10) collar onto (#9) mounting brazel (#9) into the cocircle and slot opening of the front track of tractor.	mbined

ITEM	PART#	DESCRIPTION	QTY				
1	00085	.50 FLAT WASHER	12				
2	00254	.75" LOCKWASHER	2				
3	01254	BOLT .50NC X 1.50 GR5 HEX	12				
4	02178	NUT, .50NC LOCK, NY. INSERT	12				
5	06102	SET SCREW .50NC X 1.25 CUP	8				
6	13054-72	END CAP F/ 30 SERIES	4				
7	13055	BOLT, .75 NF X 2.75 HEX HEAD GR. 5	2				
8	13622-72	SIDEQUEST TANK BRACKET	4				
9	13623-72	JD TRACK MOUNTING TUBE BRACKET	4				
10.	17322-72	SPACER COLLAR F/ JD 8RT	4				
Please order replacement parts by PART NO. and DESCRIPTION							

- 3) Secure the end cap (#6) to bracket with hardware and torque to specifications.
- 4) Slip the tank support brackets (#8) on to mounting brackets (#9). Orient the support brackets so the cutout notches are towards each other.
- 5) Insert set screws into tank support brackets and hand tighten.
- **6)** Install tank and saddle on to support brackets and secure with hardware. Position tank with a minimum of 1 inch of clearance from track belt.
- 7) Tighten all remaining fastener hardware.