

### **50 SERIES SPRAYERS**



## **START-UP GUIDE**





Doing Our Best to Provide You the Best www.demco-products.com • 1.800.543.3626

# DEMCO 850, 1050, 1250 Gallon FIELD SPRAYERS

 
### Toll Free: 800-543-3626

Demco 50 Series exclusive tank design allows for unmatched agitation and drainage. Our short trailer design helps reduce crop damage, and our front folding hydraulic booms are built to perform.


Choose appropriate spray tips for application rate and speed.



Program rate controller (refer to your manual).





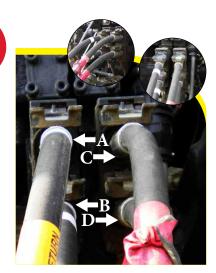

#### **Hose Hook-up**

I. Hook up hoses to tractor hydraulic priority port. (For optimal pump performance return line should dump directly into tractor hydraulic tank.) II. Start with low hydraulic flow (approximately 25% of max flow or 10 gpm.) (\*flow will be increased later.)

**BOOM RETURN** LINE

A

rior to engaging tracto hydraulic lever

BOOM PRESSURE LINE

PUMP RETURN LINE seal life, couple hose to w pressure return por Most tractors can have

urn tractor oil flo down prior to engaging tractor HYD lever.

B


D

**Pump Priming** 

For pump priming set pressure valve to: A. Tank Flush B. Main Valve to Sprayer Tank C Agitation Valve to Increase Agitation

Then fill Main Tank with 300 Gallons of fresh water.

For units equipped with Teejet Monitor. Set monitor to manual mode. Hold plus key until regulator valve is in open position. (Approximately 15 sec.)

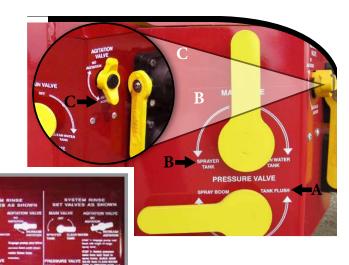

Monitor Set monitor master switch to off position

**Pressure Valve** Switch pressure valve back to spray boom

**Start Pump** A. Confirm pump is primped by checking pressure gauge.

> B. If gauge show 0 psi stop pump immediately. Remove cap from bottom of filter bowl until air is purged. Replace cap and restart pump. IF gauge pressure is above 5 psi proceed to step 9.

C. DO NOT RUN PUMP DRY

**Hydraulic Flow** 

Adjust tractor hydraulic flow to achieve a pressure of 80 psi.

**Set Valves** 

A) Set Main Valve to sprayer tank B) Set Agitation Valve for adequate tank mix

C) Set Pressure Valve to spray boom

Unfold Boom (see boom manual)



Now ready to test run sprayer.



90 FT BOOM





If desired spraying pressure is not reached slowly turn up tractor hydraulic flow.





#### 850 Gallon

45', 60' or 66' Boom available



#### 1050 Gallon

45', 60' or 66' Boom available or 80/90' Boom available



#### 1250 Gallon

80/90' Boom available



