



*Doing Our Best to Provide You the Best*

11-14-2022  
8C010271, Rev. C

---

## TRUCK BOX KIT

---

**9CCRTB14**, Truck Box Kit, 14'


**9CCRTB15**, Truck Box Kit, 15'

**9CCRTB16**, Truck Box Kit, 16'

**9CCRTB17**, Truck Box Kit, 17'

**9CCRTB20**, Truck Box Kit, 20'

**9CCRTB24**, Truck Box Kit, 24'

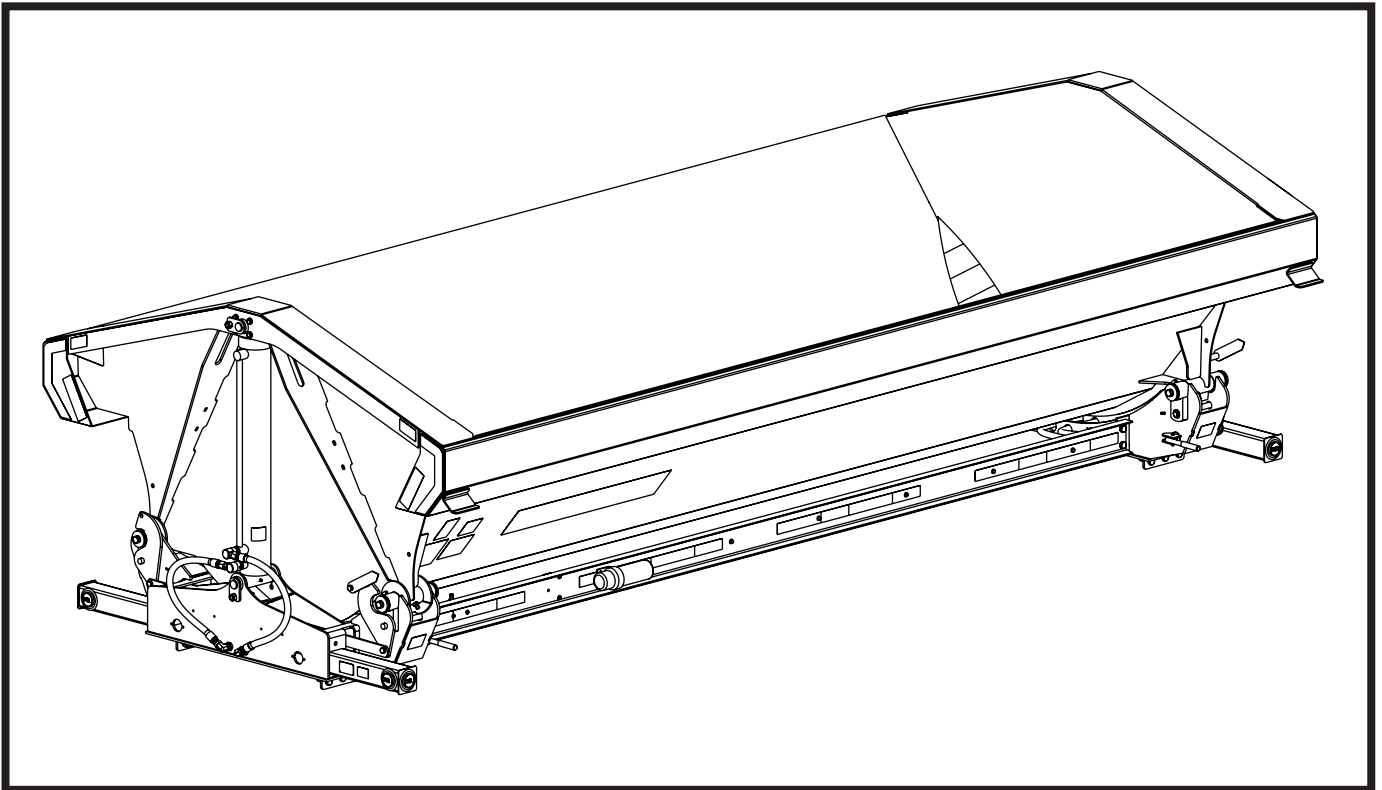

**OPERATOR MANUAL**

Product Disclaimer.....	3
Introduction.....	4
Dealer Checklist.....	6
To The Owner.....	7
Safety.....	8
Maintenance Safety.....	11
Safety Decals/Reflectors.....	12
Operating Instructions.....	14
Maintenance.....	16
Inspection and Maintenance Checklists.....	17
Electrical System.....	18
Electrical Harness (All Models).....	19
Hydraulic System.....	20
Hydraulic Cylinders and Bottom Cylinder Pins (All Models).....	21
Pivot Latch Parts (All Models).....	22
Tub Parts (All Models).....	24
Frame Parts (All Models).....	26
Hydraulic Parts (All Models).....	28
Model Specific Parts.....	30
Remote Grease Zerk Parts.....	31
Roll-Rite Electric Tarp.....	32
Aero Electric Tarp Mounts.....	45
Tarp Tips.....	46
Trailer Pro, Electric Over Hydraulic Kit (4CFK2018).....	47
General Troubleshooting.....	52
Specifications and Features.....	53
Warranty.....	54
Warranty Registration.....	57

In this document you will find information based on available knowledge at the time of its publication. To be accurate with the information, every effort was made but may not cover all details or variations of a truck box or provide every possibility in connection with its production, operation and maintenance. A Feature and Option may be presented in the manual that is not relevant to this truck box. Demco assumes no obligation of notice, to holders of this document, with changes made to a product.

***SPECIFICATIONS AND DESIGN ARE SUBJECT TO CHANGE WITHOUT NOTICE.***

Demco is often making improvements and developing new designs. In doing so, we reserve the right to make changes and/or improvements without obligation for equipment sold beforehand. Self-modification to our truck boxes may affect the operation, function, and safety, so this is not advised. If a replacement part is necessary, Demco should supply it, please contact your nearest dealer or Demco.

***DEMCO STATEMENT OF PRODUCT SAFETY:***

As a producer of agricultural and transportation equipment, Demco is fully aware of its responsibility of providing its customers products that perform their expected use, in a truly safe manner. Safety considerations shall be a fundamental and high precedence part of all engineering/design analysis and judgments involving Demco products. It is our stated policy that our products will be manufactured to coincide with the safety standards specified by the National Association of Trailer Manufacturers and/or any other officially recognized standards at the time manufactured. However, this statement should not be translated to mean that our product will uphold against a customer's own carelessness or disregard for common safety practices specified in each product's manual, nor will we be accountable for any such occurrence.


At Demco we strive to design, produce and deliver the highest quality product on the market. Our employees have a strong background of knowledge and combined experience in manufacturing to put quality workmanship into our products. In this manual you will find information covering all models of the Demco Side Dump Truck Box line. Use the table of contents to locate specific areas of interest.

### **GENERAL INFORMATION:**

Demco requires that you and anyone else who will be operating and maintaining the truck box read and understand the guidelines in the manual for safe, efficient, and trouble free operations. Proper maintenance, adjustments and use will result in many years of service. Keep this manual handy for frequent reference and to pass on to new operators or owners. If assistance, information, or additional copies of the manual are needed, contact the nearest dealer, a distributor, or Demco.

### **PLEASE NOTE:**

- All documents within the manual referring to products not manufactured by Demco have been printed with the permission of the manufacturer specified.
- All references to driver, passenger, front and rear of the truck box are determined from a position behind the truck and facing forward.

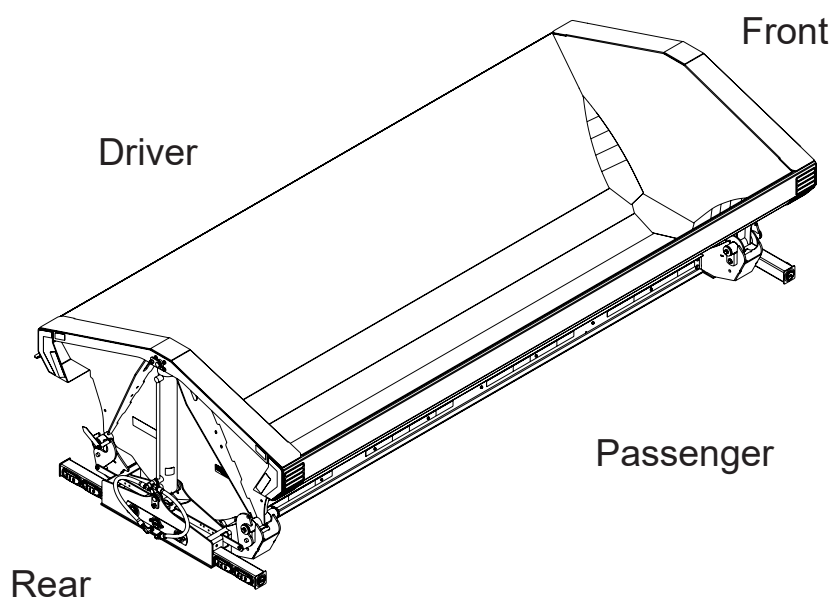




For your convenience we have four easy ways to register your warranty.

- **Call our toll free number and ask for warranty registration. 1-888-274-6010**
- **Fax completed warranty registration form.  
Fax: 712-262-1022**
- **Register on-line in warranty page at  
[www.demco-products.com](http://www.demco-products.com)**
- **Complete and return registration form.**

Demco Warranty does not cover the following:

- 1) Cleaning, transporting, mailing and service call charges.
- 2) Depreciation or damage caused by normal wear, accidents, improper protection or improper use.

***See complete Warranty for details.***

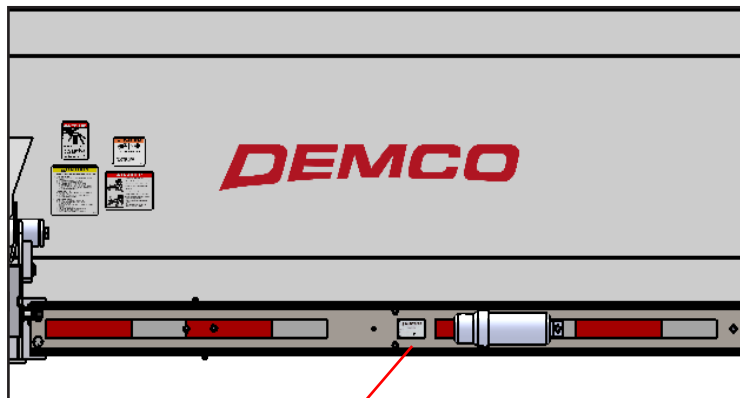

***Serial Number***

**In addition to the serial number, Demco has placed a coded unit number on the chassis and the tub. Call Demco for location.**

Record your truck box model and serial number in the space provided below. Your dealer needs this information to give you prompt, efficient service when you order parts.

**MODEL NO.** \_\_\_\_\_

**SERIAL NO.** \_\_\_\_\_

**DATE PURCHASED** \_\_\_\_\_

To The Dealer:

Inspect the truck box thoroughly after shipment to be certain it is functioning properly before delivering it to the customer. The following checklist is a reminder of points to cover. Check off each item as it is found satisfactory or after proper adjustment is made.

### **PRE-DELIVERY CHECKLIST**

- ☐ 1. All hardware properly tightened
- ☐ 2. Lubrication of grease fittings
- ☐ 3. All decals properly located and readable
- ☐ 4. Lights function properly
- ☐ 5. Air lines tight and no pinched lines
- ☐ 6. Overall condition (touch up any scratches, clean and polish)
- ☐ 7. Operator's manual

Date Delivered: \_\_\_\_\_

Signature of Salesman or Technician: \_\_\_\_\_

### **DELIVERY**

Review the operator's manual with the customer. Explain the following:

- ☐ 1. Safe operation and service
- ☐ 2. Correct trailer operation
- ☐ 3. Daily and periodic lubrication and maintenance
- ☐ 4. Daily and periodic inspections
- ☐ 5. Trouble shooting
- ☐ 6. Storing truck box
- ☐ 7. Demco parts and service policies
- ☐ 8. Have the customer write the truck box model and serial number in space provided in manual introduction.
- ☐ 9. Give customer the operator's manual and encourage the customer to read the manual carefully.
- ☐ 10. Completion and mailing of warranty registration form.

Date Delivered: \_\_\_\_\_

Signature: \_\_\_\_\_

Model No: \_\_\_\_\_

Serial No: \_\_\_\_\_

Thank you for your recent purchase of a new Demco Side Dump Truck Box. The primary objective of Demco is to build and provide you with a quality product. However, in the event that a problem does occur, it is imperative that your warranty registration is on file in order to accurately respond to your specific service circumstances. For your convenience we have four easy ways to register your warranty:

**Register  
Warranty  
One of  
Four Ways**

- Call our toll free number and ask for warranty registration.  
1-888-274-6010
- Fax your completed warranty registration form.  
1-712-262-1022
- Register on-line at:  
[www.demco-products.com](http://www.demco-products.com)
- Complete and mail the warranty registration form.

This manual has been prepared to assist you in the operation of your new truck box and contains information pertaining to safety, operations and all of its parts. Our personnel in sales and service are always available to assist you when questions arise concerning the maintenance or operations of your truck box.

When ordering parts, please refer to part numbers and descriptions as listed throughout this book. All parts and whole goods will be shipped FOB Spencer, IA. Or FOB your regional distributor. Always check merchandise immediately upon receipt for damage or shortage. Note any discrepancy on carrier's bill of lading and notify Sender within 10 days. Returned goods will be subject to a 15% restocking charge. Demco reserves the right to make improvements and modifications on equipment without obligation to change previously built equipment. All prices are subject to change without notice.



## RECOGNIZE SAFETY INFORMATION

- This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury. Follow recommended precautions and safe operating practices.



## FOLLOW SAFETY INSTRUCTIONS

- Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety sign.
- Learn how to operate the machine and how to use controls properly.
- Do not let anyone operate without instruction.
- Keep your machine in proper working condition.
- Unauthorized modification to the machine may impair the function and/or safety and affect machine life.



## PROTECT CHILDREN AND BYSTANDERS

- Before you back, LOOK CAREFULLY behind for children.
- Clear area of children, pets and bystanders.



## HIGHWAY AND TRANSPORT OPERATIONS

Adopt safe driving practices:

- Always drive at a safe speed relative to local conditions and ensure that your speed is low enough for an emergency stop to be safe and secure. Keep speed to a minimum.
- Reduce speed prior to turns to avoid the risk of overturning.
- Avoid sudden uphill turns on steep slopes.
- Always keep the tractor or towing vehicle in gear to provide engine braking when going downhill. Do not coast.
- Do not drink and drive.
- Comply with state and local laws governing highway safety and movement of equipment on public roads.
- Use approved accessory lighting and necessary warning devices to protect operators of other vehicles on the highway during daylight and nighttime transport.





## HIGHWAY AND TRANSPORT OPERATIONS

- Plan your route to avoid heavy traffic.
- Be a safe and courteous driver. Always yield to oncoming traffic in all situations, including narrow bridges, intersection, etc.
- Be observant of bridge loading ratings. Do not cross bridges rated lower than the gross weight at which you are operating.
- Always operate the truck box in a position to provide maximum visibility at all times. Make allowances for increased length and weight of the equipment when making turns, stopping the unit, etc.



## AVOID HIGH PRESSURE FLUIDS

- Escaping fluid under pressure can penetrate the skin causing serious injury.
- Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.
- Search for leaks with a piece of cardboard.
- Protect hands and body from high pressure fluids.
- If an accident occurs, see a doctor immediately.



## DISPOSE OF FLUIDS PROPERLY

- Improperly disposing of fluids can harm the environment and ecology. Before draining any fluids, contact your local environmental agency for the proper waste disposal methods.
- Use proper container when draining fluids. Do not use food or beverage containers that may mislead someone into drinking from them.
- DO NOT pour oil into the ground, down a drain, or into a stream, pond, or lake. Observe relevant environmental protection regulations when disposing of oil and other harmful waste.



**TAKE NOTE! THIS SAFETY ALERT SYMBOL FOUND THROUGHOUT THIS MANUAL IS USED TO CALL YOUR ATTENTION TO INSTRUCTIONS INVOLVING YOUR PERSONAL SAFETY AND SAFETY OF OTHERS. FAILURE TO FOLLOW THESE INSTRUCTIONS CAN RESULT IN INJURY OR DEATH!**



**THIS SYMBOL MEANS:  
ATTENTION!  
BECOME ALERT!  
YOUR SAFETY IS INVOLVED!**

### **SIGNAL WORDS**

Note use of following signal words **DANGER**, **WARNING**, and **CAUTION** with safety messages. The appropriate signal word for each has been selected using the following guidelines:

**DANGER:** Indicates an imminently hazardous situation that, if not avoided, will result in death or serious injury. This signal word is to be limited to most extreme situations typically for machine components which, for functional purposes, cannot be guarded.

**WARNING:** Indicates a potentially hazardous situation that, if not avoided, could result in death or serious injury, and includes hazards that are exposed when guards are removed. It may also be used to alert against unsafe practices.

**CAUTION:** Indicates a potentially hazardous situation that, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.



### **EQUIPMENT SAFETY GUIDELINES**

Every year many accidents occur which could have been avoided by a few seconds of thought and a more careful approach to handling equipment. You, the operator, can avoid many accidents by observing the following precautions in this section. To avoid personal injury, study the following precautions and insist those working with you, or you yourself, follow them.

Operator should be a responsible adult. **DO NOT ALLOW PERSONS TO OPERATE THIS UNIT UNTIL THEY HAVE DEVELOPED A THOROUGH UNDERSTANDING OF SAFETY PRECAUTIONS AND HOW IT WORKS.**

**DO NOT** modify the truck box in anyway. Doing so may impair the function and/or safety and could affect the life of the truck box.

Never exceed the maximum capacity of the truck box. By doing so you risk damage to your Demco truck box. If it's ability to do a job, or to do so safely is in question **DON'T TRY IT.**

Review safety instructions with all users annually.

Replace any caution, warning, danger or instruction safety decal that is not readable or is missing. Location of such decals is indicated in this booklet.

Do not paint over, remove, or deface any safety signs or warning decals on your equipment. Observe all safety signs and practice instructions on them.

## Working on hydraulic systems



### **DANGER:**

Clear area around tractor of bystanders before raising tub.



### **DANGER:**


Do not preform maintenance on tub body without physically blocking body and cylinders to prevent lowering.



Before performing maintenance between the frame rails, park tractor on a level surface, tub fully dumped, then hydraulic hoses uncoupled.

If service requires the tub to be partially dumped follow the proper safety procedures.

1. Make two tub braces using 1/4" x 3" x 3" angle iron.
2. Raise tub and insert angle iron over cylinder rod on each end. (See Photo)
3. After tub is secured in raised position:
  - a. Disengage the PTO; relieve the pressure from the hydraulic system by jogging control valve both directions to relieve pressure from the system.
  - b. When working on hydraulic systems, **EXTREME** caution must be used to avoid injuries from high pressure or hot oil.
  - c. Never attempt to work on loaded trailer.

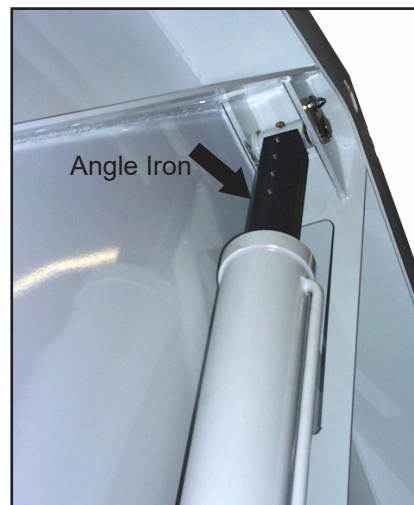

1/4" x 3" x 3" Angle Iron  
(20" Min. Length)



**WARNING:** Hydraulic fluid escaping under pressure can have enough force to penetrate the skin. Hydraulic fluid may also infect a minor cut or opening in the skin. If injured by escaping fluid, see doctor at once. Serious infection or reaction can result if medical treatment is not given immediately. Make sure all connections are tight and that hoses and lines are in good condition before applying pressure to the system. Relieve all pressure before disconnecting the lines or performing other work on the hydraulic systems.

## Tub and frame inspections

An important phase of truck box upkeep and maintenance is the inspection and repair, if any, of all structural steel members of the truck box frame and tub. It is readily apparent that the frame and tub must be one solid unit to carry the load safely and quickly without danger of accident or further damage to the trailer. This also prevents subsequent major repair, cost and trailer down time.

The need for a complete frame and tub inspection stems from various reasons:

- Truck box loaded to maximum rated capacity, or greater.
- Rough handling may also cause structural failures of varying degrees. The failures are the results of metal fatigue due to flexing, twisting, distortion.

Frame and tub failure will show up in the steel frame members as weld cracks, cracked and loosened steel sections.

To detect any fractures before they become major failures:

- Once a month thoroughly inspect the truck box for any sign of failure and correct any defects.
- It is desirable to have the truck box completely washed down so all the joints and welds may be closely viewed.





**Important:** Install new safety decals and reflectors if the old decals and reflectors are destroyed, lost, painted over or cannot be read. When parts are replaced that have decals or reflectors, make sure you install a new decal with each new part.


1AQAP2914



1AQAP4361

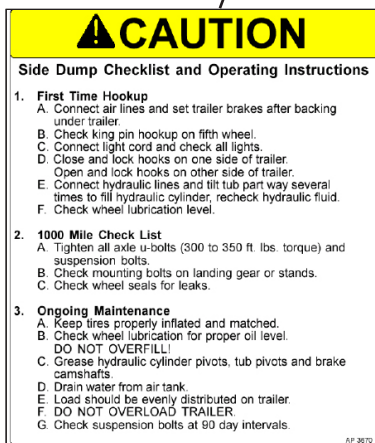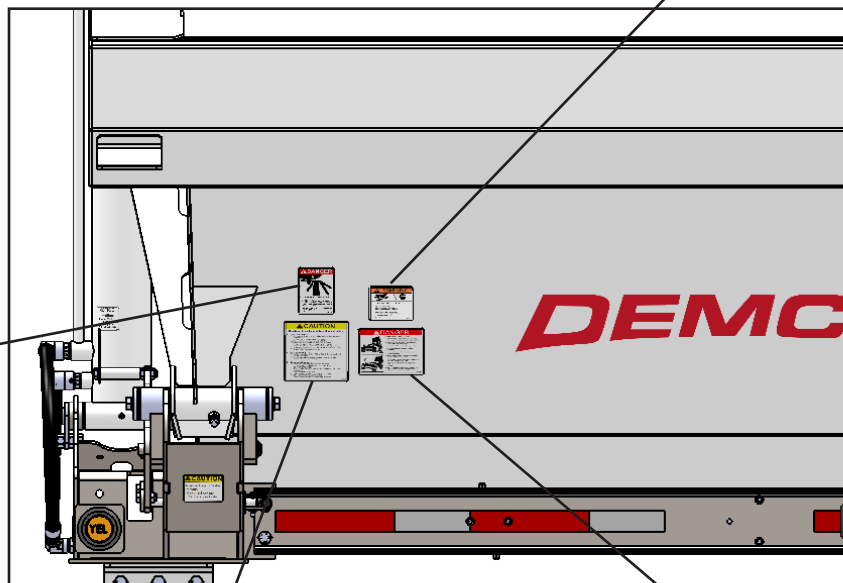

1AQAP3670

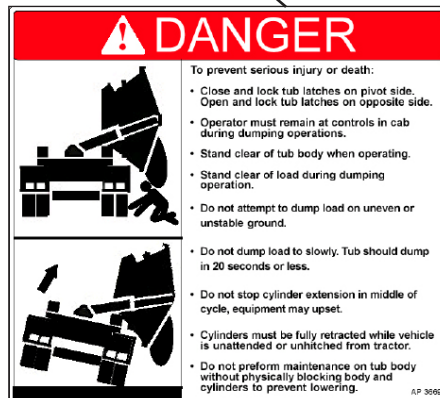

1AQAP3669

1AQAP3669 (1) DANGER (Load Dumping Safety) 8"W x 5-1/2"L


1AQAP3670 (1) CAUTION (Side Dump Checklist and Operating Instructions) 6"W x 7"L

1AQAP2914 (1) WARNING (High Pressure Fluid) 4"W x 4"L

1AQAP4361 (2) DANGER (Frame Area Maintenance) 3"W x 6-1/4"L

**NOTE:** New decals and reflectors are available from your dealer.




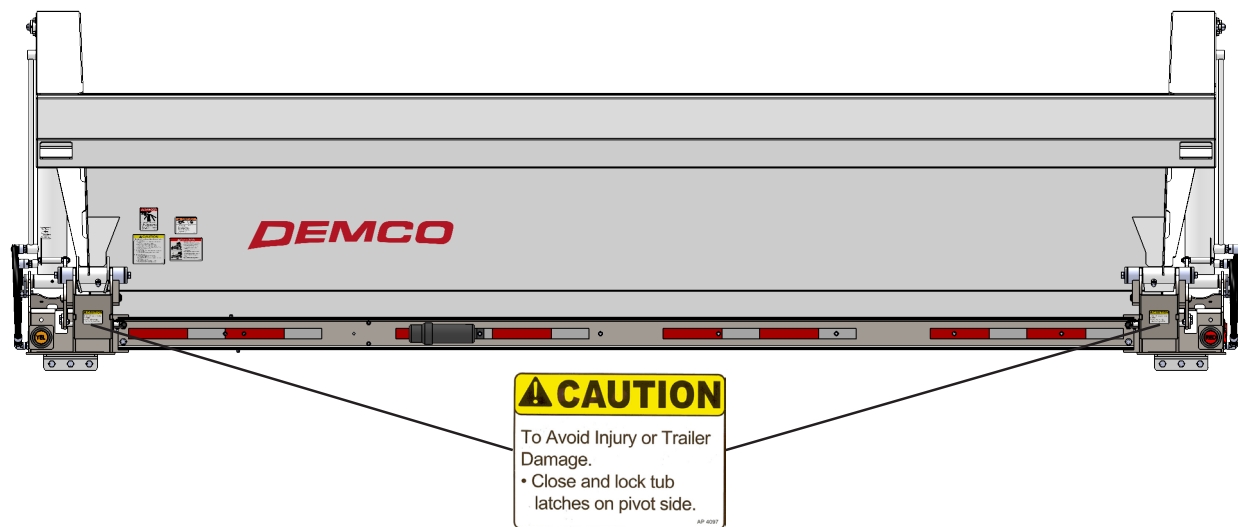

**Important:** Install new safety decals and reflectors if the old decals and reflectors are destroyed, lost, painted over or cannot be read. When parts are replaced that have decals or reflectors, make sure you install a new decal with each new part.

\* 1AQAP4097 (4) Decal, CAUTION, Lock Tub Latches

\* 1AQAT000000 (4) White Conspicuity Tape, 2" Wide

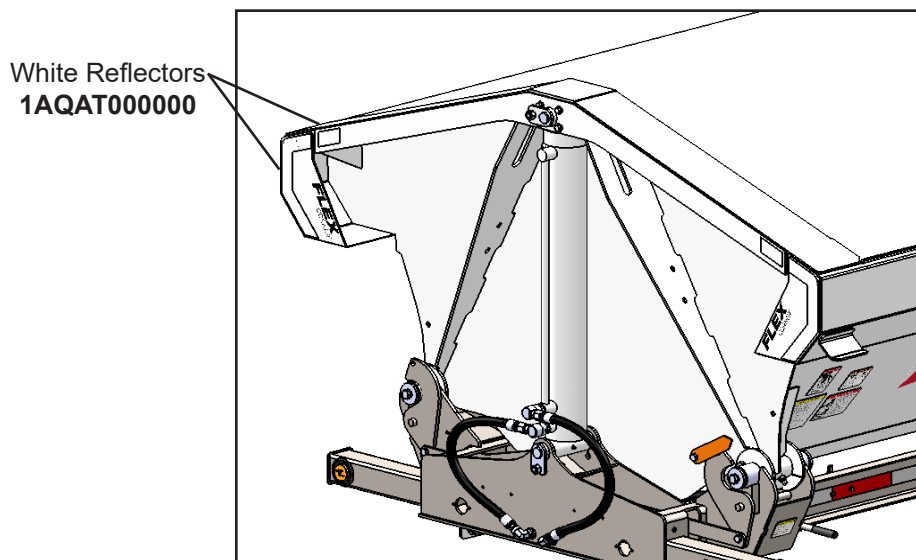

\* White Conspicuity Tape is located at both sides of both ends of tub.

## HOW TO APPLY SAFETY DECALS:

1. Be sure that the installation area is clean and dry.
2. Be sure temperature is above 50°F(10°C).
3. Decide on exact position before removing the backing paper.
4. Remove smallest portion of split backing paper.
5. Align decal over specified area and carefully press the small portion with the exposed sticky backing in place.
6. Slowly peel back remaining paper and carefully smooth remaining portions of decal into place.
7. Small air pockets can be pierced with a pin and smoothed out using a piece of decal backing paper.

## Setting the tub to dump curb-side or road-side.




### CAUTION:

Make sure the latches on each end of the tub are locked in the same direction. Failure to do so will result in damage to the side dump and/or tractor.

Latch Indicator Flag indicates direction of dump as shown below.


Latch Indicator Flag Open

Curb-Side Dump

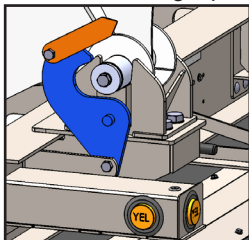

Latch Indicator Flag Closed

Road-Side Dump

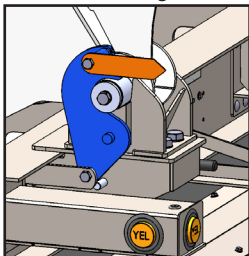

Before dumping the tub determine which direction the tub is going to dump when raised.

**All steps are performed on the driver's side only.**

### NOTE:

The following steps must be performed on both the front and the rear pivots.

#### Step one:

Pull latch out to release pivot lock handle.



#### Step two

#### Step two:


Pull bolt handle towards pivot pin to lock the tub in the left-hand (road-side) dump position.

Push bolt handle away from pivot pin to lock tub in the right-hand (curb-side) dump position.

Return latch to the locked position.

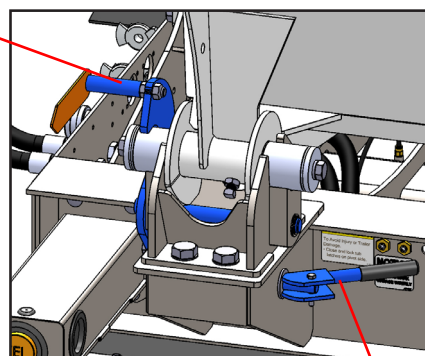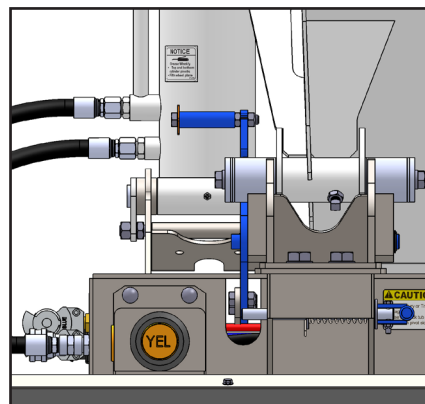


Step one

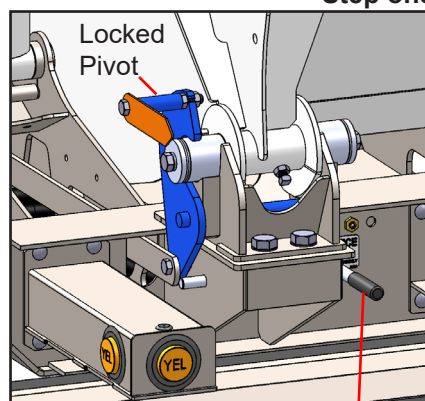

Locked Position

**Locked Position for right-hand dumping**

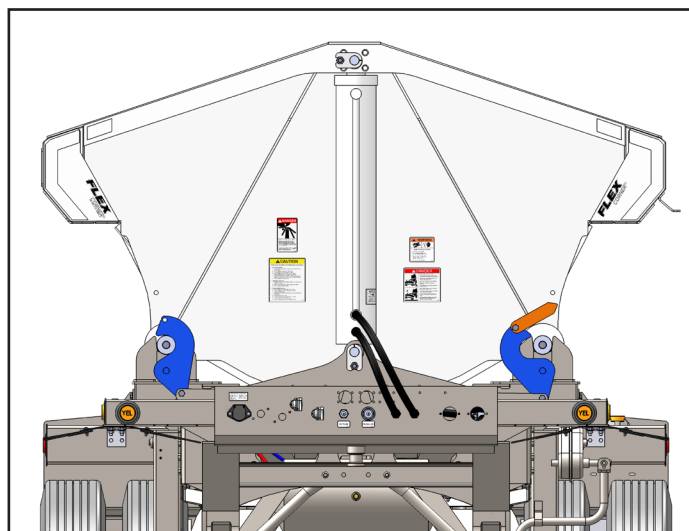

**First time hookup  
charging cylinders****DANGER:**

Clear area around  
side dump of  
bystanders before  
charging system.



Tilt the tub part-way several times to fill hydraulic cylinders before extending cylinders completely. Extend and retract cylinders completely. Check for proper operation.

**Filling and  
dumping side dump****DANGER:**

Clear area around  
side dump of by-  
standers before  
filling and dumping  
the side dump

**Filling:**


- Stand clear of side dump during filling.

**Dumping:**


- Stand clear of load during dumping operation.
- Operator must remain at controls during dumping.
- Tub should dump in approx. 20 seconds.
- Do not stop cylinder extension in middle of cycle, equipment may upset.
- Do not attempt to dump load on uneven or unstable ground.

## Lubrication Maintenance

- Grease upper and lower pivot point zerks of both lift cylinders weekly. (Front lift cylinder zerks shown)


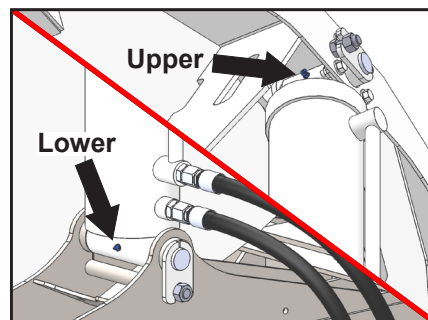


- If equipped with the remote grease zerk option, front lift cylinder zerks can be found near the curb-side front pivot. The rear lift cylinder zerks can be found near the road-side rear pivot. (Front lift cylinder zerks shown)

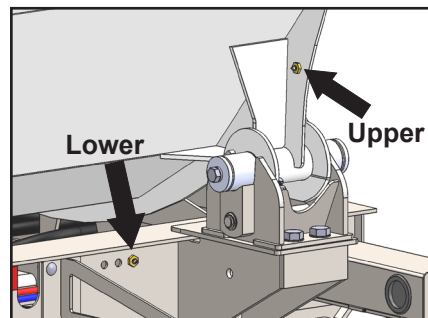


## Inspect lights daily (if equipped)


- Turn on truck lights and 4 way flashers.
- Walk around truck box to inspect that all lights are operating.

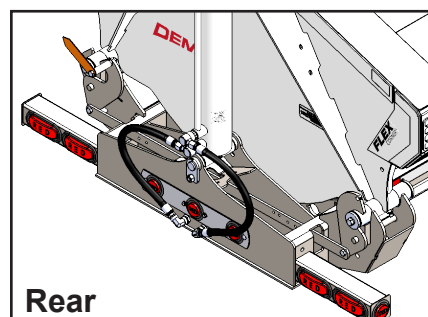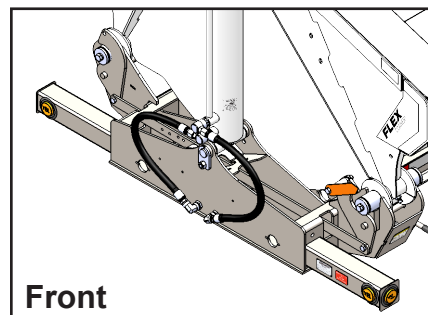

## Inspect hydraulic lines

- Inspect hydraulic lines and valves for leaks, rubbing, or crimped lines.

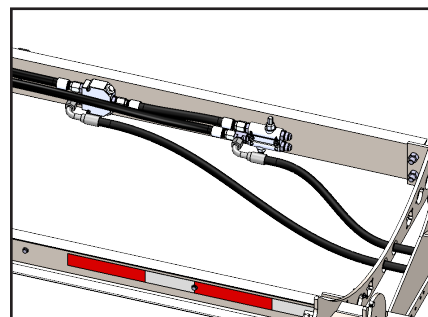

	<b>Inspection and Maintenance Checklists</b>
<b>Break-in procedure</b>	<p><b>After the first twenty-four (24) hours of use, perform the following maintenance procedures:</b></p> <ol style="list-style-type: none"> <li>1. If equipped, check all clearance lights, turn signal indicators, and stop lights.</li> <li>2. Inspect hydraulic lines and valves for leaks, chaffing or crimped lines.</li> </ol>
<b>Pre-Trip Checklist</b>	<p><b>Perform the Pre-Trip checklist whenever the tractor/truck box has been left unattended.</b></p> <ol style="list-style-type: none"> <li>1. If equipped, check that electrical cord is properly connected to the truck box plug, and walk around the truck box to check conditions of lights.</li> <li>2. Check tub dump latches to ensure they are both set for dumping to the same side.</li> </ol>

***Perform the following checks weekly, or if the truck box has not been used for more than a week:***

1. Perform the Pre-Trip and Daily Inspection Checklists.
2. Grease the top and bottom cylinder pins on the front and rear cylinders.

***Perform the following checks every thirty (30) days on the hydraulic system:***

1. Check hydraulic hoses for chaffing, crimping and fasten securely.
2. Check for hydraulic leaks.
3. Make sure valves are not leaking and are operating properly.
4. Hydraulic system is entirely dependent upon tractor for its oil supply, pressure and control. Therefore, the hydraulic system of the tractor must be in good condition and maintained routinely. Tractor should maintain a steady, clean, oil supply of a minimum 25 GPM at 2500 PSI for proper dumping performance of truck box.

**NOTE:** PERFORM THE ABOVE MAINTENANCE ON THE MINIMUM SCHEDULE, WHICHEVER COMES FIRST.


**CAUTION:** BE CERTAIN THE PRECEDING CHECKLIST INSPECTIONS HAVE BEEN PERFORMED.

**NOTE:** CLEAN HYDRAULIC SYSTEM AT LEAST ONCE PER YEAR.

The lights and wiring system on equipped Demco Side Dump truck boxes meet or exceed all federal and state requirements in effect at the time of manufacture. Wherever required by law, lights and reflectors are marked by the manufacturer to indicate the appropriate specifications with which each complies.

For optimum performance and long life from the truck box's lights and wiring, follow this inspection procedure:

- Clean all reflectors and lights. See that all lights burn properly. Replace all burned out lights and broken reflectors. Factory approved replacement parts should be used, and replacement bulbs of equal candle power should be used for safety.
- **WARNING!** Use only a 12 volt DC battery for checking lights. Never use battery chargers or transformers.
- Inspect all wiring to see that it is not frayed, and that it is properly supported and protected, with all connections tight. Be certain that the cable is supported so that it cannot be pinched. Keep the 7-way plug on the light cable and the 7-way connector on the side dump free of corrosion.
- Never replace fuses or breakers with metal foil or other devices.
- A decal is located near the 7-way connector. You may trace individual electrical circuits by the wire colors indicated. Refer to the schematic drawing and the decal for conductor number and wire colors.

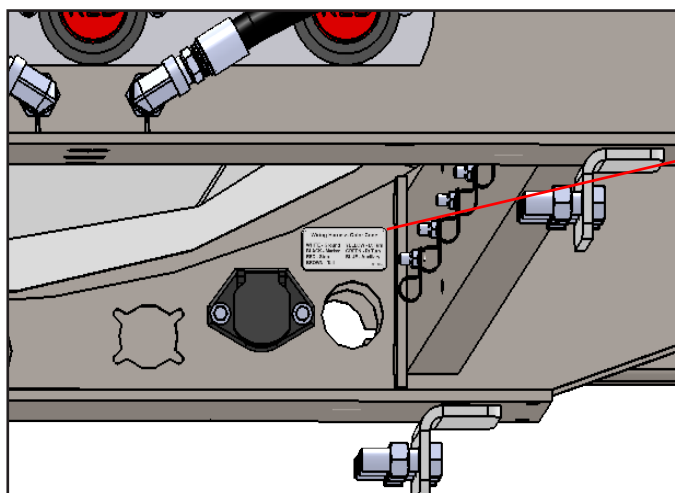

## Wiring Harness Color Code

<b>WHITE</b> - Ground	<b>YELLOW</b> - Lt Turn
<b>BLACK</b> - Marker	<b>GREEN</b> - Rt Turn
<b>RED</b> - Stop	<b>BLUE</b> - Auxiliary
<b>BROWN</b> - Tail	

AP 3674

**1AQAP3674**

**WIRING HARNESS COLOR CODE DECAL**




BOM ID	Qty	Item No	Description
<b>1</b>	3*	1AEAP3641	WIRING HARNESS EXTENSION CORD, 60"
<b>2</b>	1	1AEX0088300	HARNESS, LWR, ID 3 PLUG, 60"
<b>3</b>	1	1AEX0088911	HARNESS, REAR S/T/T, RH & LH
<b>4</b>	2	1AEX3270084	HARNESS, FRONT M/C, 84"
<b>5</b>	1†	1AEX8882036	HARNESS, MAIN JUMPER, 36"
<b>6</b>	1	1AEX8983927	HARNESS, FRONT MAIN W/ FEMALE SOCKET


\* 20' truck box requires (4)

\* 24' truck box requires (5)

† Not used on 14', 20', & 24' truck boxes.



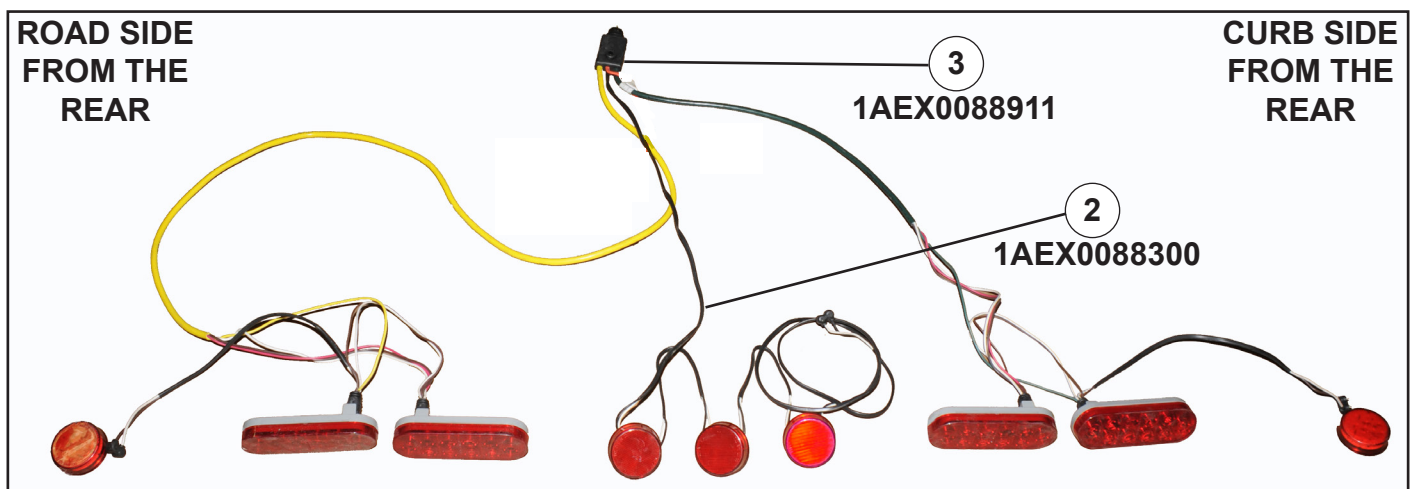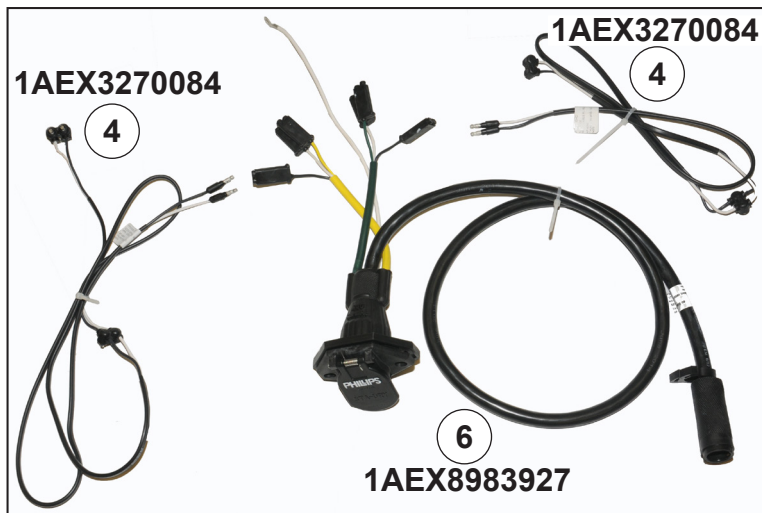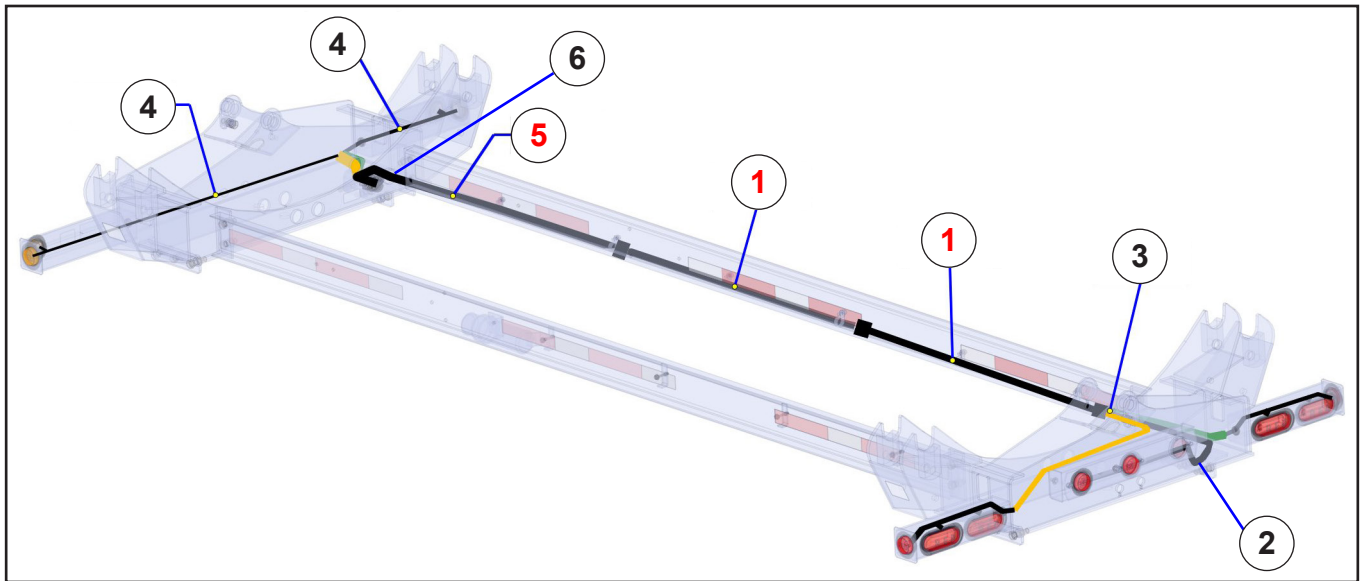

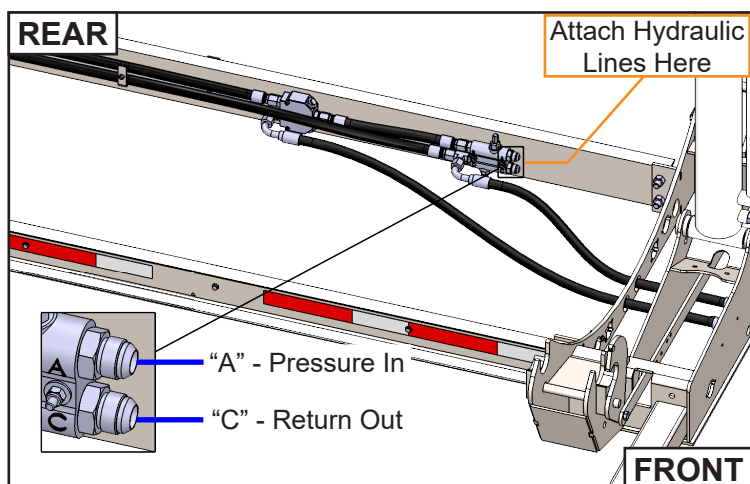

**WARNING** Hydraulic fluid escaping under pressure can have enough force to penetrate the skin. Hydraulic fluid may also infect a minor cut or opening in the skin. If injured by escaping fluid, see doctor at once. Serious infection or reaction can result if medical treatment is not given immediately. Make sure all connections are tight and that hoses and lines are in good condition before applying pressure to the system. Relieve all pressure before disconnecting the lines or performing other work on the hydraulic systems.


## Truck-Tractor Hydraulic Systems

Efficient, safe operation of side dump trailers require that the tractor hydraulic system provide a clean, high pressure, high volume oil supply. The hydraulic pump pressure should be set at 2500 PSI with a minimum output of 25 GPM supply and a minimum 15 gallon filtered and strained reservoir.

### NOTE:

Hydraulic Oil Filter should be Changed every 25,000 miles or yearly, which ever comes first and hydraulic system flushed every 50,000 miles with pressure and flow rates checked.


## Generic Tractor Hydraulic System

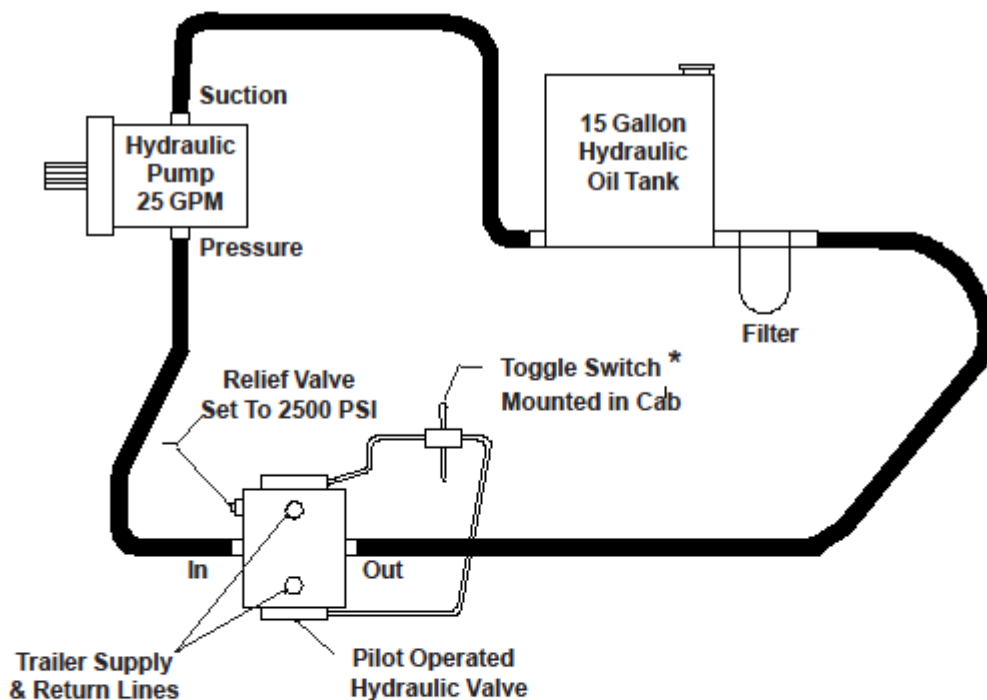




## Hydraulic Cylinders And Bottom Cylinder Pins (All Models)

**GENERIC  
DRAWING  
(FRONT)**


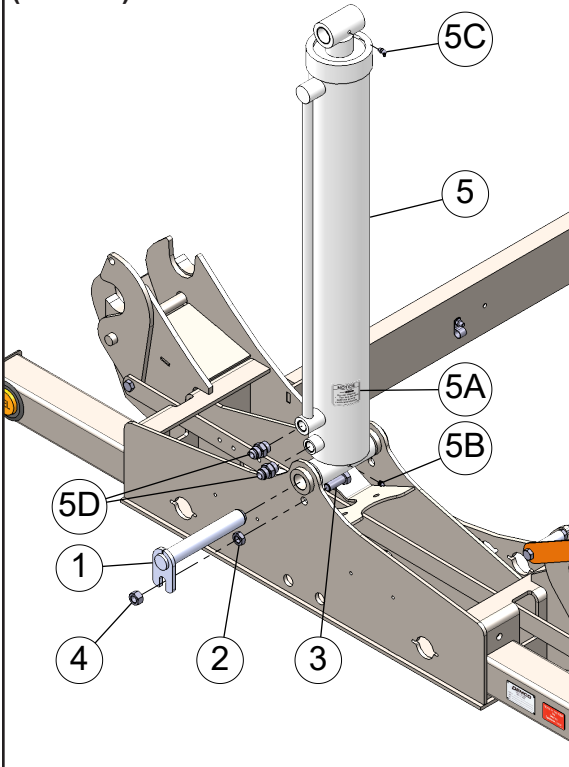


**GENERIC  
DRAWING  
(REAR)**

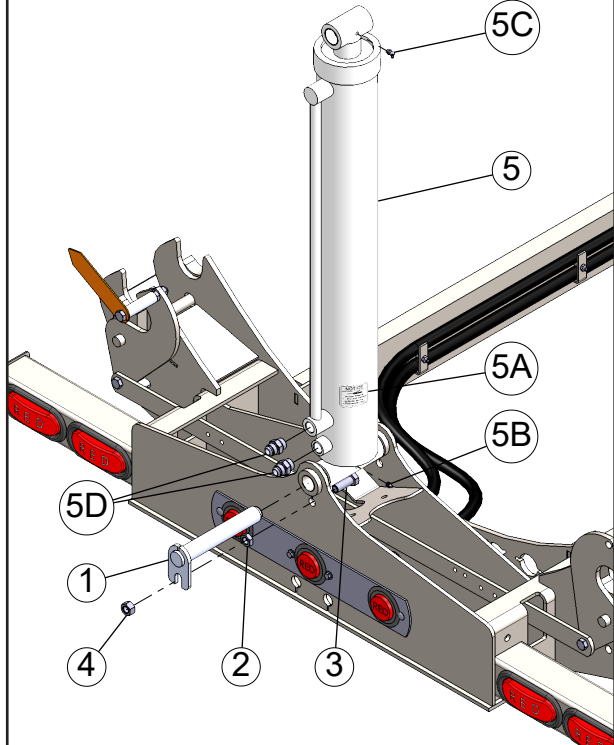



BOM ID	Qty	Item No	Description
1	2	5CAM9019	PIN, CYLINDER, 1-1/2" X 9-5/8"
2	2	1AFBP3107	NUT, HEX JAM, 3/4"-10, GR 2, PLATED
3	2	1AFBP3139	HEX CAP SCREW, 3/4"-10 X 2", GR 5, PLATED
4	2	1AFC05L0005	3/4 CENTERLOCK NUT
5	2	1AYDP6347	CYLINDER, HYDRAULIC, 5" X 36", WITH DROP TUBE
5	2	1AYDP6349	CYLINDER, HYDRAULIC, 6" X 36", WITH DROP TUBE
5A	2	1AQAP2986	DECAL, GREASE TRAILER WEEKLY, 2-3/4"W X 3"T
5B	2	1AKZAAA0000	GREASE ZERK, 1/8" NPT
5C	2	1AFBP3654	GREASE ZERK, 1/8" MP X 45 DEGREE ELBOW
5D	4	1AKDP4368	ADAPTER, 12MJIC-12MSAE, STRAIGHT, 6400-12
*	1	1AKDP6603	SEAL KIT 5" WETHERELL CYLINDER
*	1	1AKDP6569	SEAL KIT 6" WETHERELL CYLINDER

\*Not shown in part diagrams.

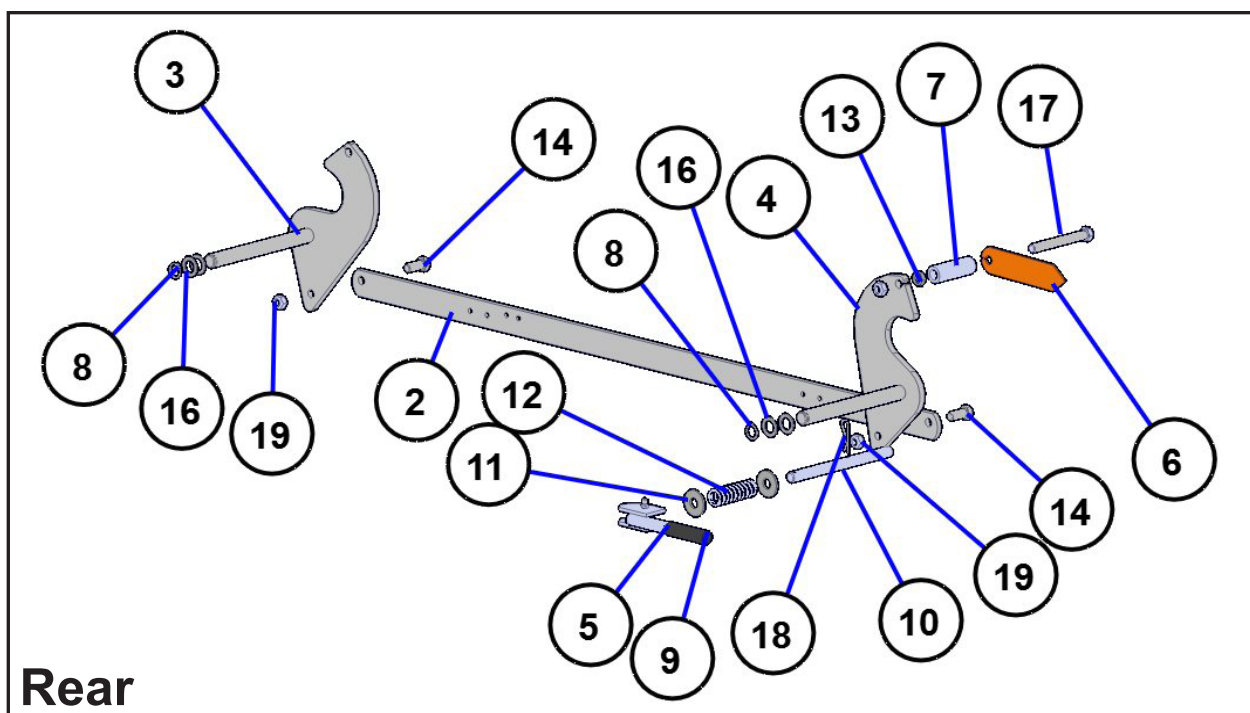
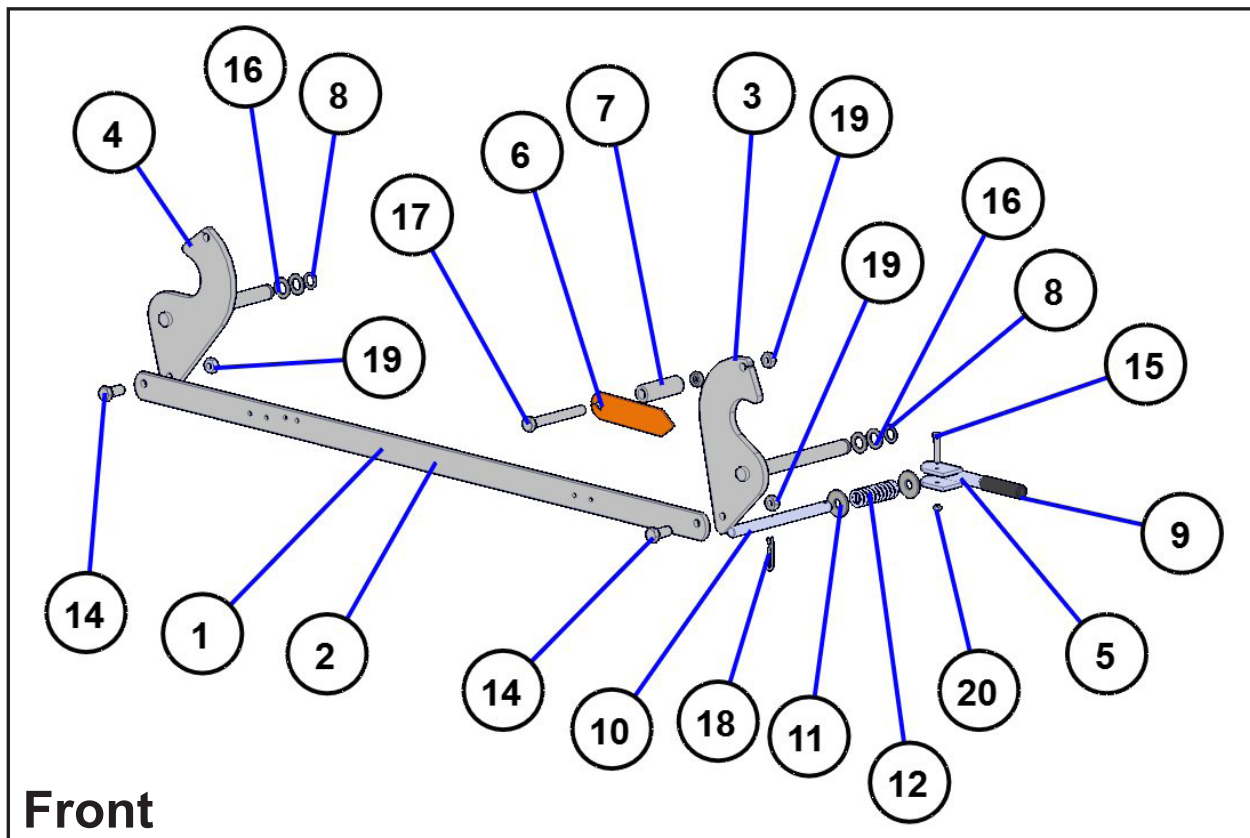


## Pivot Latch Parts (All Models)

BOM ID	Qty	Item No	Description
1	1	4CPKG00113	PACKAGE, PIVOT LATCH, 2001 SIDE DUMP
2	2	3CAM9078	LATCH CONNECTOR
3	2	3CAM9123	TUB PIVOT LOCK, LEFT HAND FRONT/RIGHT HAND REAR
4	2	3CAM9124	TUB PIVOT LOCK, RIGHT HAND FRONT/ LEFT HAND REAR
5	2	3CAM9125	LATCH LOCK HANDLE
6	2	3CAM9155	LATCH INDICATOR FLAG
7	2	3CAM9156	SPACER
8	4	3CAP2407	SNAP RING, 1" EXTERNAL, HEAVY DUTY
9	2	3CAP4208	GRIP, .843" ID X 4" OAL
10	2	1AFBM3727	PIN, LATCH LOCK, 3/4" X 10-3/8" OAL
11	4	1AFBP3033	WASHER, FLAT, 3/4", PLATED, STANDARD, TYPE A, SERIES W
12	2	1AFBP3066	COMPRESSION SPRING RIGID HITCH
13	2	1AFBP3080	NUT, HEX JAM, 5/8"-11, GRADE 2
14	4	1AFBP3097	HEX CAP SCREW, 5/8"-11 X 1-1/2", GRADE 5, PLATED
15	2	1AFBP3110	HEX CAP SCREW, 5/16"-18 X 2", GRADE 5, PLATED
16	8	1AFBP3215	MACHINERY BUSHING, 1-1/2" OD X 1" ID, 14 GAUGE, PLATED
17	2	1AFBP3298	HEX CAP SCREW, 5/8"-11 X 5-1/2", GRADE 5, PLATED
18	2	1AFBP3504	PIN, HAIRCLIP, 1/8"
19	6	1AFBP3615	NUT, HEX LOCK, 5/8"-11, GRADE 8, PLATED
20	2	1AFBP3644	NUT, HEX LOCK, 5/16"-18, TOP LOCK

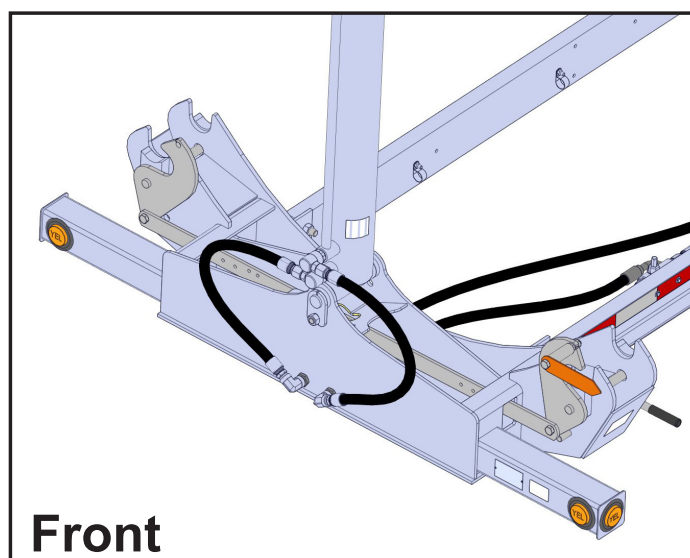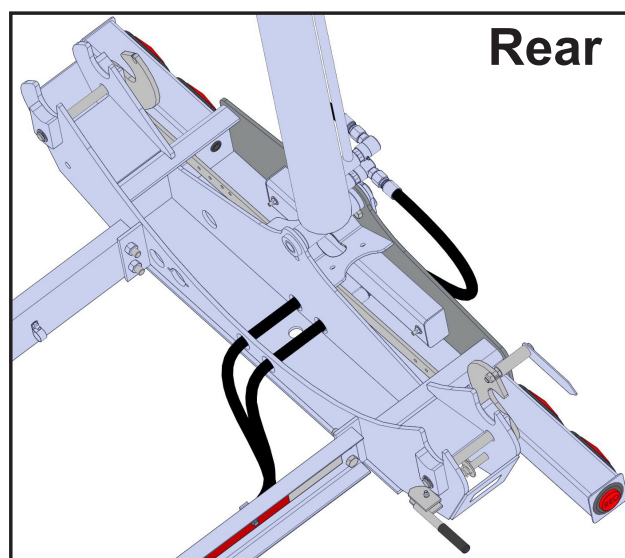

# Tub Parts (All Models)

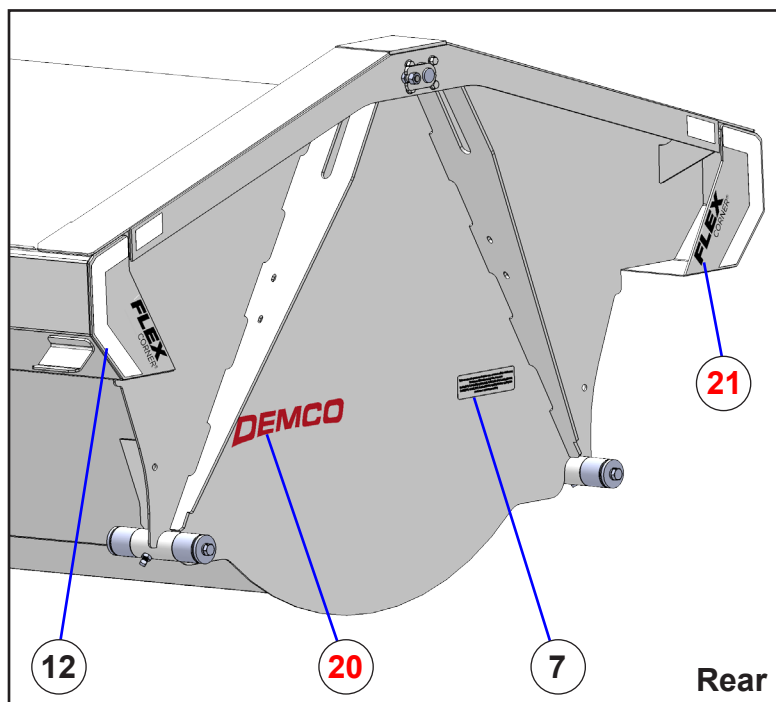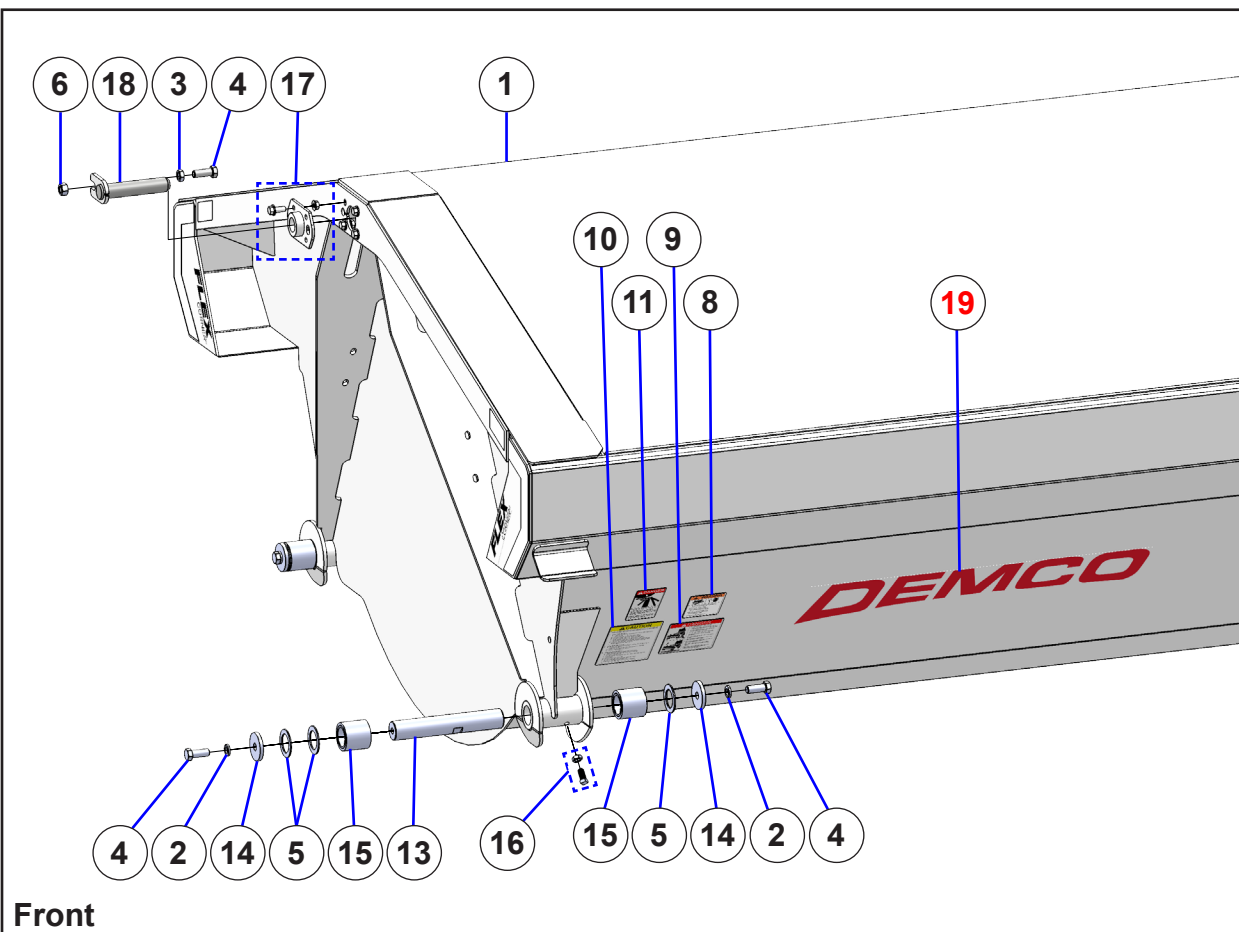

1AQAP4361

11



1AQAP3669

9



1AQAP3670

10



1AQAP2914


8

This product is protected under one or more of the following Demco Patents:  
5,480,214; 5,845,971; 6,257,670 B1; 6,402,453 B1;  
6,425,726; 6,428,264; 6,488,340 B2; 6,520,589 B2; 6,554,384  
and other patents pending

1AQAP2491

7


## Tub Parts (All Models)

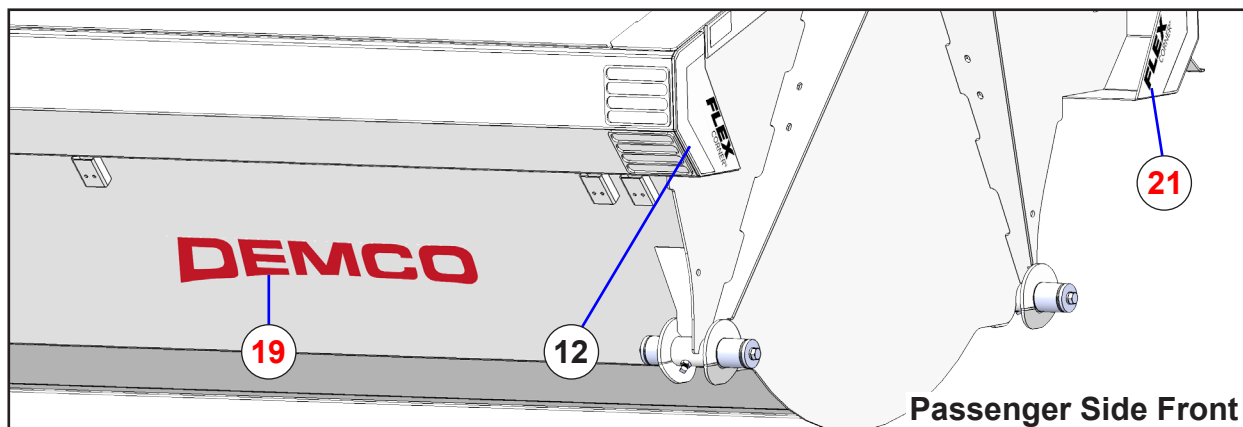

BOM ID	Qty	Item No	Description
<b>1</b>	1	†	XX' TUB
2	8	1AF015L0000	WASHER, LOCK, 3/4", PLTD
3	2	1AFBP3107	NUT, HEX JAM, 3/4"-10, GR 2, PLTD
4	10	1AFBP3139	HEX CAP SCREW, 3/4"-10 X 2", GR 5, PLTD
5	12	1AFBP3599	MACHINERY BUSHING, 3" OD X 2" ID X 10 GA, PLTD
6	2	1AFC05L0005	NUT, HEX LOCK, 3/4"-10, GR 2, PLTD
7	1	1AQAP2491	DECAL, PATENT PROTECTION, 8-1/2"W X 2-1/2"L
8	1	1AQAP2914	DECAL, WARNING (HIGH-PRESSURE FLUID) 4"W X 4"L
9	1	1AQAP3669	DECAL, DANGER (LOAD DUMPING SAFETY) 8"W X 5-1/2"L
10	1	1AQAP3670	DECAL, CAUTION (SIDE DUMP CHECKLIST & INST) 6"W X 7"L
11	1	1AQAP4361	DECAL, DANGER (FRAME AREA MAINT) 3"W X 6-1/4"L
12	4	1AQAT000000	WHITE CONSPICUITY TAPE, 2" WIDE
13	4	1AUAM9136	PIVOT PIN, 2" X 12-1/8" OAL, PLTD
14	8	3CAM9026	WASHER, PIVOT PIN
15	8	4CAAM7990	ASSEMBLY, TUB PIVOT BEARING
16	4	4CAAM7991	ASSEMBLY, SET SCREW & JAM NUT, 5/8"-11 X 1-1/4", PLTD
16A	4	1AFBP3080	NUT, HEX JAM, 5/8"-11, GR 2, PLTD
16B	4	1AFBP3673	SET SCREW, SQ HEAD, 5/8"-11 X 1-1/4", PLTD
17	2	5C000015	ADJUSTABLE TOP CYLINDER MOUNT ASSEMBLY
17A	4	1AFC08H0000	NUT, HEX SERRATED FLANGE, 1/2"-13, PLTD
17B	4	1AFC37HAAD5	HEX CAP SCREW, 1/2"-13 X 1-1/4", SERRATED FLANGE HD, PLTD
18	2	5CAM9057	PIN, CYLINDER, 1-1/2" X 7-1/8", ANTI-ROTATION, PLTD
<b>19</b>	2	DE21000	DECAL, DEMCO LOGO, LARGE WHITE,
<b>19</b>	2	DE21001	DECAL, DEMCO LOGO, LARGE RED,
<b>19‡</b>	2	DE21026	DECAL, DEMCO LOGO, X-LARGE RED,
<b>19‡</b>	2	DE21027	DECAL, DEMCO LOGO, X-LARGE WHITE,
<b>20</b>	1	DE21004	DECAL, DEMCO LOGO, SMALL WHITE,
<b>20</b>	1	DE21005	DECAL, DEMCO LOGO, SMALL RED,
<b>21</b>	4	DE21024	DECAL, FLEX CORNER, BLACK,
<b>21</b>	4	DE21025	DECAL, FLEX CORNER, WHITE,



† See page 30 for model specific tub item numbers.

‡ XL Decals are only used on 20' & 24' tubs.

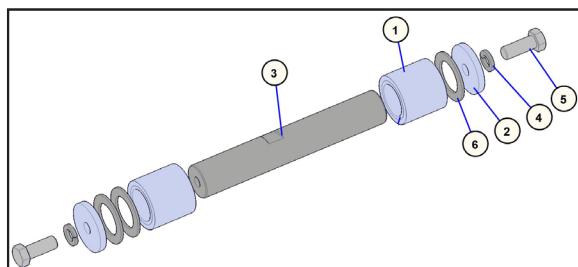

4CFK2005 PIVOT PIN & BUSHING KIT			
BOM ID	Qty	Item No	Description
1	2	4CAAM7990	ASSEMBLY, TUB PIVOT BEARING
2	2	3CAM9026	WASHER, PIVOT PIN
3	1	1AUAM9136	PIVOT PIN, 2" X 12-1/8" OAL, PLTD
4	2	1AF015L0000	WASHER, LOCK, 3/4", PLTD
5	2	1AFBP3139	HEX CAP SCREW, 3/4"-10 X 2", GR 5, PLTD
6	3	1AFBP3599	MACHINERY BUSHING, 3" OD X 2" ID X 10 GA, PLTD



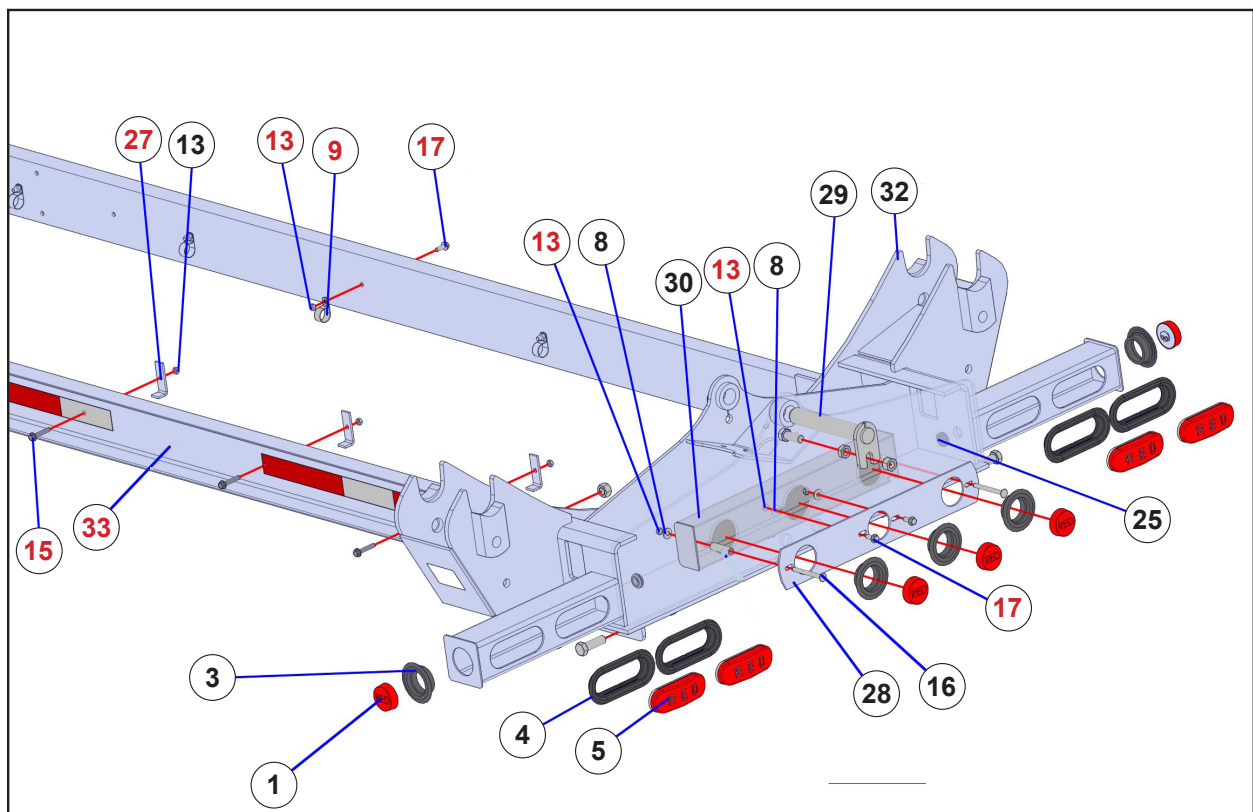
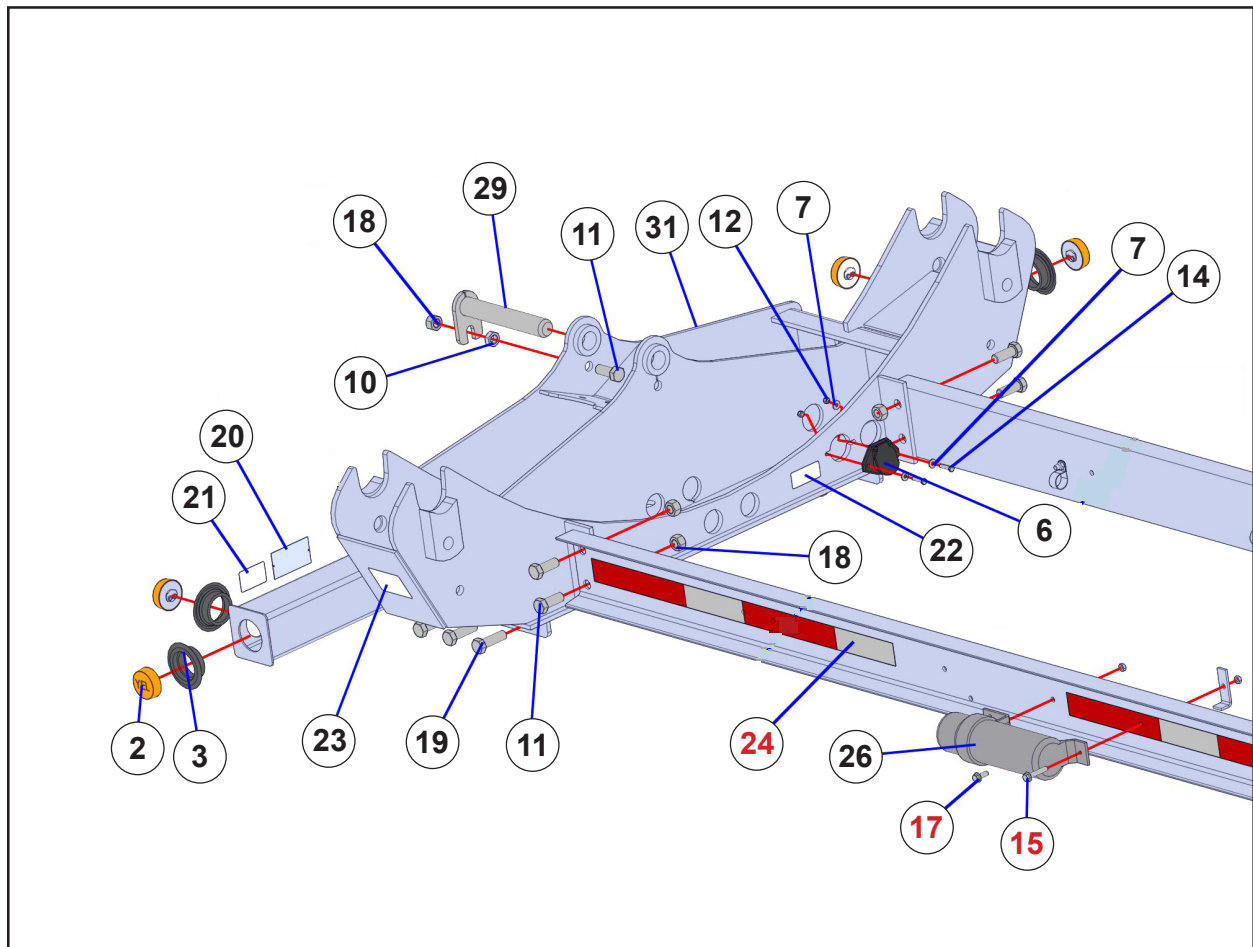


<b>DEMCO</b>	<b>Frame Parts (All Models)</b>
--------------	---------------------------------

BOM ID	Qty	Item No	Description
1	5	1AEAP4310	LAMP, LED, CLEAR/MARKER, RED, 2-1/2"
2	4	1AEAP4311	LAMP, LED, CLEAR/MARKER, YELLOW, 2-1/2"
3	9	1AEG0010700	2-1/2" ROUND GROMMET ONLY
4	4	1AEL0607003	MIDSHIP LIGHT GROMMET
5	4	1AEL6050000	LAMP, LED, OVAL, S/T/T, RED, 6"
6	1	1AEX8983927	HARNESS, FRONT MAIN W/ FEMALE SOCKET
7	4	1AF009D0000	1/4 FLAT WASHER ZINC
8	4	1AF009F0000	3/8 FLAT WASHER ZINC
9	†	1AFAP3809	1-1/4" HOSE SUPPORT CLAMP, 3/8" BOLT
10	2	1AFBP3107	NUT, HEX JAM, 3/4"-10, GR 2, PLATED
11	10	1AFBP3139	HEX CAP SCREW, 3/4"-10 X 2", GR 5, PLATED
12	2	1AFBP3587	NUT, HEX, 1/4"-20, NYLOCK, PLATED
13	†	1AFBP3612	NUT, HEX LOCK, 3/8"-16, TOP LOCK, GRC, PLTD
14	2	1AFBP3648	HEX CAP SCREW, 1/4"-20 X 1-1/4" GR 8, PLTD
15	†	1AFBP3685	BOLT, FLNG HEAD, 3/8"-16 X 2", GR 8, PLTD
16	2	1AFBP3687	BOLT, CARRIAGE, 3/8"-16 X 4", GR 5, PLTD
17	†	1AFBP3692	BOLT, FLNG HEAD, 3/8"-16 X 1", GR 8, PLTD
18	22	1AFC05L0005	3/4 CENTERLOCK NUT
19	12	1AFC12LBAH8	3/4 X 2-1/2 HEX BOLT GR 8, PLATED
20	1	1AQAL100000	DEEP ETCHED NAME PLATES
21	1	1AQAP2985	DECAL, MADE IN USA BY DEMCO
22	1	1AQAP3674	DECAL, WIRING HARNESS COLOR CODE
23	2	1AQAP4097	DECAL, CAUTION, LOCK TUB LATCHES
24	†	1AQAS000000	3M RED/WHT CONSPICUITY TAPE
25	4	1ARAP4045	GROMMET, 3/4" ID G3137-016
26	1	1AU00000011	MANIFEST HOLDERS MWW
27	†	3CAM8053	HOSE RETAINER, SINGLE
28	1	3CAM9058	ID LIGHT FACE PLATE
29	2	5CAM9019	PIN, CYLINDER, 1-1/2" X 9-5/8"
30	1	5CAM9184	LIGHT COVER, ID, TRUCK BOX
31	1	5CAM9185	TRUCK BOX PIVOT FRAME, FRONT
32	1	5CAM9186	TRUCK BOX PIVOT FRAME, REAR
33	2	‡	FRAME CHANNEL, XX' TRUCK BOX

† Part quantities vary by Truck Box length.

‡ Item numbers vary by Truck Box length, see page 30.

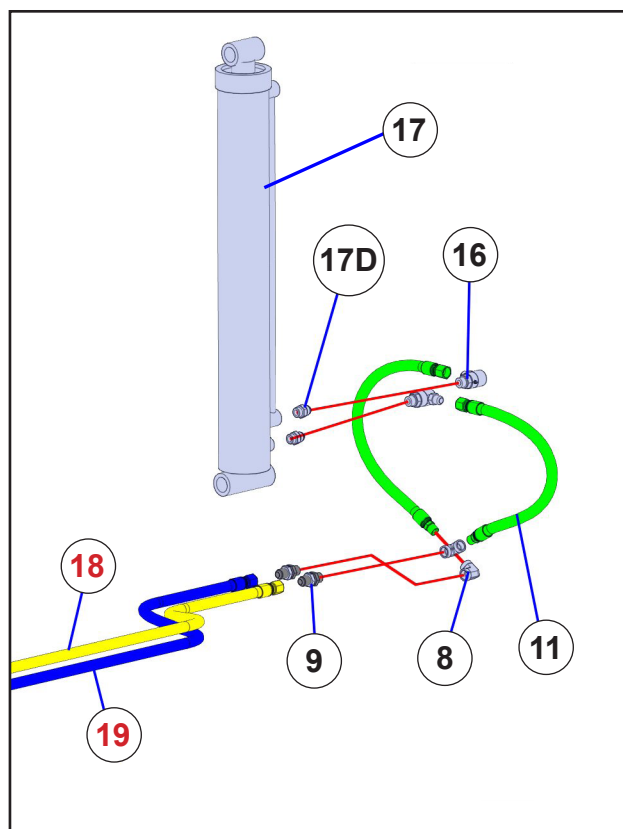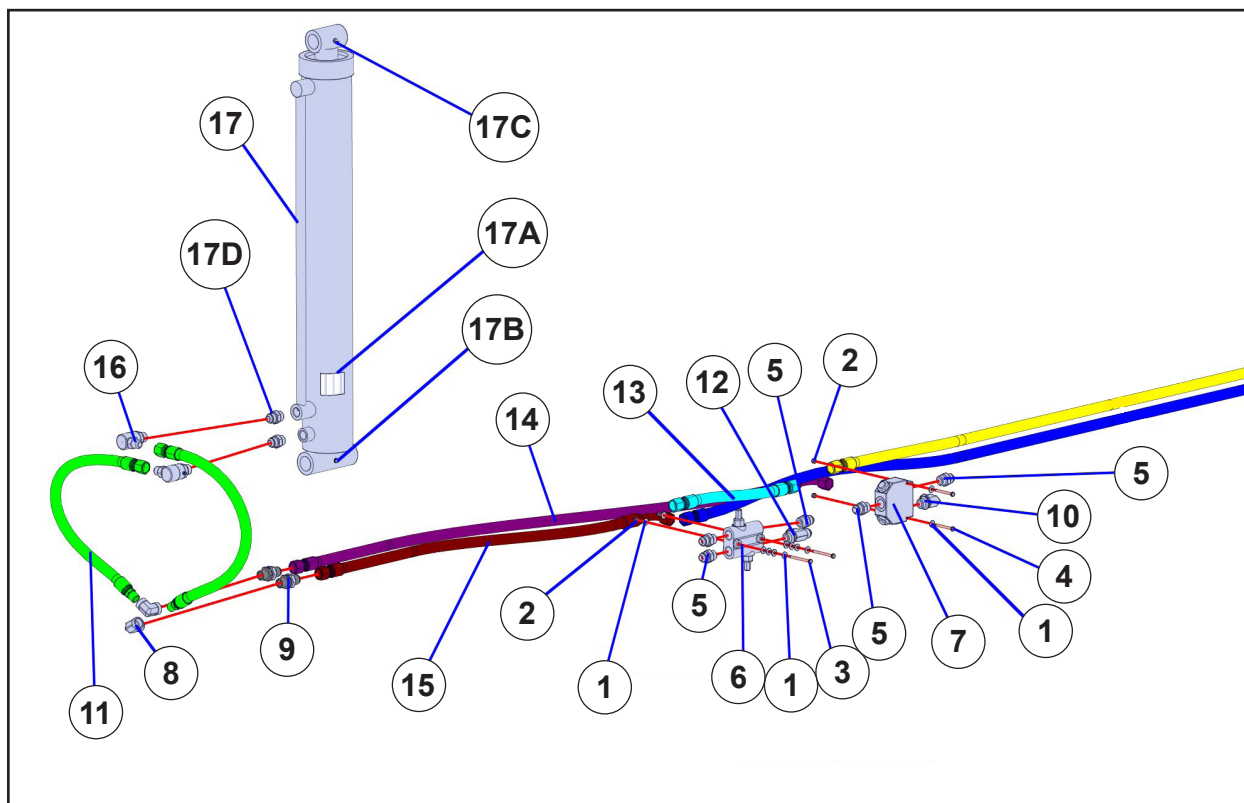





<b>DEMCO</b>	<b>Hydraulic Parts (All Models)</b>
--------------	-------------------------------------


BOM ID	Qty	Item No	Description
1	12	1AF009D0000	1/4 FLAT WASHER ZINC
2	4	1AFBP3587	NUT, HEX, 1/4"-20, NYLOCK, PLATED
3	2	1AFBP3588	HEX CAP SCREW, 1/4-20 X 3, GR 8, PLTD
4	2	1AFBP3589	HEX CAP SCREW, 1/4-20 x 2-1/2 GR 8, PLTD
5	5	1AKDP4368	ADAPTER, 12MJIC-12MSAE, STRAIGHT, 6400-12
6	1	1AKDP6302	VALVE, DOUBLE RELIEF, PRINCE, H-L
7	1	1AKDP6303	VALVE, PROPORTIONAL DIVIDER, PRINCE
8	4	1AKDP6306	ELBOW, 90*, 12FP-12FP, 5504-12-12
9	4	1AKDP6495	BULKHEAD ADAPTER W/ NUT, 12MJ-12MP, 2706-LN-12-12
10	1	1AKDP6538	ADAPTER, 12MJ-12MSAE 90*, 6801-12
11	4	1AKDP6540	HOSE, HYD, 3/4" X 32", 12FJX-12MP
12	1	1AKDP6557	TEE, 12MJ-12MSAE-12MJ, 6804-12
13	1	1AKDP6558	HOSE, HYD, 3/4" X 18-1/2", 12FJX-12FJX
14	1	1AKDP6574	HOSE, HYD, 3/4" X 70", 12FJX-12FJX90*
15	1	1AKDP6575	HOSE, HYD, 3/4" X 45", 12FJX-12FJX90*
16	4	1AKDP6609	SWIVEL, LIVE, 12MSAE-12MJ 90*, LS6801-12-12
17	2	1AYDP6347	CYLINDER, HYDRAULIC, 5" X 36", WITH DROP TUBE
17	2	1AYDP6349	CYLINDER, HYDRAULIC, 6" X 36", WITH DROP TUBE
17A	1	1AQAP2986	DECAL, GREASE TRAILER WEEKLY, 2-3/4"W X 3"T
17B	2	1AKZAAA0000	GREASE ZERK, 1/8" NPT
17C	2	1AFBP3654	GREASE ZERK, 1/8" MP X 45 DEGREE ELBOW
17D	4	1AKDP4368	ADAPTER, 12MJIC-12MSAE, STRAIGHT, 6400-12
18	1	§	HOSE, HYD, 3/4" X XXX", 12FJX-12FJX
19	1	§	HOSE, HYD, 3/4" X XXX", 12FJX-12FJX

§ Item numbers vary by Truck Box length, see page 30.





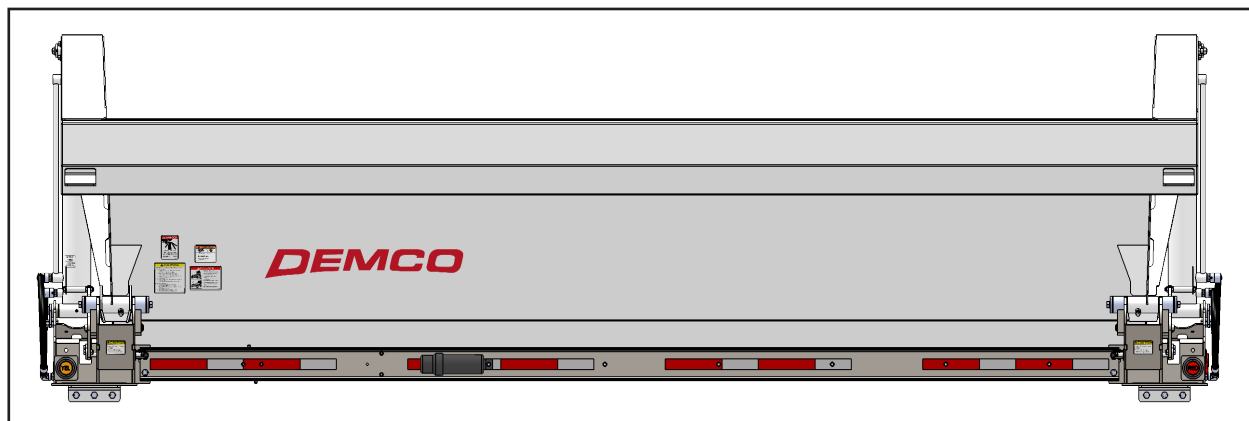


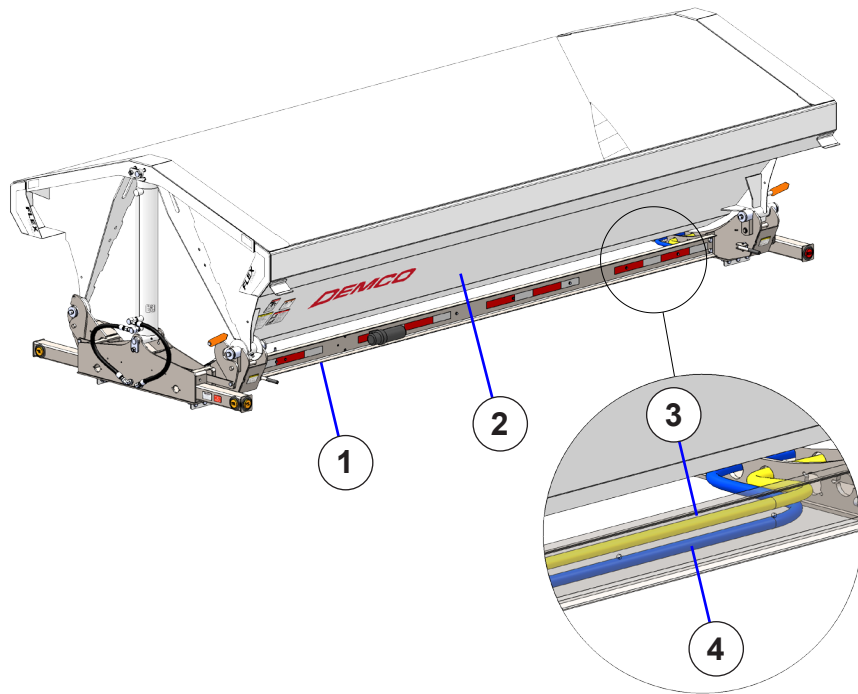


Truck Box Model	BOM ID	Qty	Item No	Description
9CCRTB14	1	2	3CAM9438	FRAME CHANNEL, 14' TRUCK BOX
	2	1	5CAM9437	14' TUB
	3	1	1AKDP6630	HOSE, HYD, 3/4" X 133", 12FJX-12FJX
	4	1	1AKDP6631	HOSE, HYD, 3/4" X 161", 12FJX-12FJX
9CCRTB15	1	2	3CAM9436	FRAME CHANNEL, 15' TRUCK BOX
	2	1	5CAM9439	15' TUB
	3	1	1AKDP6544	HOSE, HYD, 3/4" X 144", 12FJX-12FJX
	4	1	1AKDP6529	HOSE, HYD, 3/4" X 173", 12FJX-12FJX
9CCRTB16	1	2	3CAM9187	FRAME CHANNEL, 16' TRUCK BOX
	2	1	5CAM9188	16' TUB
	3	1	1AKDP6557	HOSE, HYD, 3/4" X 157", 12FJX-12FJX
	4	1	1AKDP6573	HOSE, HYD, 3/4" X 185", 12FJX-12FJX
9CCRTB17	1	2	3CAM9434	FRAME CHANNEL, 17' TRUCK BOX
	2	1	5CAM9433	17' TUB
	3	1	1AKDP6624	HOSE, HYD, 3/4" X 169", 12FJX-12FJX
	4	1	1AKDP6625	HOSE, HYD, 3/4" X 197", 12FJX-12FJX
9CCRTB20	1	2	3CAM9439	FRAME CHANNEL, 20' TRUCK BOX
	2	1	5C000102	MY21 20' TUB
	3	1	1AKDP6632	HOSE, HYD, 3/4" X 205", 12FJX-12FJX
	4	1	1AKDP6593	HOSE, HYD, 3/4" X 257", 12FJX-12FJX
9CCRTB24	1	2	3C000201	FRAME CHANNEL, 24' TRUCK BOX
	2	1	5C000099	MY21 24' TUB
	3	1	1AKDP5338	HOSE, HYD, 3/4" X 234", 12FJX-12FJX
	4	1	1AKDP6585	HOSE, HYD, 3/4" X 280", 12FJX-12FJX

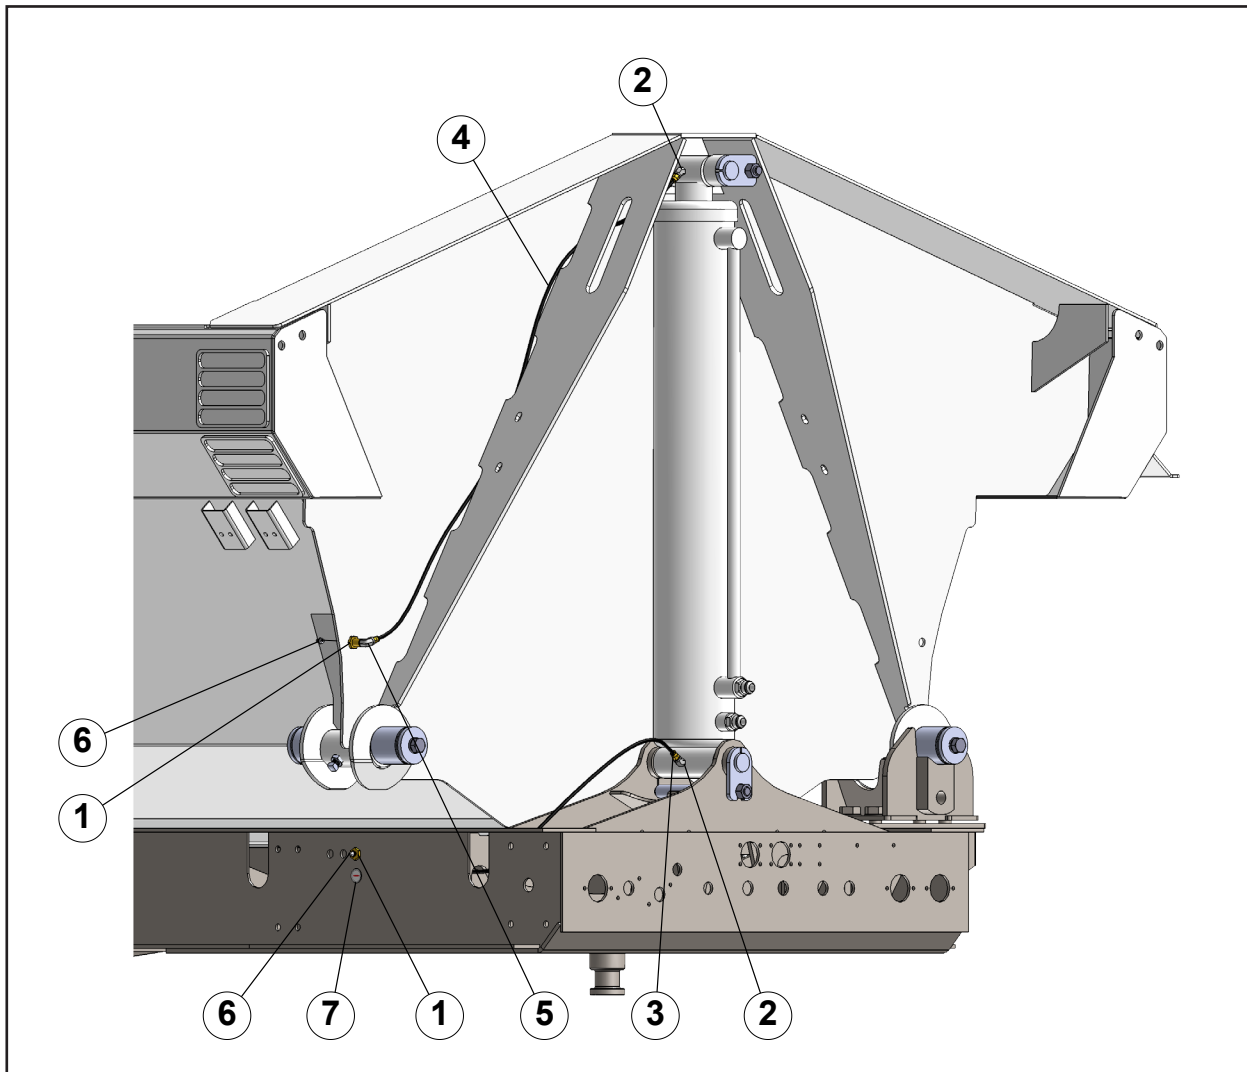


BOM ID	Qty	Item No	Description
1	4	1AFBP3423	BULKHEAD FITTING, 1/8" FNPT - 1/8" FNPT
2	4	1AKEABAAAA0	45 DEG ELBOW ADAPTER, 1/8" FNPT X 1/8" MNPT
3	2	1AKHAAAACA0	1/8" X 50" GREASE HOSE, 1/8" MNPT RIGID X 1/8" MNPT SWIV
4	2	1AKHAAAACA1	1/8" X 60" GREASE HOSE, 1/8" MNPT RIGID X 1/8" MNPT SWIV
5	2	1AKLABAAAA0	90 DEG ELBOW ADAPTER, 1/8" FNPT - 1/8" MNPT
6	4	1AKZAAA0000	1/8"-27 GREASE ZERK, STRAIGHT, PLTD
7	4	1AQBC015065	DECAL, GREASE GUN, RED ON WHITE

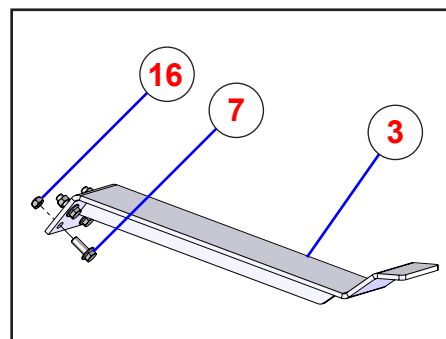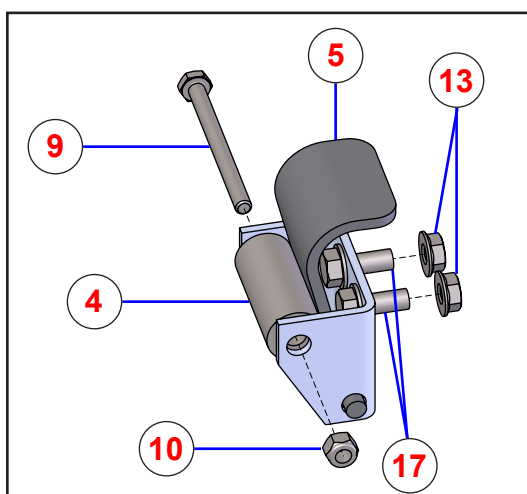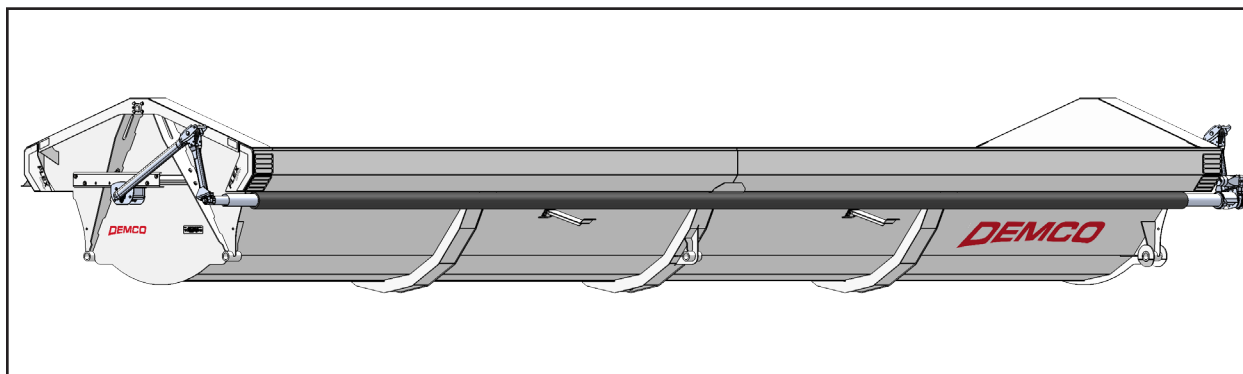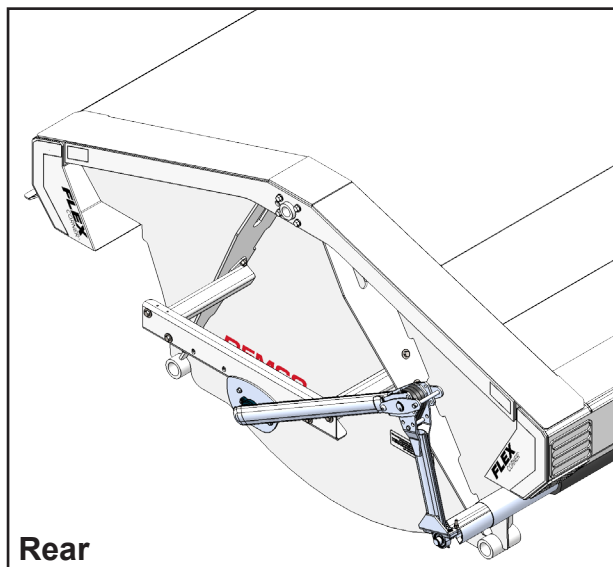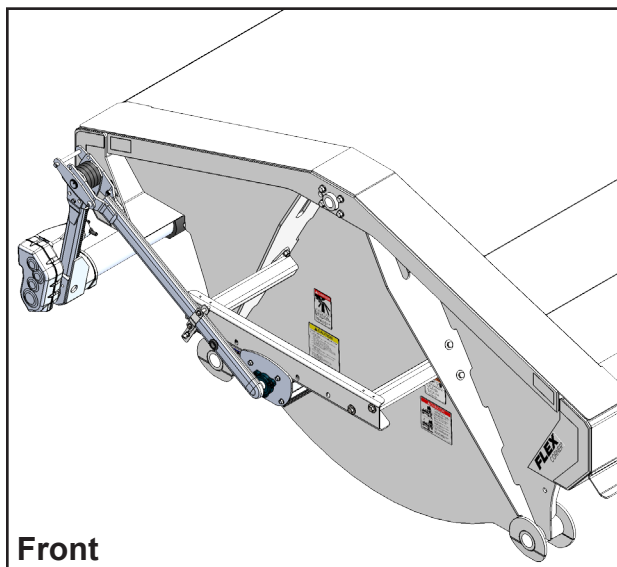

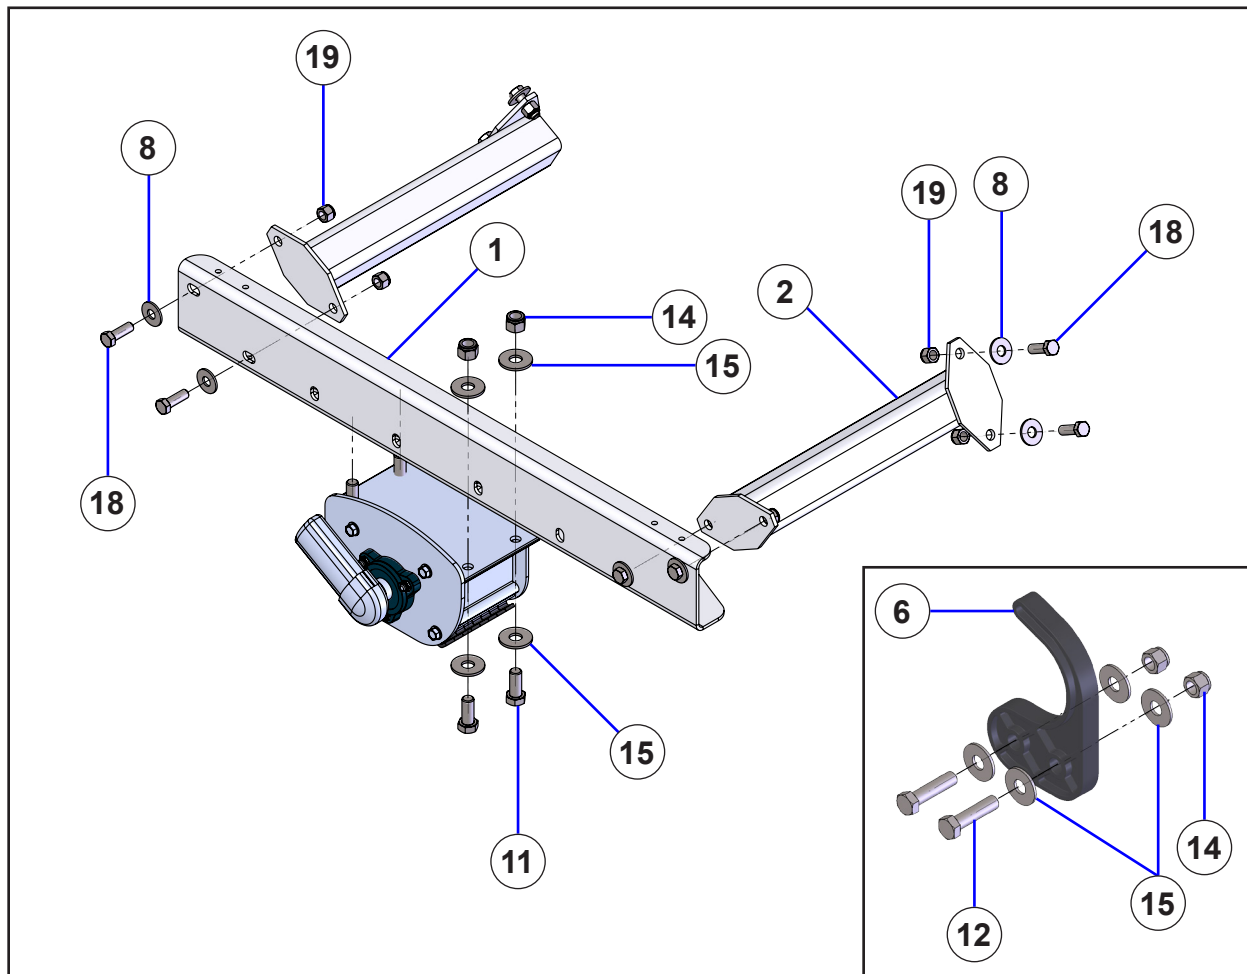


BOM ID	Qty	Item No	Description
1	2	3CAM9385	TARP MOUNTING CHANNEL
2	4	5CAM9038	TARP CHANNEL MOUNT
3	*	5C000008	BRACKET, TARP SUPPORT
4	*	1AUAM9073	SPACER, TARP MOUNTING, 7/8" OD X 11/32" ID X 2" OAL
5	*	1AZAP4108	CLAMP, STEEL CLAMP FOR TARP SECURING ROD PLTD, EA (36830)
6	2	1AZAP4152	SPOOL, TARP SPOOL HOOK FOR SIDE DUMP SYSTEM, EA (36840)
7	*	1AFC12FAA05	HEX CAP SCREW, 3/8"-16 X 1", GR 5, PLTD
8	16	1AF009H0000	WASHER, FLAT, 1/2", PLTD
9	*	1AFBP3588	HEX CAP SCREW, 1/4"-20 X 3", GR 8, PLTD
10	*	1AFC18D0000	NUT, HEX LOCK, 1/4"-20, NYLOCK, PLTD
11	4	1AFC12JAAH5	HEX CAP SCREW, 5/8"-11 X 1-1/2", GR 5, PLTD
12	4	1AFC12JBAH5	HEX CAP SCREW, 5/8"-11 X 2-1/2", GR 5, PLTD
13	*	1AFC08E0000	NUT, HEX SERRATED FLANGE, 5/16"-18, PLTD
14	12	1AFC18J0000	NUT, HEX LOCK, 5/8"-11, NYLOCK, PLTD
15	16	1AF009J0000	WASHER, FLAT, 5/8", PLTD
16	*	1AFBP3612	NUT, HEX LOCK, 3/8"-16, TOP LOCK, PLTD
17	*	1AFC37E00L0	HEX CAP SCREW, 5/16"-18 X 3/4", SERRATED FLANGE HD, PLTD
18	16	1AFC12HAAH8	HEX CAP SCREW, 1/2"-13 X 1-1/2" GR 8, PLTD
19	16	1AFC18H0000	NUT, HEX LOCK, 1/2"-13, NYLOCK, PLTD

\* Quantities vary by tub length.

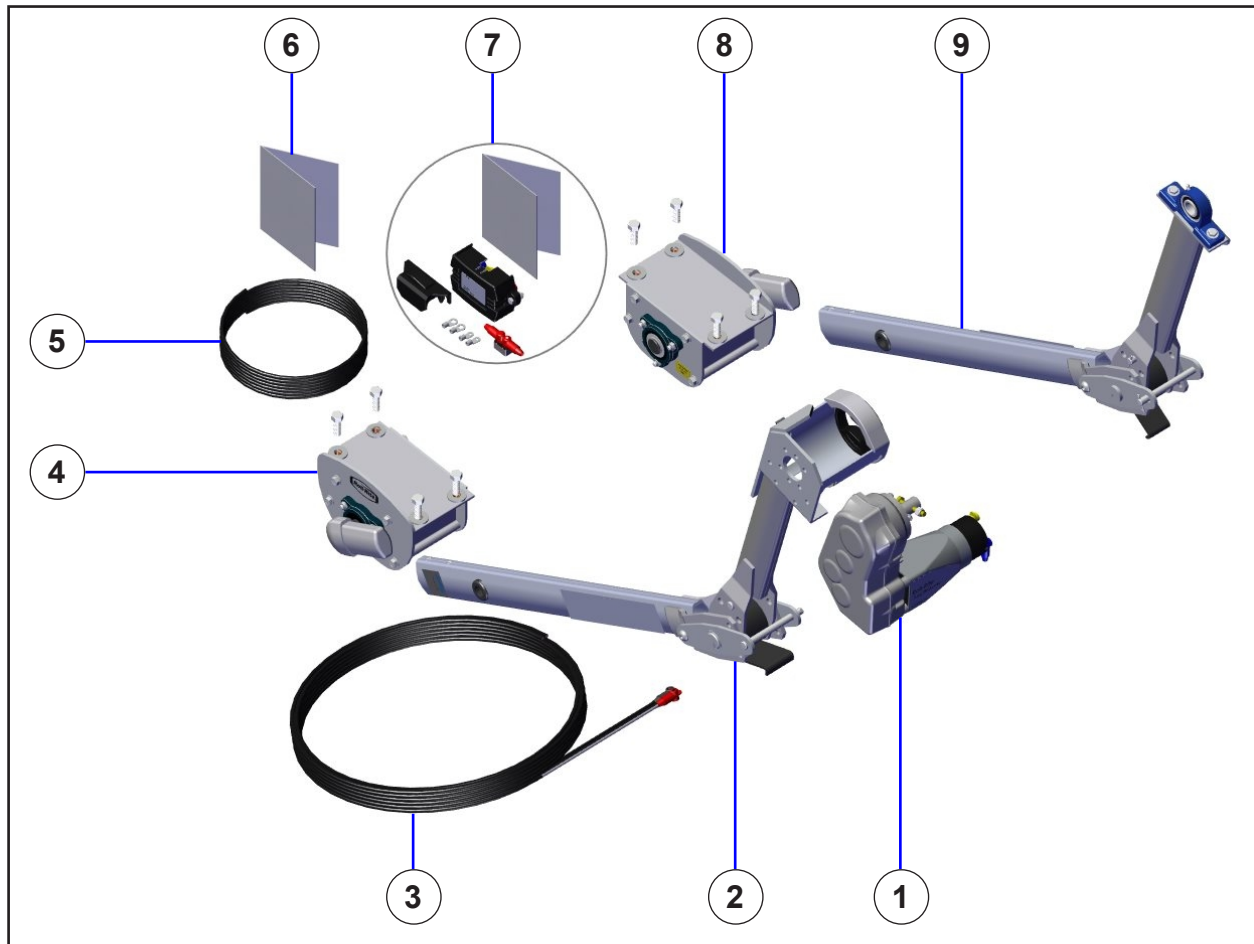

## 1AZAP3576 (Rite-Lock Power Arm Kit, Pass. Side Stowing for Side Dump 12V TS)


BOM ID	Qty	Item No	Description
1	1	1AZAP4293	MOTOR, ROLL RITE TARP (10200)
2	1	-	PIVOT, ASSY FRONT 4-SPRING KNUCKLE ARM, MOTOR END (46802)
3	1	1AEW000WF62	PARALLEL BAT CABLE, 6GA, BLK W/RED (11330)
4	1	-	PIVOT, UB ASSEMBLED STS 8-SPR FRONT (102354)
5	1	1AZAP4295	CABLE, 16GA / 3COND, BLU/YEL/RED, 15' (11411)
6	1	-	INSTRUCTIONS, UNIVERSAL STS DUMP SYSTEM (102317)
7	1	1AZ00103460	ELECTRIC KIT, TSCM W/ SS GEN1+ RELAY & ROCKER SW, 6GA (103460)
8	1	-	PIVOT, UB ASSEMBLED STS 8-SPR REAR (102353)
9	1	-	PIVOT, ASSY REAR KNUCKLE ARM, NON-MOTOR END (46803)

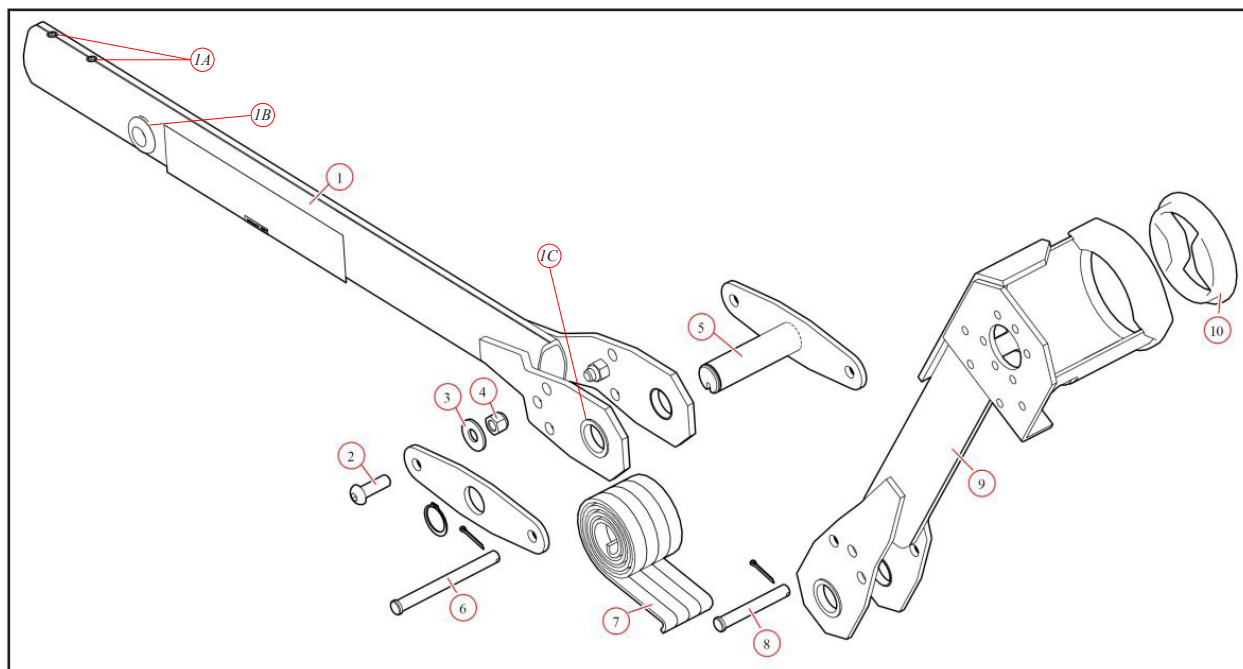

**Pivot, Assy Front 4-Spring Knuckle Arm, Motor End (46802)**

BOM ID	Qty	Item No	Description
* 1	1	-	PIVOT TUBE, BASE W/SIDE PLATES, 4 SPRING STS KNUCKLES (102199)
1A	1	-	SCREW, 1/2" X 5/8" SET (18291)
1B	1	-	GROMMET, RUBBER 7/8 ID X 1/8 GROOVE FOR TOP MT PIVOTS (16419)
1C	1	-	BUSHING, 1-1/4 POLY T-BUSHING FOR PIVOT PIN (47040)
2	2	-	BOLT, 1/2" X 1-1/2" BUTTON HEAD PLTD (18295)
3	2	1AF009H0000	WASHER, 1/2" FLAT PLTD (18412)
4	2	1AFC18H0000	NUT, 1/2" NYLOCK NUT PLTD (18631)
5	1	-	BRACKET, 4-SP KNUCKLE W/STOP PLATE FOR STS MOTOR END (47970)
6	1	-	PIN, 1/2" X 5-1/4" CLEVIS (18540)
7	4	1AZAP4589	SPRING, SPIRAL TORSION 1-1/4" (47230)
8	1	1AFAP4507	PIN, 1/2" X 3-1/2" CLEVIS (18520)
9	1	-	PIVOT TUBE, FRONT UPPER FOR 4-SP KNUCK W/BUSH 13.06" (102197)
10	1	1AZAP4539	BUSHING, AXLE STABILIZER FOR 4" AXLE (37580)

\* Note: All High Capacity Kits require longer lower tarp arms see page 39 for High Capacity specific tarp parts.

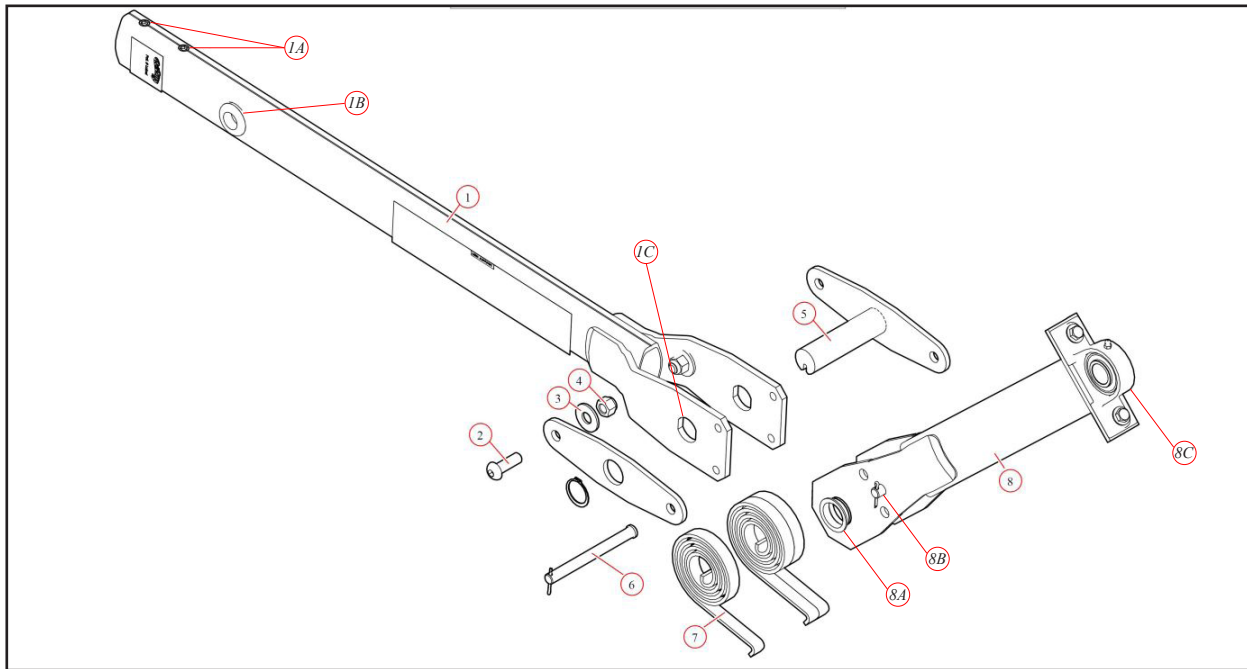

## Pivot, Assy Rear Knuckle Arm, Non-Motor End (46803)


BOM ID	Qty	Item No	Description
* 1	1	-	PIVOT TUBE, BASE W/SIDE PLATES, 4-SPRING STS KNUCKLES (102199)
1A	1	-	SCREW, 1/2" X 5/8" SET (18291)
1B	1	-	GROMMET, RUBBER 7/8 ID X 1/8 GROOVE FOR TOP MT PIVOTS (16419)
1C	1	-	BUSHING, 1-1/4 POLY T-BUSHING FOR PIVOT PIN (47040)
2	2	-	BOLT, 1/2" X 1-1/2" BUTTON HEAD PLTD (18295)
3	2	1AF009H0000	WASHER, 1/2" FLAT PLTD (18412)
4	2	1AFC18H0000	NUT, 1/2" NYLOCK NUT PLTD (18631)
5	1	-	BRACKET, 4-SP KNUCKLE W/STOP PLATE FOR STS MOTOR END (47970)
6	1	-	PIN, 1/2" X 5-1/4" CLEVIS (18540)
7	4	1AZAP4589	SPRING, SPIRAL TORSION 1-1/4" (47230)
8	1	-	PIVOT TUBE, REAR UPPER FOR 4-SP KNUCKLE W/BEARING (47890)
8A	1	-	BUSHING, 1-1/4 POLY T-BUSHING FOR PIVOT PIN (47040)
8B	1	1AFAP4507	PIN, 1/2" X 3-1/2" CLEVIS (18520)
8C	1	1AZ31050000	BEARING, PILLOW BLOCK (31055)

\* Note: All High Capacity Kits require longer lower tarp arms see page 39 for High Capacity specific tarp parts.




## Pivot, UB Assembled STS 8-Spr Front (102354)

BOM ID	Qty	Item No	Description
1	1	-	PIVOT PIN, FOR 8-SPR ROLLER BEARING PIV, DRIVER SIDE (47400)
2	2	-	BEARING, CARRIER UNDERBODY FLANGED (47800)
2A	3	1AFC18F0000	NUT, 3/8" NYLOCK NUT PLTD (18628)
2B	3	1AFBP3633	BOLT, 3/8-16 X 1-1/8", BUTTON HEAD, PLTD (18242)
3	8	1AZAP4589	SPRING, SPIRAL TORSION 1-1/4" (47230)
4	8	1AFC37FAAH5	BOLT, 3/8 X 1-1/2", THREAD-CUTTING SCREW, HEX WASHER HD (18120)
5	1	-	PLATE, AL FRONT FOR EXT BOLT FLANGE MOUNT UB BOX (102349)
6	1	-	BRACKET, EXT BODY WITH HOLES FOR 8-SPR UB BOX (102269)
7	1	-	PLATE, AL BACK FOR EXT BOLT FLANGE MOUNT UB BOX (102259)

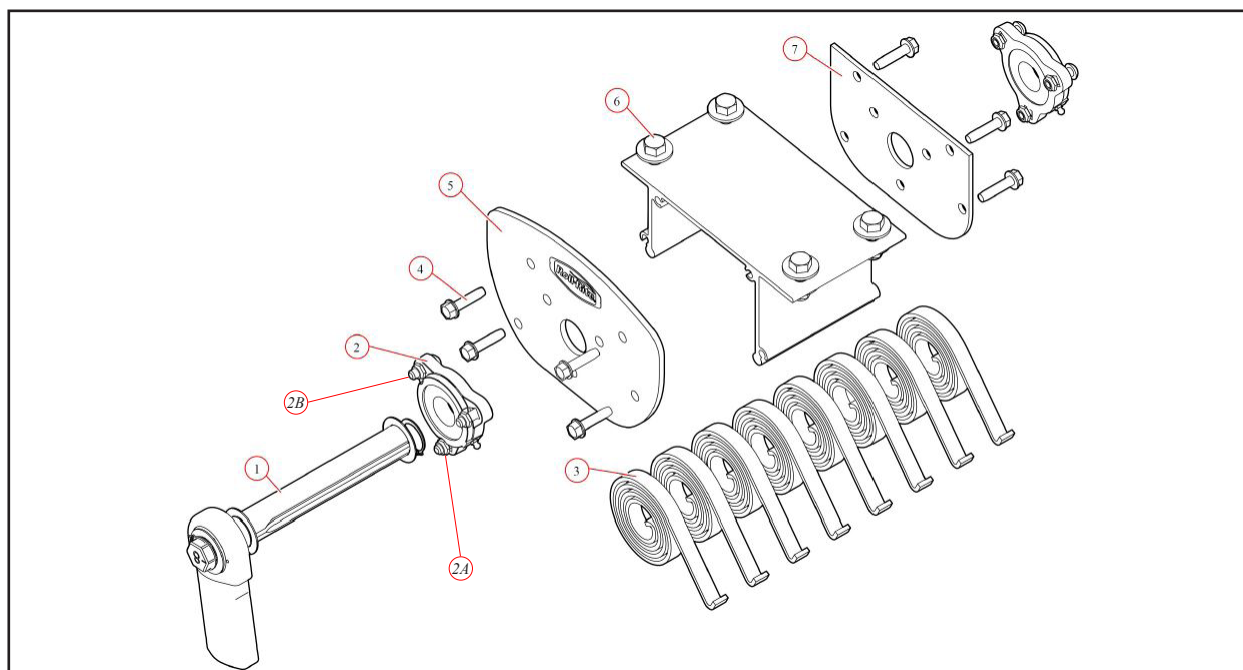

## Pivot, UB Assembled STS 8-Spr Rear (102353)


BOM ID	Qty	Item No	Description
1	1	-	PIVOT PIN, FOR 8-SPR ROLLER BEARING PIV, PASS SIDE (47410)
2	2	-	BEARING, CARRIER UNDERBODY FLANGED (47800)
2A	3	1AFC18F0000	NUT, 3/8" NYLOCK NUT PLTD (18628)
2B	3	1AFBP3633	BOLT, 3/8-16 X 1-1/8", BUTTON HEAD, PLTD (18242)
3	8	1AZAP4589	SPRING, SPIRAL TORSION 1-1/4" (47230)
4	8	1AFC37FAAH5	BOLT, 3/8 X 1-1/2", THREAD-CUTTING SCREW, HEX WASHER HD (18120)
5	1	-	PLATE, AL FRONT FOR EXT BOLT FLANGE MOUNT UB BOX (102349)
6	1	-	BRACKET, EXT BODY WITH HOLES FOR 8-SPR UB BOX (102269)
7	1	-	PLATE, AL BACK FOR EXT BOLT FLANGE MOUNT UB BOX (102259)

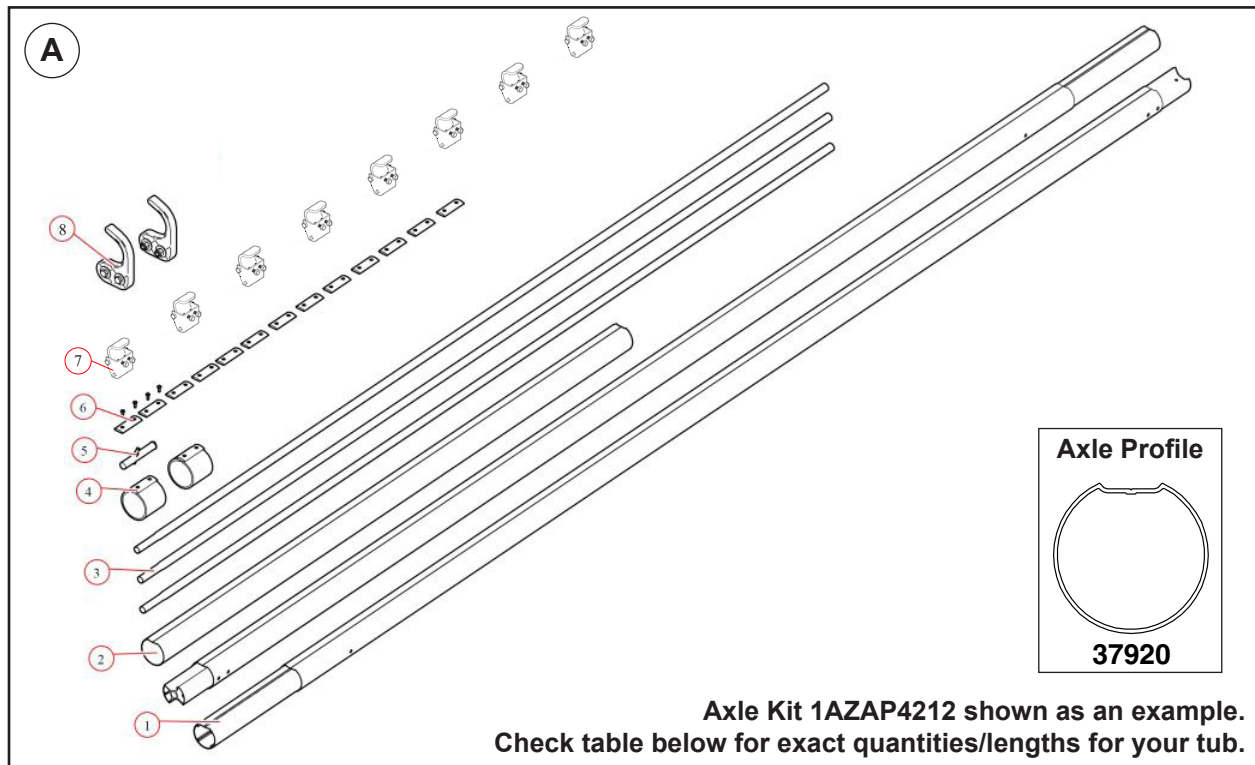

	(A)	(1) + (2)	(3)	(6)	(7)
Tub Length	Axle Kit Item No	Axle Tube Length	Fixed Tarp Rod Length	Axle Tarp Clips (C/C)	Tarp Rod Clamps (1AZAP4108)
14'	1AZAP4279	17' - 2 1/2"	13' - 8 1/4"	6 (32")	6
15'	1AZAP4279	18' - 2 1/2"	14' - 8 1/4"	6 (34")	6
16'	1AZAP4279	19' - 3"	15' - 8 3/4"	6 (36")	6
17'	1AZAP4459	20' - 2 1/2"	16' - 8 1/4"	6 (38")	6
20'	1AZAP4459	23' - 3"	19' - 9 1/4"	7 (38")	6
24'	1AZAP4410	27' - 3"	23' - 9"	10 (32")	6
30'	1AZAP4212	33' - 6"	30' - 0 3/8"	11 (36")	8
34'	1AZAP4212	37' - 6"	34' - 0 1/2"	11 (40")	8
37'	1AZAP4563	40' - 3"	36' - 9 1/4"	11 (44")	8

BOM ID	Qty	Item No	Description
1		-	AXLE, 4" UNIVERSAL FRONT/REAR SECTION FOR SIDE DUMP (37920)
2		-	EXTRUSION, 4" AXLE, 98" (102367)
3		-	STEEL TUBING, 1.125D X 16GA X 12' RND GALV W/SWEDGE (101815)
4	2	-	AXLE SLEEVE, SIDE DUMP BELT STYLE, AXLE SLEEVE KIT (102379)
5	1	-	HARDWARE, STUB SHAFT KIT FOR SIDE DUMP SYSTEM (102365)
6		-	CLIP, TARP CLIP W/HARDWARE FOR STS AXLE (37830)
7		1AZAP4108	CLAMP, STEEL CLAMP FOR TARP SECURING ROD PLTD, EA (36830)
8	2	1AZAP4095	SPOOL, TARP SPOOL HOOK FOR SIDE DUMP SYSTEM, EA (36840)

Tub Length	Tarp Kit	Mesh Tarp	Tarp Size
14'	1AZAP3576	1AZAP4598	13'-6" x 162"
15'	1AZAP3576	1AZAP4599	14'-6" x 162"
16'	1AZAP3576	1AZAP4600	15'-6" x 162"
17'	1AZAP3576	1AZAP4601	16'-6" x 162"
20'	1AZAP3576	1AZAP4602	19'-7" x 162"
24'	1AZAP3576	1AZJ23800RE	23'-8" x 162"
30'	1AZAP3576	1AZAP4603	29'-10" x 162"
34'	1AZAP3576	1AZAP4604	33'-10" x 162"
37'	1AZAP3576	1AZAP4605	36'-7" x 162"

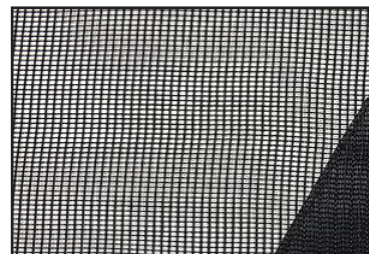




Mesh Tarp

## Roll-Rite Electric Tarp Parts for High-Capacity Kits Only

Tub Length	Axle Kit	Tarp Kit	Mesh Tarp	Tarp Size	Axle Tube Length	Fixed Tarp Rod Length
20' H.C.	1AZAP4459	1AZAP4402	-	20' x 147"	23' - 3"	20' - 1 3/4"
24' H.C.	1AZAP4410	1AZAP4402	1AZAP4409	24' x 147"	27' - 3"	24' - 1 1/2"
34' H.C.	1AZAP4212	1AZAP4402	1AZAP3950	34' x 147"	37' - 6"	34' - 4 3/4"
37' H.C.	1AZAP4563	1AZAP4402	1AZAP4562	37' x 147"	40' - 3"	37' - 1 3/4"

**Note:** All High Capacity Kits, including XL Kits, use the same quantity and spacing of Axle Tarp Clips and Tarp Rod Clamps as standard tubs. Longer lower tarp arms are required for all High Capacity Kits - use Item Number 1AZ102266RE (ROLL-RITE HIGH CAPACITY TARP ARM, EA, #102266).

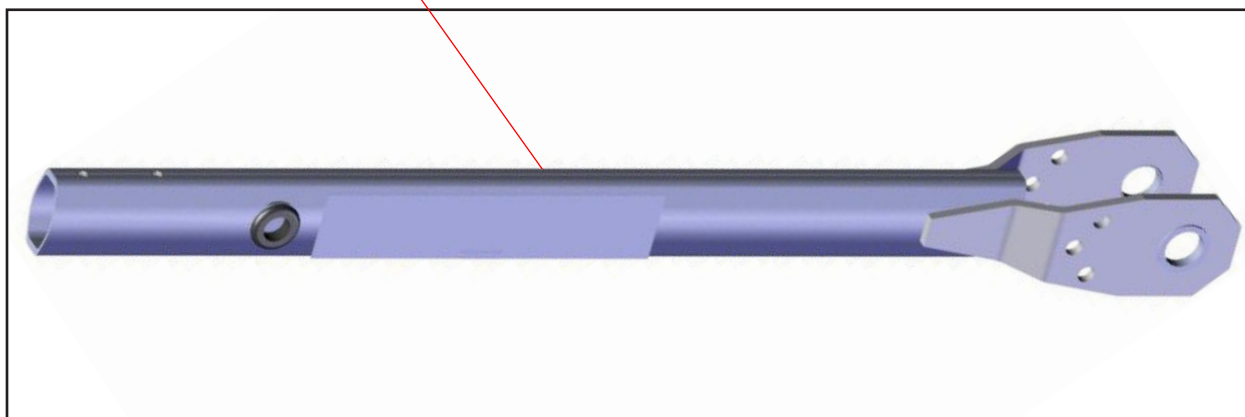

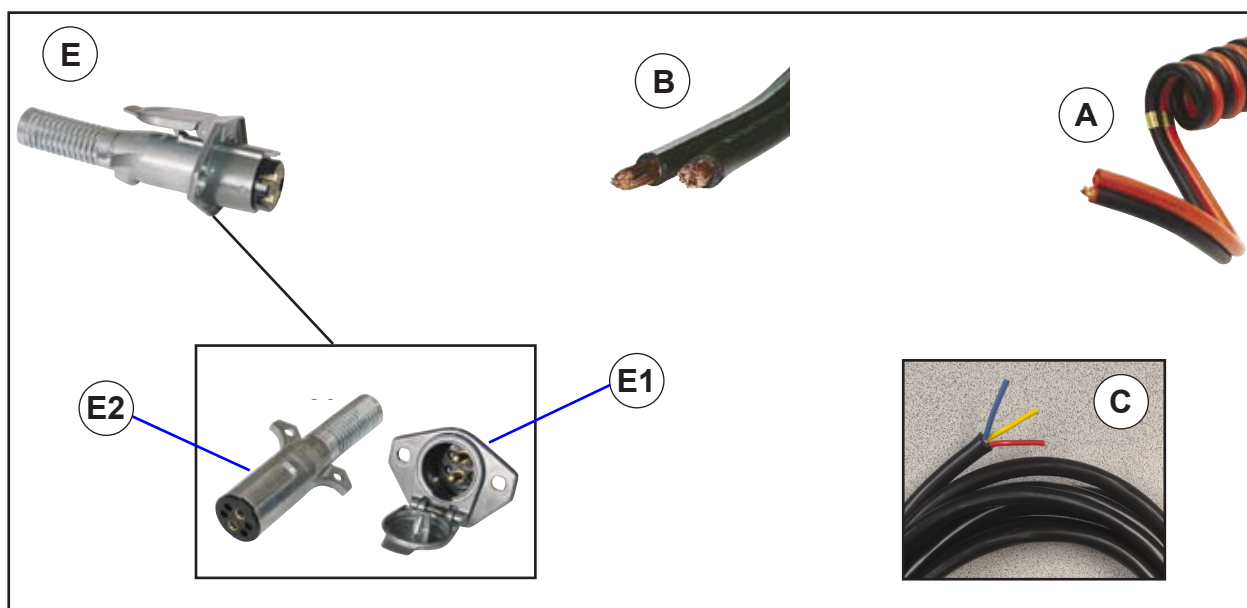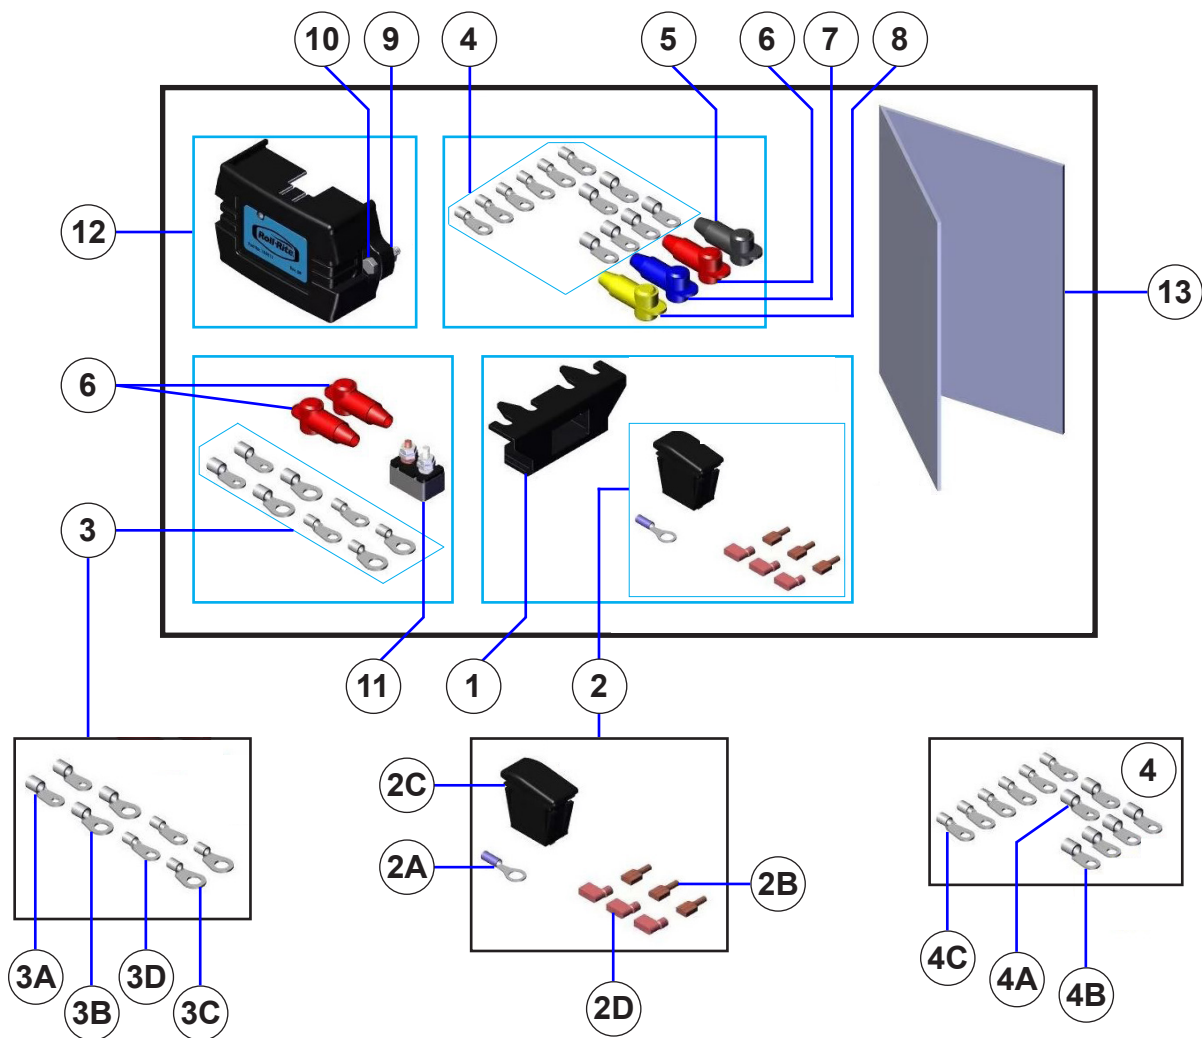

<b>DEMCO</b>	<b>Roll-Rite Electrical Tarp Parts</b>
--------------	--


<b>1AZ00103460 (Electric Kit, TSCM W/SS Gen1+ Relay &amp; Rocker Switch, 6GA)</b>			
BOM ID	Qty	Item No	Description
1	1	-	MOUNT BRACKET, ROCKER SWITCH (10390)
2	1	-	ROCKER SWITCH KIT (10915)
2A	1	1AEC0031506	TERMINAL, 14 GA INSULATED, 3/8" RING (16080)
2B	3	-	TERMINAL, 18 GA INSULATED, Q.D. FEMALE (16118)
2C	1	-	SWITCH, ROCKER (OPEN/CLOSE) (19300)
2D	3	-	TERMINAL, 14-16 GA INSULATED, Q.D. FLAG FEMALE (100460)
3	1	-	TERMINAL KIT FOR CIRC. BREAKER, 6/8 GA TERMINALS (10918)
3A	2	-	TERMINAL, 6 GA, #10 RING (16020)
3B	2	1AEC0036073	TERMINAL, 6 GA, 3/8" RING (16030)
3C	2	-	TERMINAL, 8 GA, 3/8" RING (16150)
3D	2	1AEC0033002	TERMINAL, 8 GA, 1/4" RING (16155)
4	1	-	TERMINAL KIT FOR SS RELAY, 6/8 GA TERMINALS (10919)
4A	2	-	TERMINAL, 6 GA, #10 RING (16020)
4B	4	1AEC0036071	TERMINAL, 6 GA, 1/4" RING (16021)
4C	6	1AEC0033002	TERMINAL, 8 GA, 1/4" RING (16155)
5	1	-	TERMINAL BOOT, BLACK, 8-2GA (16200)
6	3	-	TERMINAL BOOT, RED, 8-2GA (16201)
7	1	-	TERMINAL BOOT, BLUE, 8-2GA (16202)
8	1	-	TERMINAL BOOT, YELLOW, 8-2GA (16203)
9	2	1AFC08D0000	HEX NUT, 1/4-20 FLANGE, SERRATED, PLTD (18620)
10	2	1AFC12DAA05	HEX BOLT, 1/4-20 X 1", GR5, PLTD (18700)
11	1	1AZ00101259	50A MANUAL RESET CIRCUIT BREAKER, RITE TOUCH (101259)
12	1	1AZ00103238	12V RITE TOUCH RELAY SS GEN1+ W/HOUSING (103238)
13	-	-	ELECTRICAL COMPONENT INSTALLATION GUIDE (105568)

TO ADD TARP CONTROLS TO A SECOND TRACTOR FOR A STANDARD HYDRAULIC SIDE DUMP, SEE YOUR DEALER FOR COMPLETE KIT AND PRICING FOR [4CFK2014](#) (KIT, ROLL-RITE TARP, CONTROL SWITCH FOR 2ND TRACTOR). FOR EOH TRAILERS, SEE PAGE [47](#).

<b>Other Electrical Components for Roll-Rite Tarps</b>			
BOM ID	Qty	Item No	Description
A	-	1AZ00011320	6GA DUAL COILED CORD (11320)
B	-	1AEW000WF62	PARALLEL BAT CABLE, 6GA, BLK W/RED (11330)
C	-	1AZAP4295	CABLE, 16GA / 3COND, BLU/YEL/RED, 15' (11411)
E	-	1AZAP4211	MALE & FEMALE PLUG SET, 2-PIN, ROLL-RITE TARP (12760)
E1	1	1AZAP4236	FEMALE PLUG, 2-PIN, ROLL-RITE TARP (12770)
E2	1	1AZAP4235	MALE PLUG, 2-PIN, ROLL-RITE TARP (12780)

# Roll-Rite Wiring Diagram

## Roll-Rite Generation 1+ Solid State Reversing Relay with Rocker Switch (Tarp Uncovering to the right of driver)

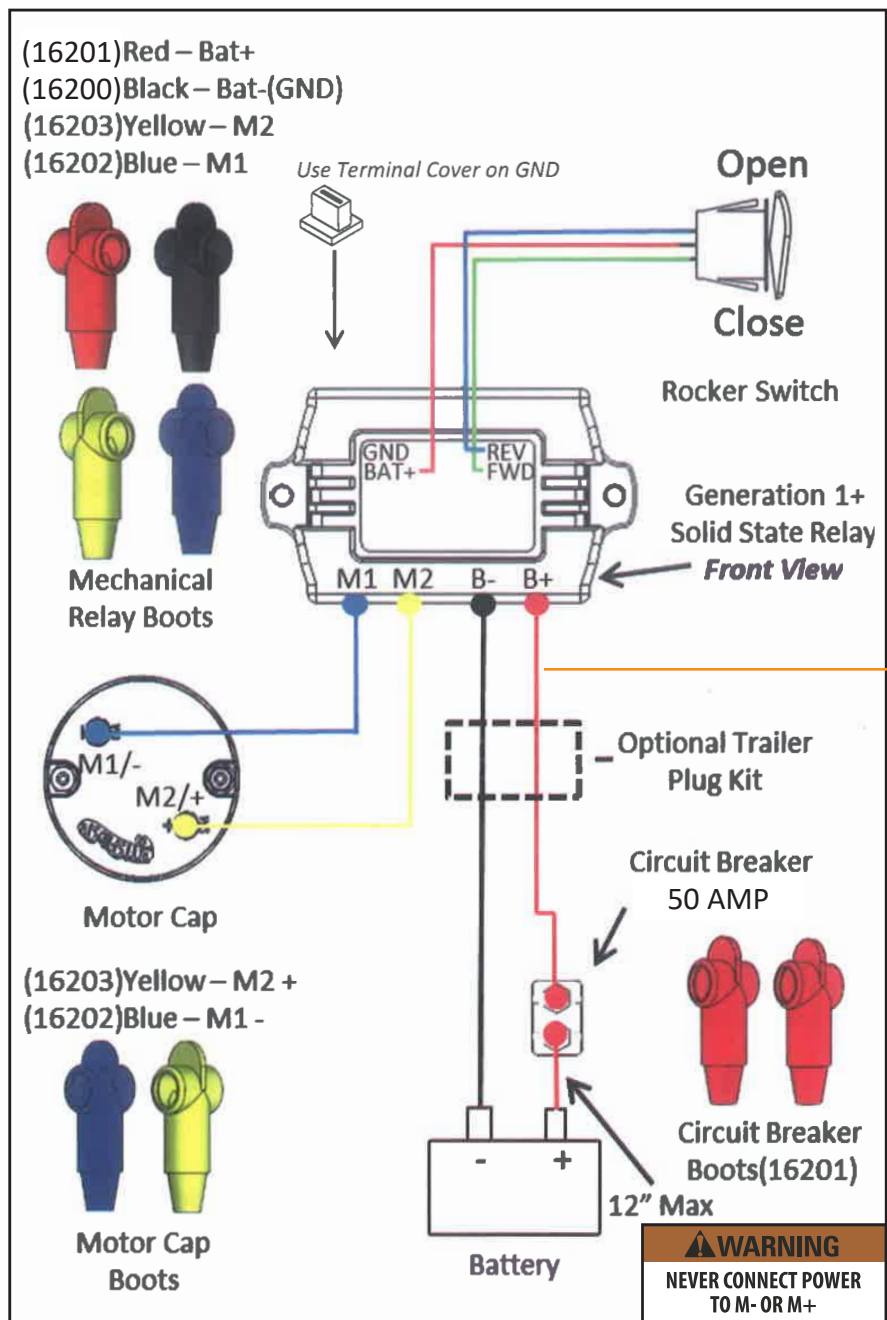

### ⚠ WARNING

Note: After installation, the terminals on the B+ circuit contain un-switched 12V energy at all times. Installation requirements must be followed to avoid contact between these terminals and chassis ground.



## Wiring the Tractor

There are two items to wire on the tractor before you can operate your Demco side dump. The control box and the tarp power wire.

To install the control box, find a suitable location in the cab of the tractor and mount the control box. The red and black two wire cable attached to the back of the box is the power wire. Plug the cigarette lighter end into a power connection in the cab.



**[If you do not have an available outlet for the cigarette lighter end, use the following instructions:** Cut the cigarette lighter plug off. Split apart the wires and connect the red wire to a 12v dc power source and the black to ground. **Red wire must be positive and Black negative. Reversing these wires can damage the control system.** A bag of terminals is included to allow you to tap into most truck fuse panels.]

Route the gray cord and male 9 pole plug out of the cab and to the front bulkhead of the side dump. Plug the cord into the female 9 pole socket on the trailer bulkhead. You will now be able to raise and lower the rear axle and dump the tub.

(**NOTE:** Air must be supplied to the side dump for the lift axle to operate properly. Hydraulic oil must be supplied to the side dump to dump the tub.)

To use the tarp you will need to supply 12 volt power to the side dump to operate the tarp motor. Due to the large power draw of the tarp motor, the electrical supply must be hooked directly to the battery and the heavy #6 wire included with the kit must be used.

Refer to the Roll Rite wiring diagram for reference. The relay has been already mounted on the side dump and the momentary switch that rolls/unrolls the tarp is in the control box installed previously. All that needs to be done is to run a wire from the battery to the female two pole socket on the road side front corner of the side dump.

Locate the circuit breaker as close to the positive battery post as possible. If the circuit breaker is not mounted to the battery box or truck frame, make sure that the terminals cannot touch anything that would create a short circuit. See image on next page for installation orientation of circuit breaker.

Separate enough of the white wire on the #6 white/black cord to reach from the positive battery terminal to the circuit breaker. Cut off the white wire. Strip the white wire and crimp on ring terminals to match the battery cable bolt and the post on the circuit breaker.



**Don't hook the white wire to the battery until everything else is wired.**

Crimp a ring terminal on the white wire on the remaining white/black cord and attach it to the circuit breaker.

Crimp a ring terminal on the black wire and attach it to the negative battery post.

**Hydraulic Hook-up**

Route the white/black cord to the female socket on the side dump. Cut the cord and strip the ends back to slip into the terminals on the back of the male 2 pin plug. Match the white and black wires to the corresponding wires in the side dump socket. You may need to slip the cover off the back of the socket to make sure that the wires match up. Secure the white/black cord to the truck frame.



Hook the white wire to the battery.

The tarp will now operate from the control box. It is best to have the tractor running while operating the tarp.


The tractor must have a hydraulic pump and reservoir to supply hydraulic oil to the side dump to dump the tub. The pump needs to supply a minimum output of 25 gallons per minute of oil at 2500psi. We recommend a minimum 15 gallon filtered and strained reservoir system. The tractor should also have a relief valve to protect the tractor's hydraulic system.


When hooking the tractor to the side dump, the pressure line from the pump must hook up to the female quick coupler on the side dump and the return to the reservoir must hook up to the male quick coupler. The control valve on the side dump will not operate properly if the oil flow is reversed. The quick couplers on the side dump are marked "in" and "out" as a reminder.

# Aero Electric Tarp Mounts

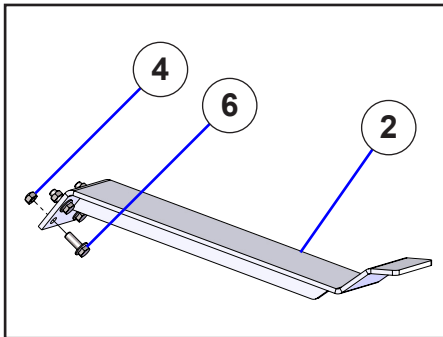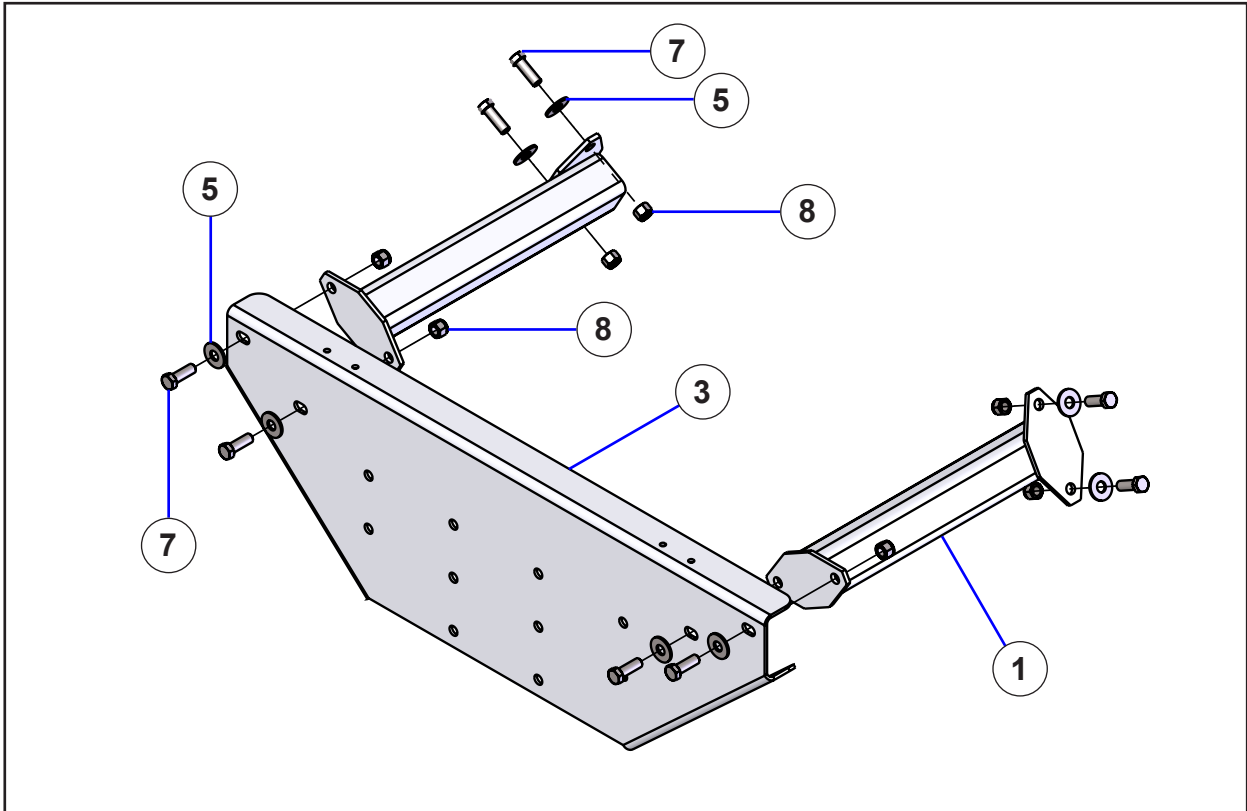

BOM ID	Qty	Item No	Description
1	4	5CAM9038	TARP CHANNEL MOUNT
2	2	5C000008	TARP SUPPORT BRACKET, AERO/ROLL-RITE
3	2	5C000021	AERO TARP MOUNT PLATE ASSY
4	8	1AFBP3612	NUT, HEX LOCK, 3/8-16, TOP LOCK, GR C, PLTD
5	16	1AF009H0000	WASHER, FLAT, 1/2", PLTD
6	8	1AFC12FAA05	HEX BOLT, 3/8-16 X 1", GR 5, PLTD
7	16	1AFC12HAAH8	HEX BOLT, 1/2-13 X 1-1/2", GR 8, PLTD
8	16	1AFC18H0000	NUT, HEX LOCK, 1/2-13, NYLOK, PLTD

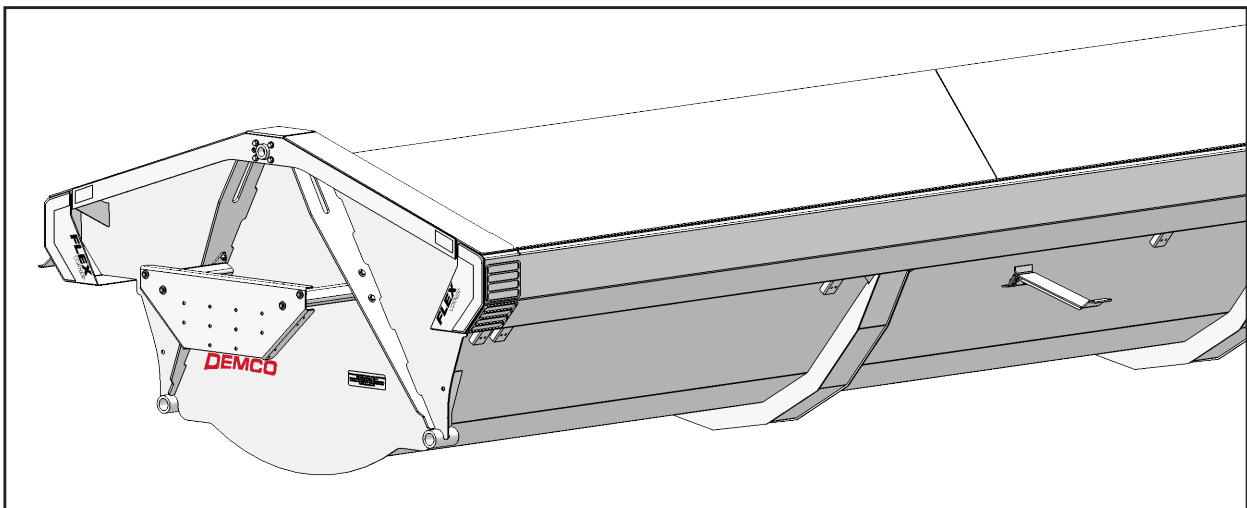

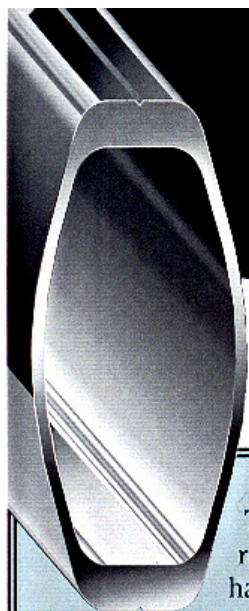

# Tarp Tips...


This section will be occasionally featured in your TarpTalk™ to address frequently asked questions or to refresh you on various technical issues. As always, if you have a question or encounter frequent technical issues, please contact the Roll-Rite Customer Service Center at 1-800-297-9905 or check out our FAQs online at [www.RollRite.com](http://www.RollRite.com) under Customer Support.

**Q.** *My motor is not working. How do I tell if the problem is with the motor, the relay, or the switch?*

**A.** Follow steps 1-4 below to trouble-shoot your system:

- 1.** Disconnect both power wires from the motor. Using jumper cables and a fully charged spare battery, momentarily supply power to the motor terminals, first one direction, and then the other. If the motor does not run, please call our Customer Service department at 1-800-297-9905. If the motor runs when connected to the spare battery, then the motor is OK and you need to re-connect the original power wires to the motor and continue Step 2.
- 2.** Using a test light or a voltage meter, verify that the BATT+ and BATT- terminals on the relay are properly connected. If not, check the wiring and circuit breaker between the battery and the relay for problems such as loose terminals and/or worn, broken, or pinched spots on the wire. If power is reaching the relay, continue to Step 3.
- 3.** Using a small piece of jumper wire, momentarily connect first the T1 terminal and then the T2 terminal to BATT+. You should be able to hear the relay click each time and the motor should operate each time. If you do not hear the relay click, please call our Customer Service department. If you hear the relay click but the motor does not operate, then you need to check the wiring between the relay and the motor. If you hear the relay click **and** the motor operates, then the relay is OK and you need to continue to Step 4.
- 4.** The following procedure assumes that you are using a standard SPST switch similar to the one that was shipped with the relay. If you are using something else, such as a lighted switch, you may have to adjust the procedure accordingly. Using a small piece of jumper wire, momentarily connect the center terminal (common) first to one of the outer terminals, and then to the other outer terminal. If the motor does not operate during this test, then you need to check the wiring between the switch and the relay. If the motor operates during this test, then the problem is in the switch, please call our Customer Service department. ■



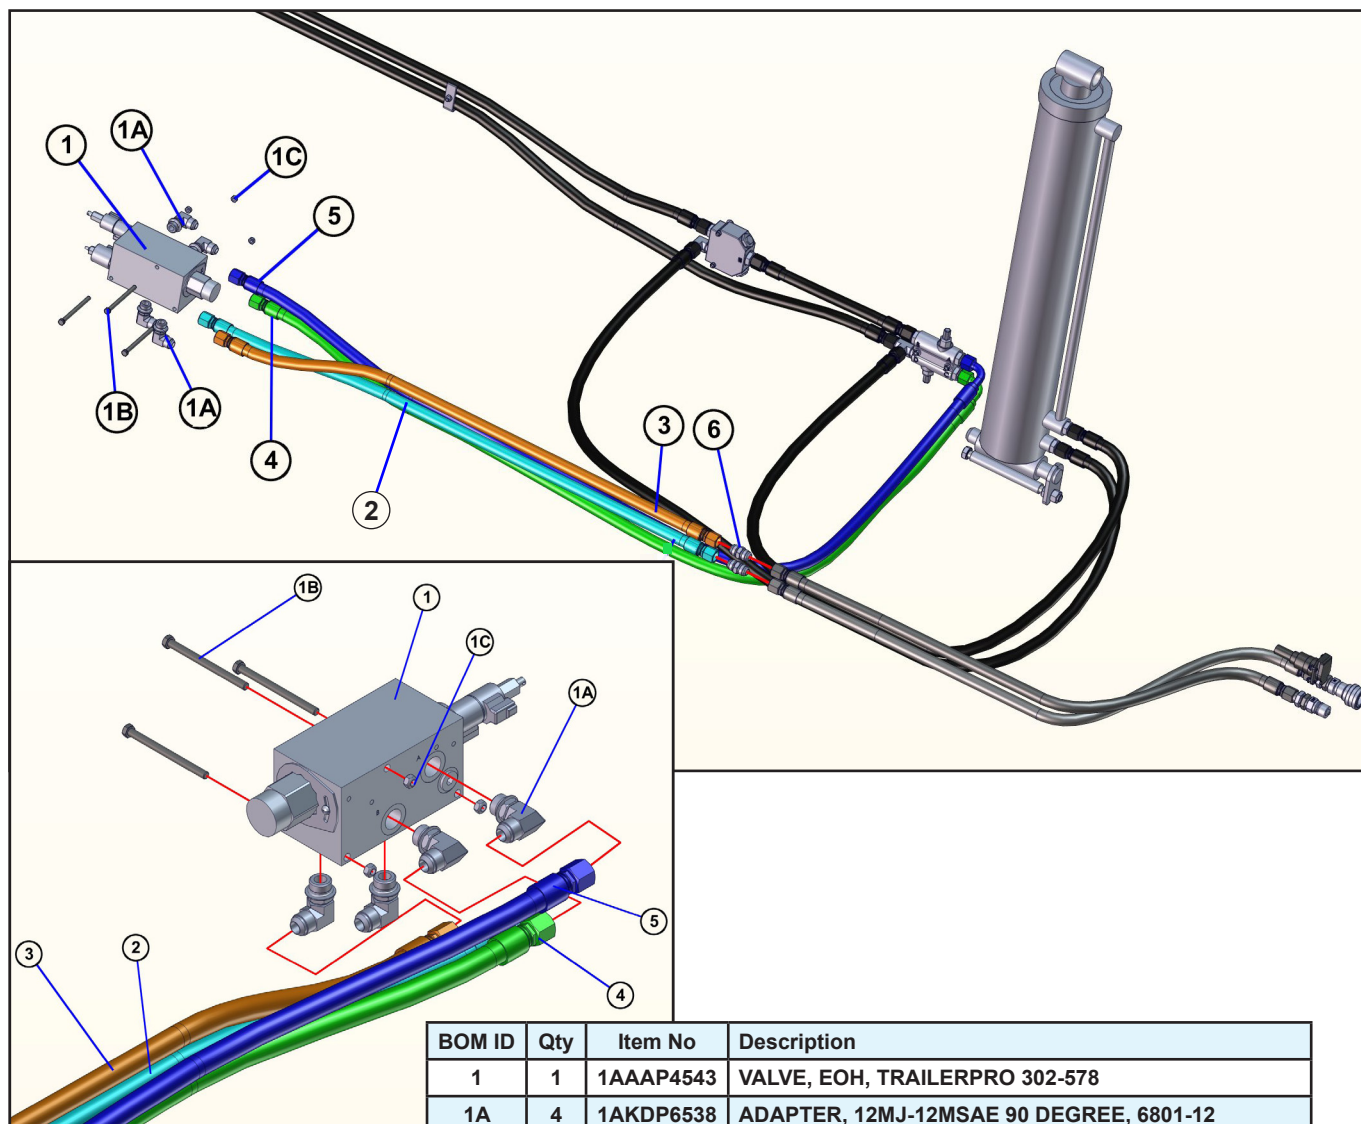


BOM ID	Qty	Item No	Description
1	1	1AAAP4543	VALVE, EOH, TRAILERPRO 302-578
1A	4	1AKDP6538	ADAPTER, 12MJ-12MSAE 90 DEGREE, 6801-12
1B	3	1AFBP3118	HEX CAP SCREW, 3/8"-16 X 5", GR 5, PLTD
1C	3	1AFBP3612	NUT, HEX LOCK, 3/8"-16, TOP LOCK, GR C, PLTD
2	1	1AKDP6546	HOSE, HYDRAULIC, 3/4" X 57", 12FJX-12FJX
3	1	1AKDP6554	HOSE, HYDRAULIC, 3/4" X 53", 12FJX-12FJX
4	1	1AKDP6614	HOSE, HYDRAULIC, 3/4" X 105", 12FJX-12FJX90
5	1	1AKDP6615	HOSE, HYDRAULIC, 3/4" X 108", 12FJX-12FJX90
6	2	1AKDP4388	UNION, 12MJ-12MJ, 2403-12

TO CONVERT YOUR SIDE DUMP TO TRAILER PRO ELECTRIC CONTROLS, CONTACT YOUR DEALER FOR COMPLETE KIT AND PRICING FOR 4CFK2018 (KIT, TRAILER PRO, EOH VALVE ADD-ON).



TO ADD A CONTROL BOX TO A SECOND TRACTOR:  
CONTACT YOUR DEALER FOR  
4CFK2017 (KIT, TRAILER PRO CONTROL BOX FOR 2ND TRACTOR, W/ROLL-RITE)  
FOR DEMCO SIDE DUMPS EQUIPPED WITH ROLL-RITE TARPS;

-OR-


CONTACT YOUR DEALER FOR  
4CFK2016 (KIT, TRAILER PRO CONTROL BOX FOR 2ND TRACTOR, W/AERO)  
FOR DEMCO SIDE DUMPS EQUIPPED WITH AERO TARPS.

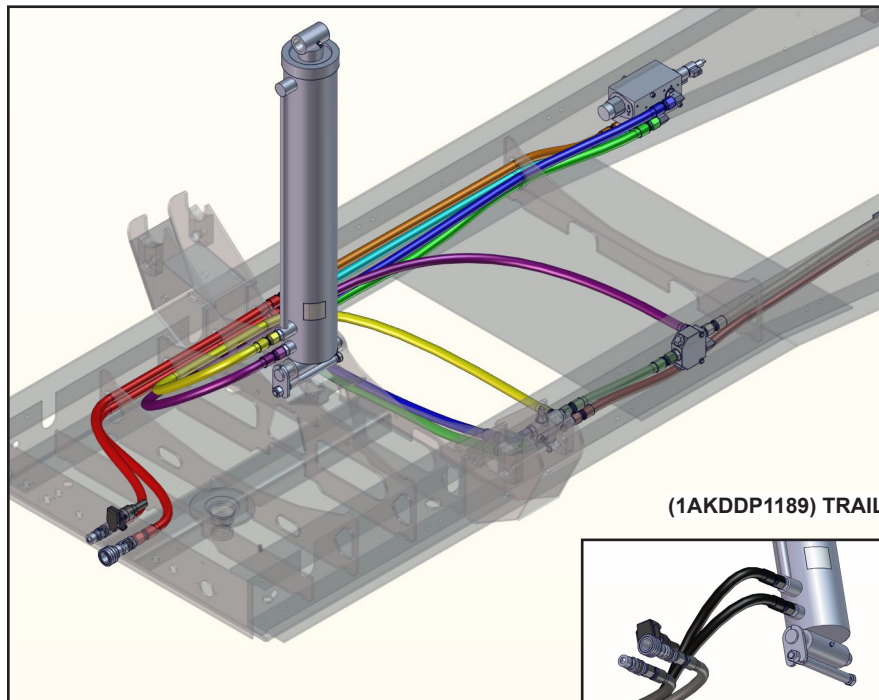


(1AKDDP1189) TRAILER PRO HOSE KIT; 4CFK2018

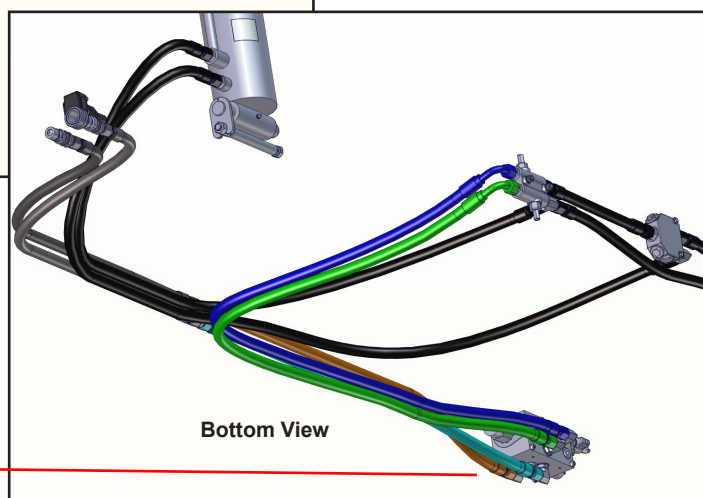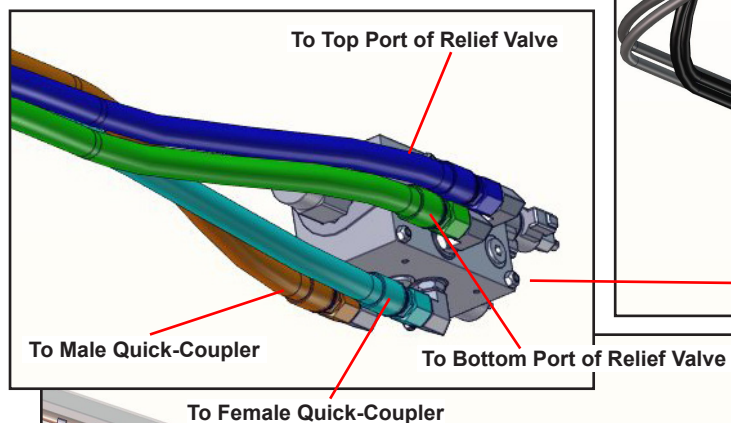


Bottom View

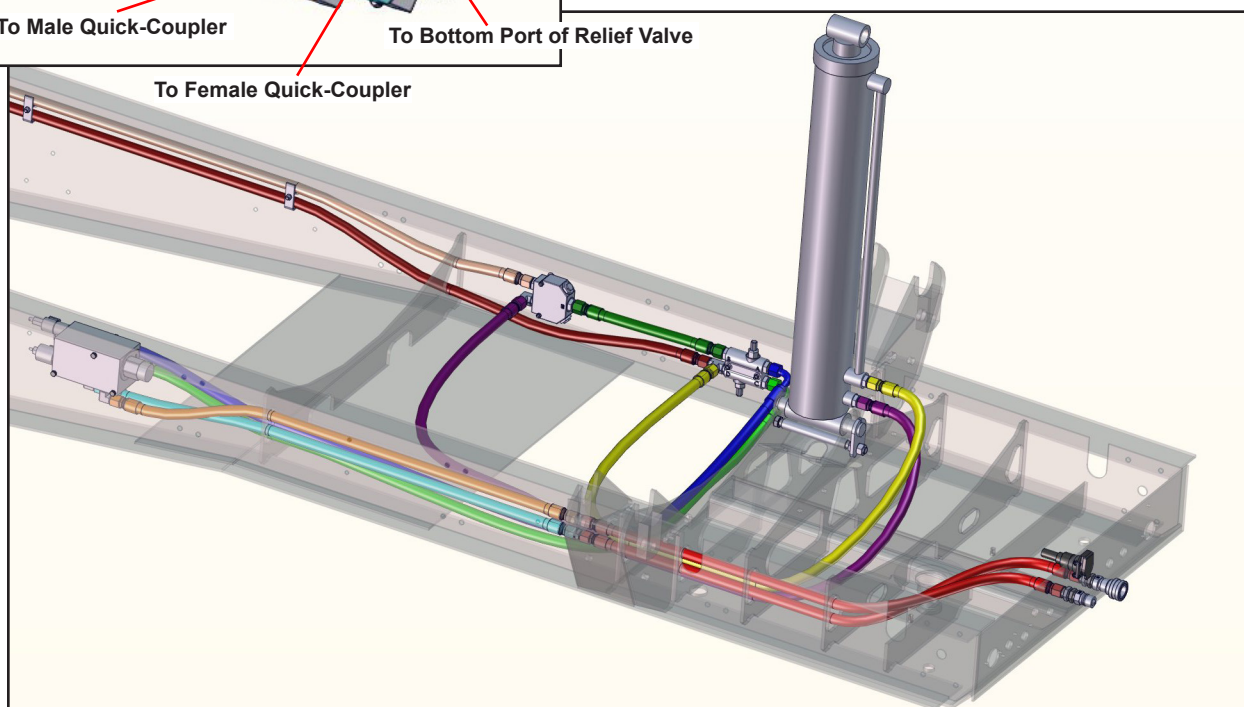



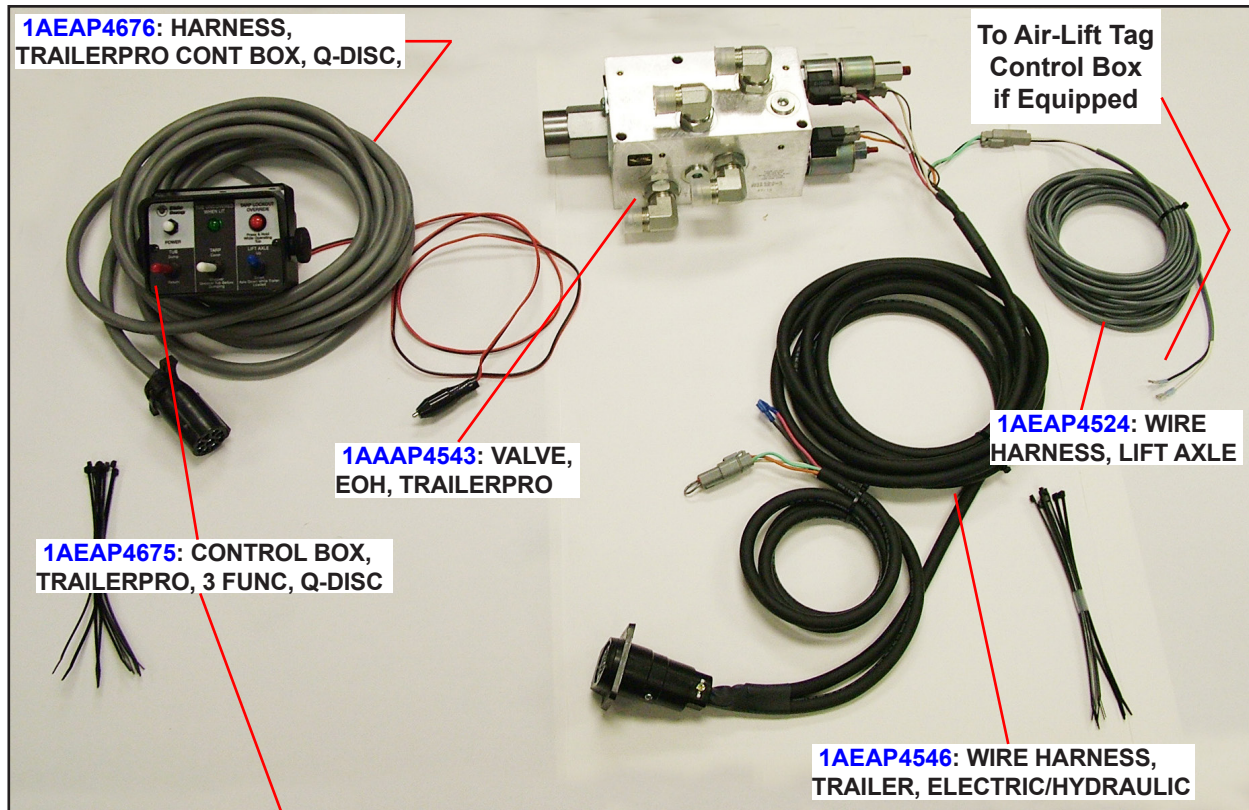



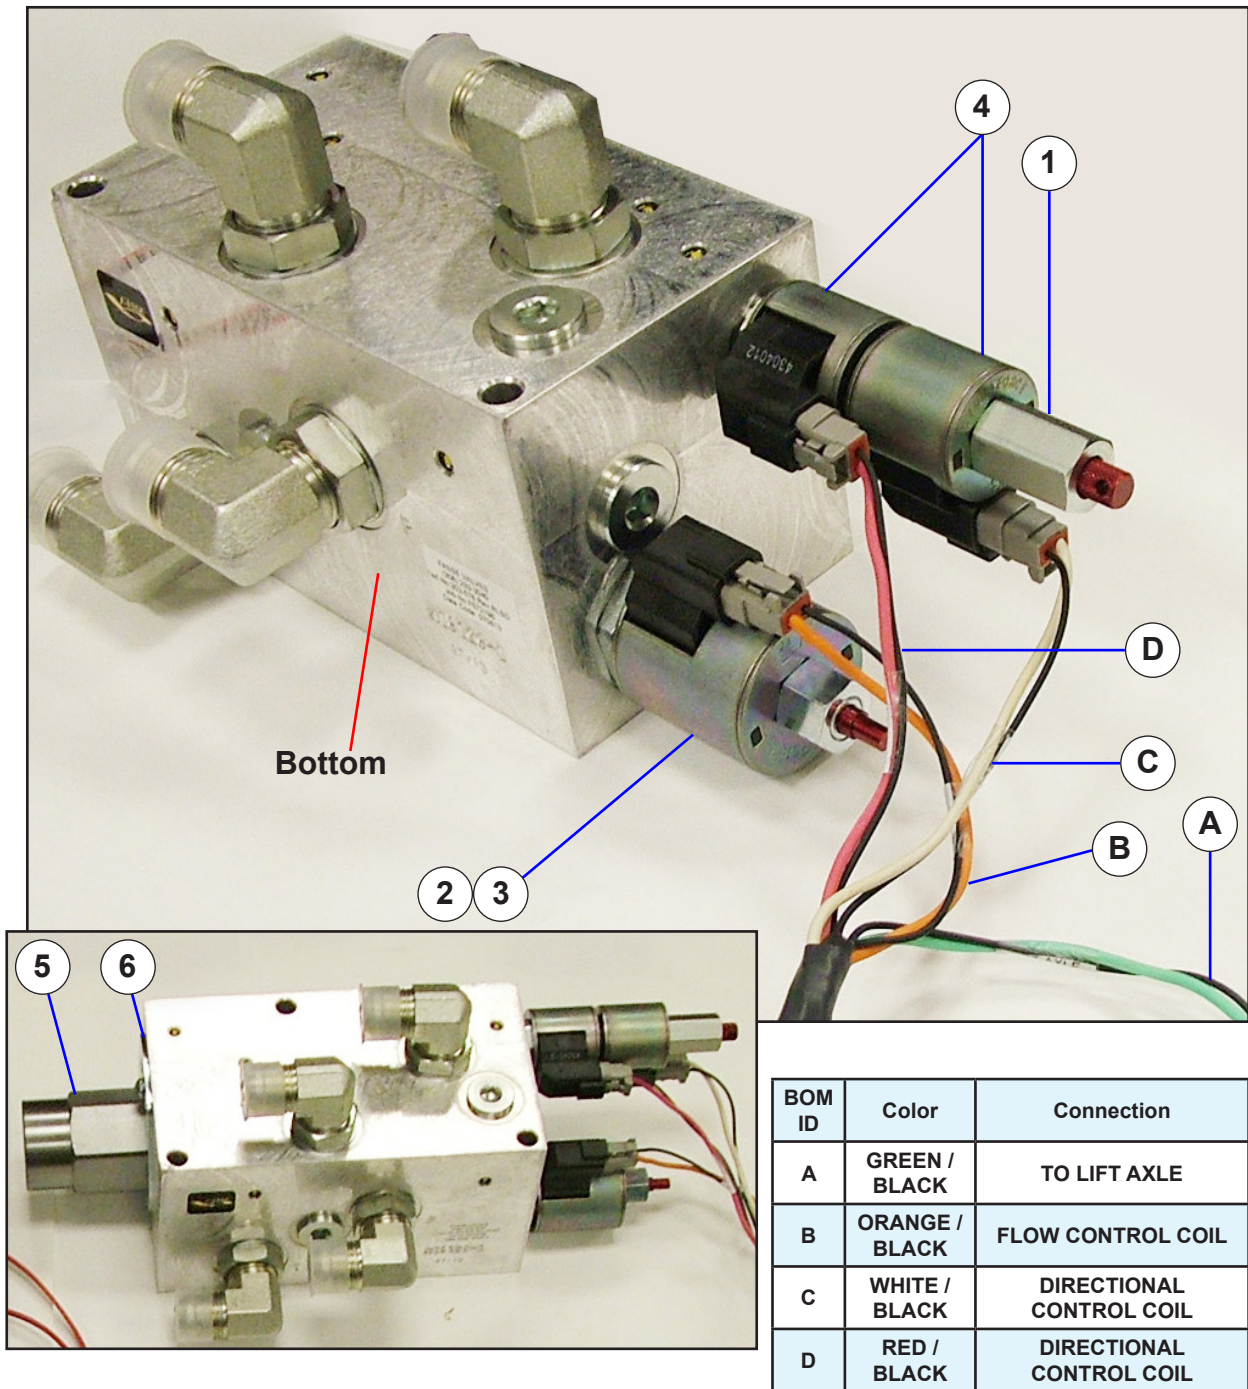


BOM ID	Qty	Item No	Description
1	1	1AAAP4590	CARTRIDGE, EOH VALVE, DIRECTIONAL, 273-982
2	1	1AAAP4591	CARTRIDGE, EOH VALVE, FLOW CONTROL, 273-339
3	1	1AAAP4605	COIL, EOH VALVE, 1.81" OD, FLOW CONTROL, 10V, 253-800
4	2	1AAAP4606	COIL, EOH VALVE, 1.43" OD, DIRECTIONAL, 10V, 253-071
5	1	1AK00273340	CARTRIDGE, HYD, HPD42-S67C, 273-340
6	1	1AK00273341	LOCK NUT ADAPTER, CARTRIDGE HYD, 273-341

### Installing the Control Box in the Tractor

- Find a suitable location in the cab of the tractor and mount the control box. The red and black two wire cable attached to the back of the box is the power cable. Plug the cigarette lighter end into a power outlet in the cab.
- If you do not have an available outlet for the cigarette lighter end, use the following instructions: Cut the cigarette lighter plug off. Split apart the wires and connect the red wire to a 12 volt dc power source and the black wire to ground. (Terminals are included to allow you to tap into most fuse panels.)

 **WARNING:** Red wire must be positive and black wire negative. Reversing these wires can damage the control system.

- Route the gray cord and male 9 pole plug out of the cab and to the front bulkhead of the side dump. Plug the cord into the female 9 pole socket on the side dump bulkhead.
- To operate your Demco side dump, your tractor will need a hydraulic pump that can supply a minimum of 25gpm to the trailer at 2,500 psi. See page 20 for more information on the tractor's hydraulic requirements.
- If your side dump is equipped with a tarp, you will also need to wire a power cord from the tractor's battery to the side dump to supply power to the tarp's motor. For detailed wiring instructions, see page 43.


### Operating the TrailerPro Control Box

Press the "Power" button to turn the system on. The button will light up to indicate the power is on. Press the button again to turn the system off.

### Dumping the Tub

The red switch in the lower left corner operates the tub. To dump the tub, turn on the tractor's hydraulic pump and then lift and hold the red toggle in the "dump" position to raise the tub and empty its contents. Release the switch when the cylinders reach the fully extended position.


 **CAUTION:** *The "Tarp Uncovered When Lit" green light will always be illuminated with a truck box, regardless of the tarp's position. Always check tarp's position before dumping.*

 **WARNING:** Do not stop dumping the load in mid dump and then try to return the tub to the transport position. You may tip over the side dump instead of returning the tub.

Push and hold the red switch in the "Return" position to bring the tub back to its transport position. Release the switch when the cylinders are fully retracted.

### Operating the Tarp (If Equipped)

The white switch in the lower middle operates the tarp. Lift and hold the white switch to unroll the tarp and cover the tub. Push down and hold the switch to roll the tarp and uncover the tub.

 **WARNING:** When rolling the tarp do not continue to hold the switch after the tarp has reached the fully rolled position. Damage to the tarp or the motor can occur when the motor continues to try to rotate after reaching the fully rolled position.

## ELECTRICAL SYSTEM

MALFUNCTION	PROBABLE CAUSE	CORRECTIVE ACTION
All lights fail to light.	Inter-vehicular cable not properly plugged into receptacles on truck box and tractor	Pull plugs out and reinsert them. Be sure plugs seat properly.
	Light switch on tractor is malfunctioning	Check light switch.
	No current from tractor	Check circuit breaker and wiring on tractor.
	Short circuit in wiring	Check wiring for bare spots in insulation.
	Dirty or corroded contacts in receptacle or on plug of inter-vehicular cable	Clean receptacle and plug.
	Dirty or corroded contacts in connectors of truck box wiring	Clean corroded contacts in connectors.
Lights burn dim or flicker.	Loose, dirty, or corroded terminals	Clean and tighten terminals.
	Poor or loose ground	Clean and tighten terminals on short (ground) cable.
	Defective lamps	Replace defective lamps.
	Dirty or corroded lamp socket or contact in receptacle, or on plug of inter-vehicular cable	Clean or replace lamp socket, receptacle, or plug.
Individual lamps do not light.	Burned out lamp	Replace lamp.
	Broken or loose connection	Tighten, repair, or replace broken connections. Clean poor or dirty connections.
	Damaged light assembly	Repair or replace light assembly.
	Dirty or corroded lamp socket	Remove lamp and clean contacts.
	Dirty or corroded contact in receptacle or on plug of inter-vehicular cable	Clean receptacle and plug.

## HYDRAULIC SYSTEM

MALFUNCTION	PROBABLE CAUSE	CORRECTIVE ACTION
Tub will not dump.	Hoses not connected to power unit	Clean hydraulic coupler and connect to truck box.
	Power unit malfunction	Check power unit pressure and flow rate.
	Ruptured line or loose fitting	Check for hydraulic leaks - replace hydraulic hose and/or fitting.
	Hydraulic cylinder	Replace cylinder packing.
	Proportional valve	Check pressure at both cylinders for equal pressure.
	Double relief valve	Adjust high-pressure relief cartridge.
Tub dumping slowly.	Dirt in relief valve	Disassemble valve. Clean with diesel fuel or kerosene, or replace cartridge.
	Chattering noise in relief valve	Dirty valve or pressure set too low and bypassing. Check pressure setting.
	Power unit hydraulic system	Check pressure and flow rate on power unit.




## Truck Box Specifications and Features




- Tub dump direction indicators visible in truck mirrors
- Four integrated tub pivot points with greaseless pivot bearings.
- Tub dump direction controlled from the left side.
- No need to walk all around the tractor to change dump direction.
- 1/4" FLX-500 tub with exclusive "Flex Corner" design.
- Large single "G" Rail on tub.

Lighter and stronger than two rail systems.

- Hydraulic system: 3000 psi rated 3/4" hoses, fittings, flow divider, and relief valve.
- Twin 3000 psi-rated 5" cylinders, and optional 6" cylinders available.
- Standard LED lights in enclosed boxes with sealed plugs.
- Many standard paint colors available.
- Options available:
  - Custom paint colors
  - Roll-Rite electric mesh tarp
  - Remote grease zerks for hydraulic cylinders
  - 6" hydraulic cylinders (on select models)
  - Dealer-installed EOH control valve

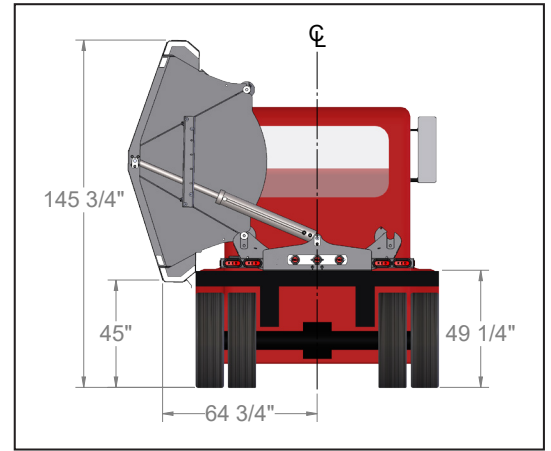

TRUCK BOX LENGTH	DIM "A"	DIM "B"	DIM "C"	DIM "D"
14'	18'-1/2"	16'-1"	14'-0"	15'-8"
15'	19'-1/2"	17'-1"	15'-0"	16'-8"
16'	20'-1"	18'-2"	16'-1"	17'-8"
17'	21'-1/2"	19'-1"	17'-0"	18'-8"
20'	24'-1"	22'-2"	20'-1/2"	21'-8"
24'	28'-1"	26'-2"	24'-1/2"	25'-8"

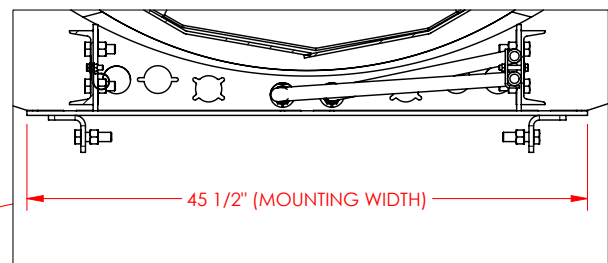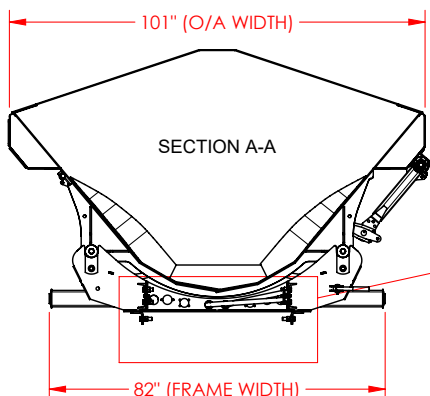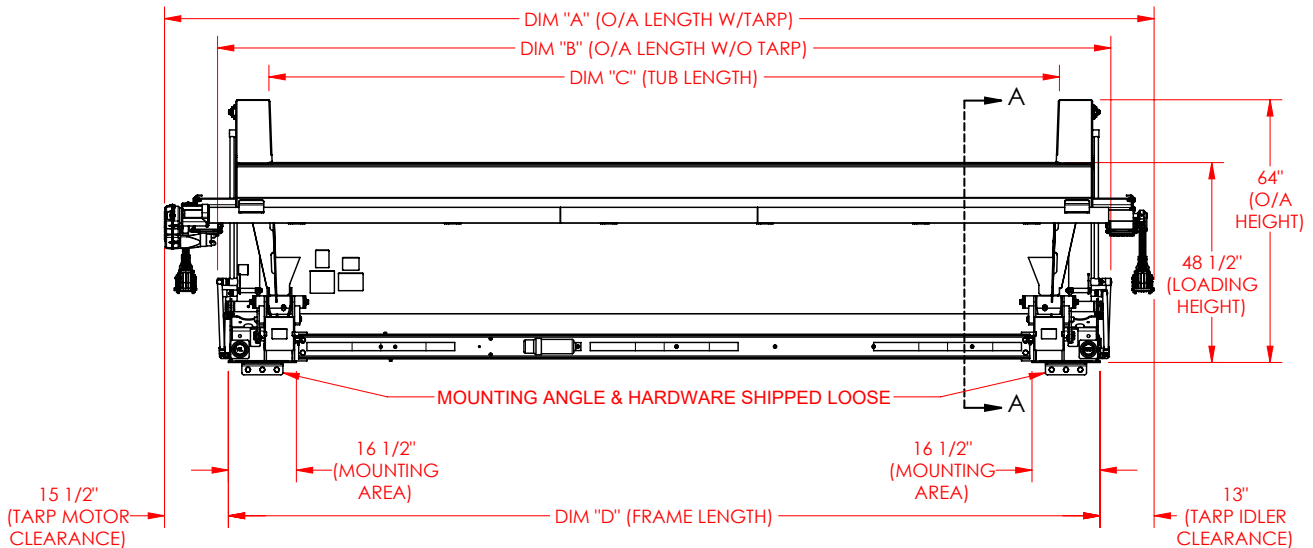

DETAIL B  
SCALE 1 : 12

## **SIDE DUMP TRUCK BOX LIMITED GENERAL WARRANTY**

This warranty applies to all side dump truck boxes manufactured by Demco. All goods manufactured by Demco shall be free from all defects in materials or workmanship under normal use and service, with loads not to exceed Manufacturer's rated capacity. Applied only to the original owner, as evidenced by a completed warranty registration on file at Demco, for a period ending 12 months from the date of delivery.

**THE WARRANTY REGISTRATION MUST BE COMPLETED AND RETURNED TO DEMCO WITHIN 30 DAYS OF DELIVERY OF THE PRODUCT TO THE ORIGINAL OWNER OR ALL WARRANTIES WILL BE NULL AND VOID.**

All claims, for defective goods arising under this limited warranty, must be made in writing immediately upon discovery, but in no event, later than 12 months from the date of delivery to the original owner.

The limited warranty is the sole and exclusive warranty made or given by Demco in connection with the manufacture or sale of goods and is in lieu of all other warranties of any type or kind whatsoever, whether expressed or implied, written or oral. The provision hereof may not be modified, altered, or extended except in writing signed by an authorized representative of Demco.

- ◆ This warranty applies only to parts or components manufactured by Demco, which is defective in material or workmanship.
- ◆ This warranty does not cover normal maintenance, service or adjustments.
- ◆ This warranty does not cover depreciation or damage as a result of accident, negligent handling, inadequate maintenance, or improper operation.
- ◆ This warranty does not cover damage due to unauthorized modifications or repairs by purchaser prior to Demco inspection and approval.
- ◆ This warranty does not cover any purchased components such, as but not limited to; couplers, tires, axle assemblies, suspensions or any nonstandard feature or items specified by the purchaser.
- ◆ This warranty does not expand, enlarge upon, or alter in any way, the warranties provided by the manufacturers of purchased components.

In the event that a claim shall arise under this limited warranty, Demco may at its option repair the affected goods, replace the affected goods, or refund an equitable portion of the purchase price of the affected goods. The purchaser understands and agrees that, in the event of a defect in material or workmanship, the remedies are limited to repair or replacement, at Demco's option, such part or parts which examination shall disclose to manufacturer's satisfaction to have been defective.

All affected goods shall be held for inspection by Demco or its representatives and no claim hereunder shall be payable in connection with repairs made by purchaser prior to Demco's inspection or without Demco's prior consent.

No claim shall be payable under this limited warranty unless purchaser shall provide Demco with the following information in writing in a timely manner:

- ◆ Serial Number of affected goods.
- ◆ Number of days, weeks or months affected goods in service.
- ◆ Location of affected goods.
- ◆ Description and pictures of alleged defect.



## SIDE DUMP TRUCK BOX LIMITED GENERAL WARRANTY (CONTINUED)

In no event shall company be liable to purchaser for indirect, incidental or consequential damages or injuries including, but not limited to downtime, cost of labor or materials, loss of profits to purchaser's business or goodwill, resulting from breach of warranty hereunder and all damages resulting from defective goods, whether arising in tort, contract, or warranty except as specifically herein provided are waived by purchaser.

With respect to all other parts not manufactured by Demco, the respective manufacturers warranty will be assigned to the purchaser.

Lights	limited 1 years
Valves	limited 6 months

There are no warranties for used products or products that have been repaired, altered, modified, overlooked, subjected to misuse, negligence, accident or ordinary wear and tear.

**Operator is required to perform all break-in procedures and routine checklists at the specified times, including but not limited to, Pre-Trip Checklist, Weekly Checklist, and Monthly Checklist as outlined previously in this manual. Additionally, operators must inspect unit for any loose fasteners, unusual component wear, or tarp wear.** If needed, operator should make proper adjustments to insure full life of equipment. **These item's need to be checked the first 100 miles and again at 500 miles and periodically thereafter.** These inspections and adjustments are very important and must be performed.

State and Federal Laws require a daily inspection of this unit by the operator.

Demco products are sold without any express warranty except as set forth by this warranty.

This warranty is effective June 1, 2007 and supersedes all previous Demco, warranty policies.

### **Cold Climate Warranty Disclaimer**

Operation of Demco Side Dumps in arctic temperatures may result in catastrophic failure of frame or tub components due to low temperature brittleness of steel and other materials. Material failures resulting from low temperature brittleness is beyond the control of Demco, the manufacturer of Demco Side Dumps. Therefore, any warranty claims beyond workmanship will be disallowed in all circumstances.

The engineering phenomenon related to cold climate service of materials is known as Nil Deformation Transition Temperature, which is the transition of material from ductile to brittle. Steels and other materials used in the production of Demco Side Dumps may experience brittleness at arctic temperatures. Since Demco cannot control the forces applied to side dumps or components of side dumps in arctic climates, claims resulting from brittle fractures or failures will not be warranted and Demco will not be held liable for the results of such failures.

## NOTES

[illegible]





Cut along dotted line

## DEMCO

### SIDE DUMP TRUCK BOX LIMITED WARRANTY REGISTRATION

Your new SIDE DUMP is covered by a limited warranty.  
To initiate the warranty this form **MUST** be completed and returned to  
Demco within **30 days** of delivery.

**PLEASE PRINT OR TYPE**

Owner's Name	Serial Number
PO Box / Street Address	Trailer Description
City, State, Zip	Dealership Name
Telephone Number	City, State, Zip
Email	Telephone Number
Date of Purchase	Dealer Representative
Intended Use: <input type="checkbox"/> Rental <input type="checkbox"/> Personal <input type="checkbox"/> Farm/Ranch <input type="checkbox"/> Commercial <input type="checkbox"/> Government	
<p>The Owner's Manual has been given to me and explained. I have read and fully understand the safe operation and the proper servicing and maintenance of the above unit, and the terms of the limited warranty shown inside the manual.</p> <p>Purchaser's Signature: _____ Date: _____</p>	
<p>Pre-Delivery Service: This unit was carefully prepared for delivery, inspected, and adjusted according to factory recommendations before delivery to the retail purchaser.</p> <p>Delivery Service: The limited warranty was explained, and a copy was presented to the retail purchaser along with the Owner's Manual.</p> <p>Dealer Representative Signature: _____</p>	

Please mail to the following:

**DEMCO**  
**4010 320<sup>th</sup> Street**  
**BOYDEN, IA 51234**

Cut along dotted line

**THIS PAGE INTENTIONALLY LEFT BLANK**

## NOTES

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.



4010 320th St., Boyden, IA. 51234

Phone: (712) 725-2311

Fax: (712) 725-2380

Toll Free: 1-800-54DEMCO (1-800-543-3626)

**Demco warranty policies, operator manuals, and product registration  
can be found online:**

**[www.demco-products.com](http://www.demco-products.com)**

