


8E000003, Rev E 12/10/14

## **COMBINE GRAIN TANK EXTENSION** 9E000003 - John Deere 9000 Series Regular Extension

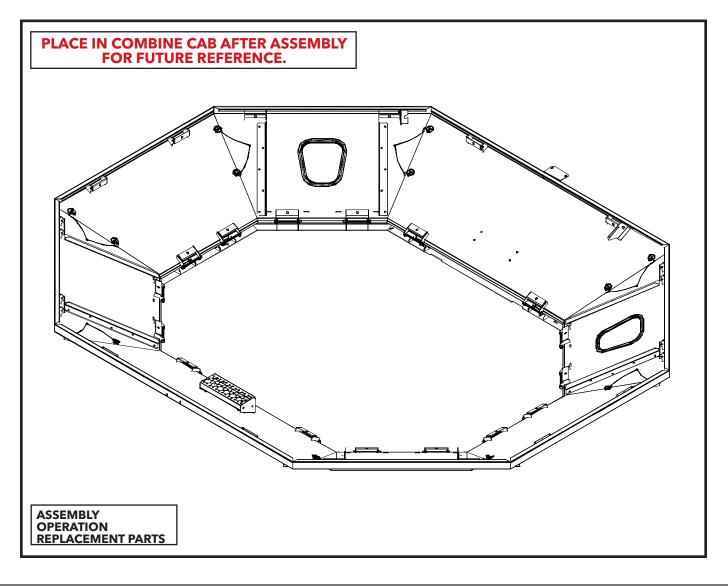


# **OPERATOR MANUAL**

#### Introduction

Thank you for purchasing a Demco grain tank extension. Proper care and use will result in many years of service.

#### WARRANTY POLICY, OPERATOR MANUALS, PARTS MANUALS & REGISTRATION

Go online to www.demco-products.com to review Demco warranty policies, operator manuals and register your Demco product.

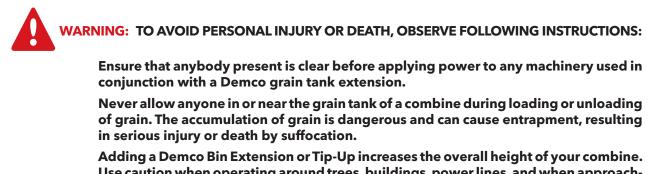

Adding a Demco Bin Extension or Tip-Up increases the overall height of your combine. Use caution when operating around trees, buildings, power lines, and when approaching bridges and over passes. Pay attention to height restrictions.

Do not exceed advertised maximum capacity of a Demco grain tank extension.

#### **GENERAL INFORMATION**

- Read assembly instructions carefully. Study assembly procedures and all illustrations before you begin assembly. Note which parts are used in each step. This unit must be assembled in proper sequence or complications will result.
- 2. When placing a parts order, refer to this manual for proper part numbers and place order by **PART NO**. and **DESCRIPTION.**
- 3. Whenever terms "LEFT" and "RIGHT" are used in this manual it means from a position behind combine and facing forward.

#### **TABLE OF CONTENTS**

General Information	2
Safety, Signal Words	3
Product Safety Guidelines	4
Safety Sign Locations	5
Safety Sign Care	5
Product Disclaimer	5
Parts Breakdown	6
Parts List	7
Frame Assembly	
Panel Assembly	8-9
Misc. Bracket Assembly	
Complete Assembly, Mounting Instructions	11
Cover Plate/Tank Cap, Wiring, Bracing	



#### TAKE NOTE! THIS SAFETY ALERT SYMBOL FOUND THROUGHOUT THIS MANUAL IS USED TO CALL YOUR ATTENTION TO INSTRUCTIONS INVOLVING YOUR PERSONAL SAFETY AND SAFETY OF OTHERS. FAILURE TO FOLLOW THESE INSTRUCTIONS CAN RESULT IN INJURY OR DEATH!



**THIS SYMBOL MEANS** 

#### ATTENTION

#### **BECOME ALERT**

#### YOUR SAFETY IS INVOLVED!

#### **SIGNAL WORDS:**

This manual uses the following signal words--DANGER, WARNING, and CAUTION-- with safety messages. The appropriate signal word has been selected using the following guidelines.

#### **DANGER:**

Indicates an imminently hazardous situation that, if not avoided, will result in death or serious injury. This signal word is to be limited to most extreme situations typically for machine components which, for functional purposes, cannot be guarded.

#### WARNING:

Indicates a potentially hazardous situation that, if not avoided, could result in death or serious injury, and includes hazards that are exposed when guards are removed. It may also be used to alert against unsafe practices.

#### **CAUTION:**

Indicates a potentially hazardous situation that, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.

If you have questions not answered in this manual, require additional copies, or if your manual is damaged, please contact your dealer or DEMCO, 4010 320th Street, Boyden, IA 51234 ph: (712) 725-2311 or Toll Free: 1-800-543-3626 Fax: (712) 725-2380 or 1-800-845-6420

http://www.demco-products.com



## PRODUCT SAFETY GUIDELINES

Every year many accidents occur which could have been avoided by a few seconds of thought and a more careful approach to handling equipment. You, the operator, can avoid many accidents by observing the following precautions in this section. To avoid personal injury, study the following precautions and insist those working with you, or you yourself, follow them.

Replace any caution, warning, danger or instruction safety decal that is not readable or is missing. Location of such decals is indicated in this booklet.

Review safety instructions with all users annually.

Operator should be a responsible adult. DO NOT ALLOW PERSONS TO OPERATE OR ASSEMBLE THIS UNIT UNTIL THEY HAVE DEVELOPED A THOROUGH UNDERSTANDING OF SAFETY PRECAUTIONS AND HOW IT WORKS.

Do not paint over, remove, or deface any safety signs or warning decals on your equipment. Observe all safety signs and practice instructions on them.

Never exceed limits of a piece of machinery. If it's ability to do a job, or to do so safely is in question **DON'T TRY IT.** 

Adding a Demco Bin Extension or Tip-Up increases the overall height of your combine. Use caution when operating around trees, buildings, power lines, and when approaching bridges and over passes. Pay attention to height restrictions.

Fold and secure (if needed) the grain tank extension panels when transporting the combine to avoid contact with low power lines and other obstructions.

Use the panel safety step to safely enter and exit the grain tank.

Ensure that any additional bracing and safety equipment have been installed according to this manual. (Some models do not require additional bracing or safety equipment).


Ensure that the grain tank extension frame has been properly mounted to the combine according to this manual.

Never exceed the maximum advertised capacity of the grain tank extension. By doing so you risk damage to the grain tank extension and combine.



# SAFETY SIGN LOCATIONS

Types of safety sign and locations on equipment are shown in illustration below. Good safety requires that you familiarize yourself with various safety signs, type of warning, and area or particular function related to that area, that requires your SAFETY AWARENESS.

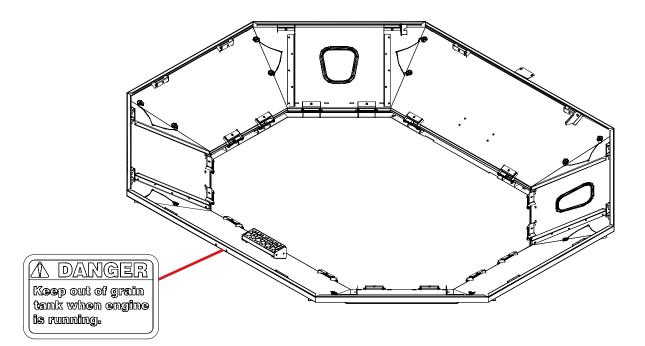

## SAFETY SIGN CARE

- Keep safety signs clean and legible at all times.
- Replace safety signs that are missing or have become illegible.
- Replacement parts that displayed a safety sign should also display current sign.
- Safety signs are available from Demco.

#### **PRODUCT DISCLAIMER**

Increasing the grain tank capacity of any combine by use of this product is at the discretion of the owner. Increasing the grain holding capacity of any combine may affect the structural aspects of the combine as well as drive line components and tires. Although Demco has included additional support bracing on selected models, it does not assume liabilities, or make any warranties pertaining to the structural stability or performance of any combine. See the combine owners/operators manual for additional combine specifications and safety information not listed in this manual.



#### John Deere 9000 Series Grain Tank Extension



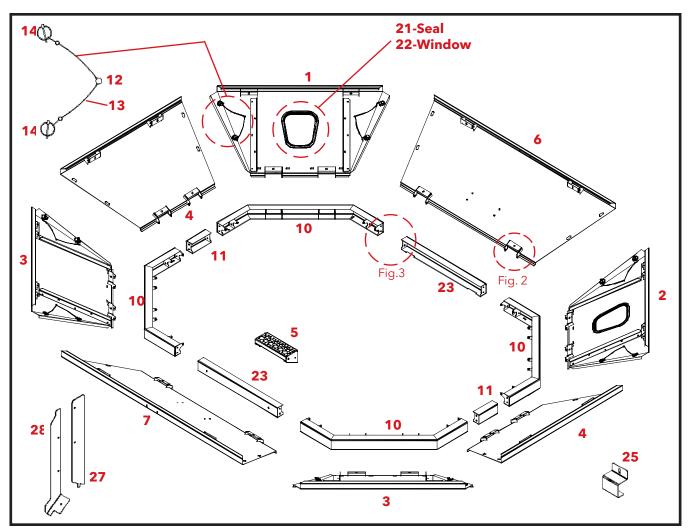


Figure 1



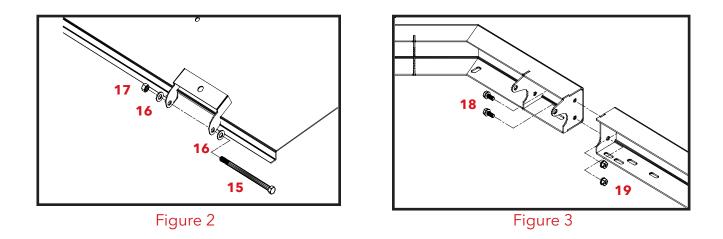

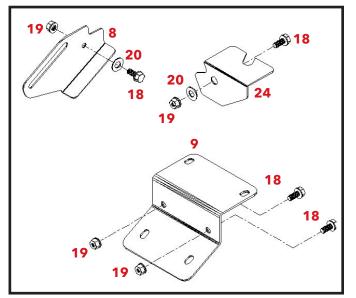

#### Figure 4

ITEM	PART #	ΟΤΥ	DESCRIPTION
1	R5E000011P0	1	FRONT LEFT CORNER PANEL
2	R5E00003P0	1	FRONT RIGHT CORNER PANEL
3	R5E000005P0	2	REAR CORNER PANEL
4	R5E000020P0	2	SIDE PANEL (9000 SERIES)
5	R5E000006P0	1	EXTENSION SAFETY STEP
6	R5E000018P0	1	FRONT PANEL (9000 SERIES)
7	R5E000019P0	1	REAR PANEL (9000 SERIES)
8	R3E000019P0	1	BASE SENSOR BRACKET
9	R3E000022P0	1	BASE GPS BRACKET
10	R5E000007P0	4	FRAME CORNER ASSEMBLY
11	R5E000024P0	2	FRAME SPLICE SIDE ASSEMBLY
12	1AF032D0000	8	PRESS RIVET
13	1AF031DKA00	16	NYLON LANYARD
14	1AF034CAAI0	16	3/16" X 1-9/16" LYNCH PIN
15	1AFC12FFA05	16	3/8" X 6" HEX BOLT
16	1AF009E000C	40	3/8" SAE FLAT WASHER
17	1AFC18F0000	20	3/8" NYLON LOCK NUT
18	1AFC37E00L0	39	5/16" X 3/4" SERRATED FLANGE BOLT
19	1AFC08E0000	39	5/16" SERRATED FLANGE NUT
20	1AF046EAAD0	2	5/16" X 1-1/4" X .120 WASHER
21	R3E000026P0	2	WINDOW SEAL
22	1AWALACKAMC	2	WINDOW
23	R5E000025P0	2	FRAME SPLICE FRONT & REAR ASSEMBLY
24	R3E00003P0	1	BASE LIGHT BRACKET
25	R3E000020P0	4	FRAME/TANK HOLD DOWN BRACKET
26	*1AFC35CAA00	19	#12 X 1" SELF TAPPING SCREW
27	R3E000046P0	1	LEFT TANK BRACE
28	R3E000047P0	1	RIGHT TANK BRACE
29	R3E000040P0	1	FRONT LEFT TANK CAP (96)
30	R3E000041P0	1	INTERNAL COVER PLATE (96)
31	R3E000042P0	1	LEFT REAR TANK CAP (96)
32	R3E000043P0	1	REAR TANK CAP
33	R3E000044P0	2	FRONT TANK CAP
34	R3E000049P0	1	INTERNAL COVER PLATE (94 & 95)
35	R3E000090P0	1	JD 9000 SERIES RAISED ACCESS PLATE
36	*1AEX0015241	1	DEERE WIRE HARNESS
37	1AFC35FAA00	3	5/16" X 1" SELF TAPPING BOLT
38	*1AFC35CAAH0	4	#12 X 1-1/2" SELF TAPPING SCREW
39	*1AFC12FDA05	4	3/8" X 4" HEX BOLT
* Indicates items not shown in illustrations			
Please order replacement parts by PART NO. and DESCRIPTION			

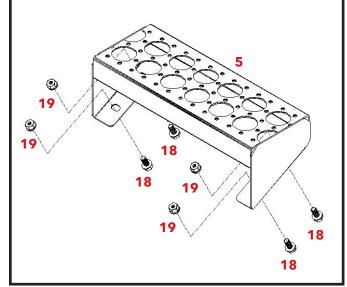


Figure 5

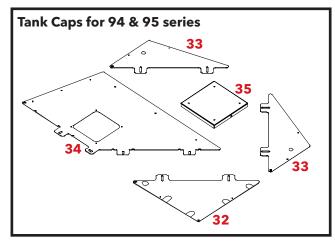


Figure 6

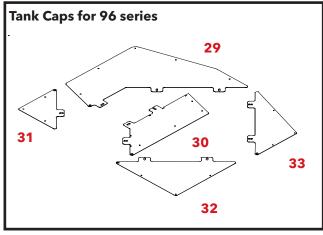


Figure 7




#### **Frame & Panel Assembly**

**NOTE:** In order to simplify the assembly process, we recommend that the grain tank extension be assembled on the ground and hoisted to the top of the combine.

#### FRAME ASSEMBLY

Arrange the frame components as shown in figure 8. The frame corner with the serial number decal is the left front frame corner. Fasten the frame joints together with two 5/16" x 3/4" serrated flange bolts and two 5/16" serrated flange nuts per joint. See figure 8A.

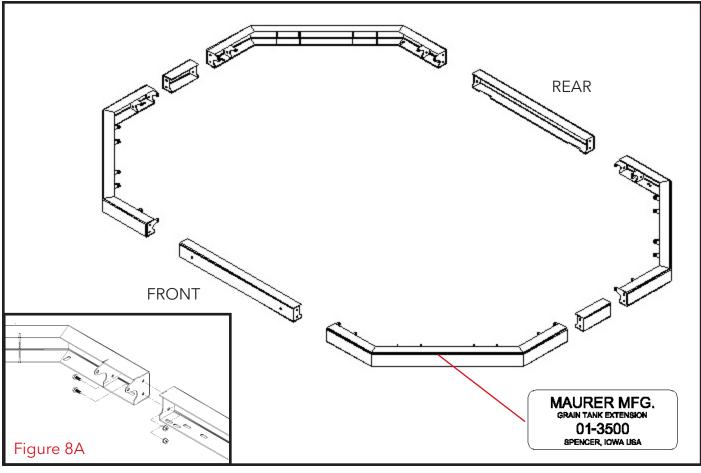



#### PANEL ASSEMBLY

#### **STEP 1:**

Using one 3/8" x 6" hex bolt, two 5/16" washers and one 3/8" nylon lock nut per hinge point, attach the extension corner panels to the frame of the grain tank extension. See figure 9A.

**NOTE: DO NOT** over tighten nuts and distort hinge component, but ensure nylon lock nut fully engages bolt threads.




#### **STEP 2:**

Assemble all four corner panels to the frame (panels with windows are to be fastened to the front) and slowly fold the panels outward to accept the front, rear, and side panels. The corner panel with the Demco logo on the back side is the left front corner. See figure 9.



#### ATTENTION: DAMAGE TO CORNER PANEL CAN OCCUR IF NOT FOLDED OUTWARD SLOWLY!

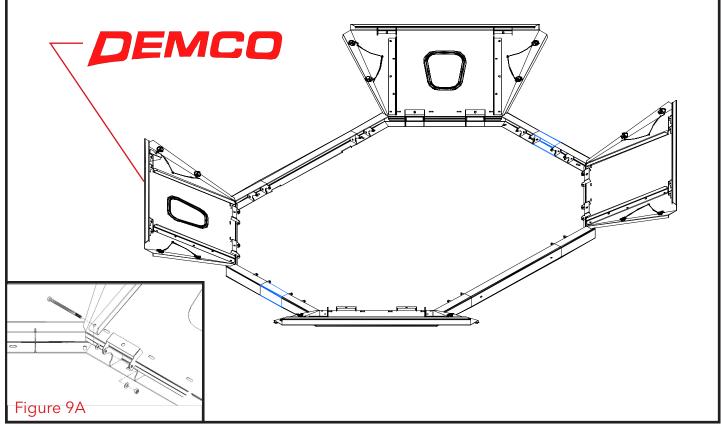




#### **STEP 3:**

Assemble the front, rear, and side panels the same as the corner panels. Please ensure that the panel with DANGER decal is the rear panel. This panel will also receive the safety step.

#### **STEP 4:**

Remove the partial cut slugs near the bottom of the rear panel, and fasten the safety step to the rear panel using  $5/16'' \times 3/4''$  serrated flange bolts and 5/16'' serrated flange nuts. When mounting, place the nuts to the inside. See figure 10.

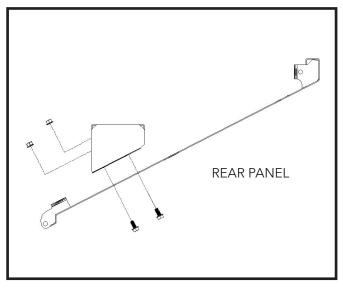

#### Figure 10

**ATTENTION: DANGER** decal must be facing the rear of the combine!

DEMCO

#### **Frame & Panel Assembly**

#### **STEP 5:**

Fasten the tank full sensor bracket to the right front corner using one  $5/16'' \times 3/4''$  serrated flange bolt, one 5/16'' serrated flange nut, and one  $5/16'' \times 1-1/4'' \times .120$  washer. See figure 11.

#### **STEP 6:**

Fasten the provided light bracket to the left front corner using one  $5/16'' \times 3/4''$  serrated flange bolt, one  $5/16'' \times 1-1/4'' \times 1-1/4''' \times 1-1/4'' \times 1-$ 


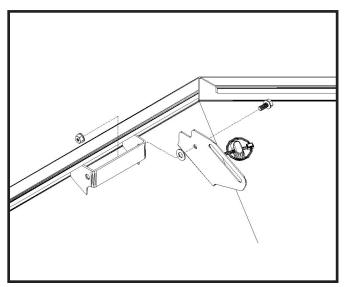


Figure 11



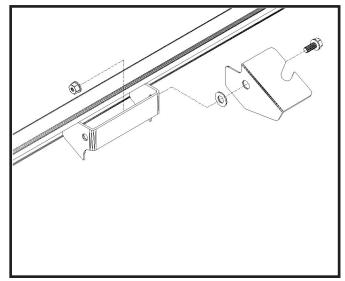


#### **STEP 7:**

Remove the partial cut slugs from the vertical leg of the front panel, and mount the base GPS bracket using two 5/16" x 3/4" serrated flange bolts and two 5/16" serrated flange nuts. See figure 13.

#### **STEP 8:**

Align two nylon lanyards with one press rivet and fasten together. Loop and lock the ends of the lanyards around one lynch pin each. Fasten the complete assembly to the two small holes located on the corner panels. See figure 14.

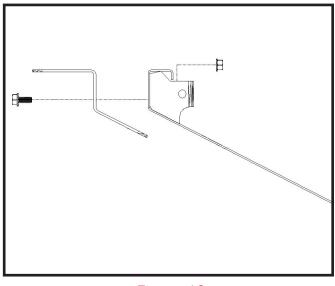





#### **Mounting Instructions**

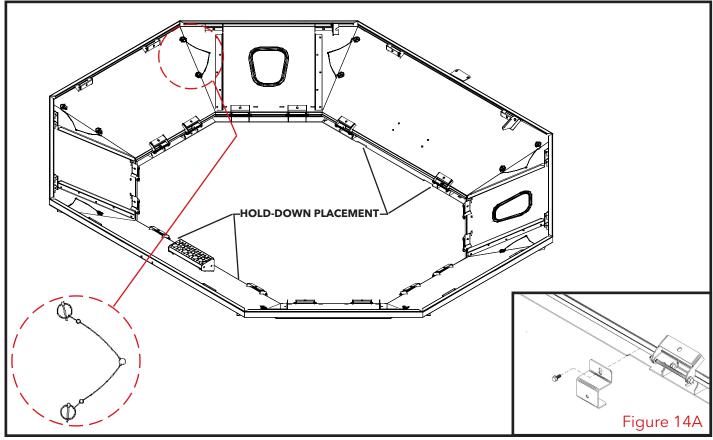


Figure 14

#### **STEP 1:**

Hoist the assembled grain tank extension to the top of the combine. Position over the grain tank and carefully lower into place with the window panels facing front.

#### **STEP 2:**

Position the extension frame as far to the right as possible without creating a gap in which grain could leak from. Once aligned with the right side be sure the frame is also square front to rear.

#### **STEP 3:**

Using the provided tank hold-down brackets, secure the frame to the tank using one  $5/16" \times 3/4"$  serrated flange bolt and 5/16" serrated flange nut per bracket. The hold-down will fit into the notch on the bottom lip of the front and back frame halves. Using the hole in hold-down brackets as a guide, drill thru the front and rear walls of the tank and fasten with  $3/8" \times 4"$  bolts, 3/8" nuts, and washers. See figure 14A.

#### <u>STEP 4:</u>

Fasten the internal cover plate and tank caps to the top of the tank using the provided #12 x 1" self tapping screws. See figures 15 and 16 for the correct combine model and corresponding parts.



ATTENTION: Failure to properly secure hold-down brackets could result in equipment damage.

DEMCO


#### **Internal Cover Plate/Tank Caps**

#### **STEP 1:**

Using three 5/16'' serrated flange bolts and 5/16'' serrated flange nuts fasten the internal cover plate to the inside of the bottom lip of the extension frame. Once the cover plate is secured to the frame, complete by screwing the plate to the tank using  $#12 \times 1''$  self tapping screws.

#### **STEP 2:**

Fasten Tank Caps to the extension frame corners using 5/16" serrated bolts and nuts. (Tabs will be on the underside of frame) Complete by screwing the Tank Caps to the outer rim of the tank with #12 x 1" screws.

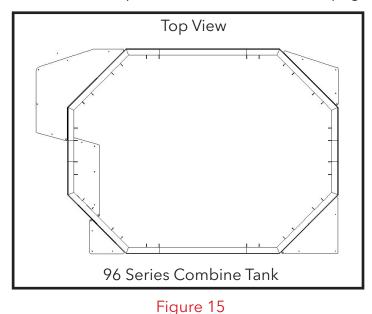

**NOTE:** Not all parts will be used. (Also see page 7, figures 6 & 7)

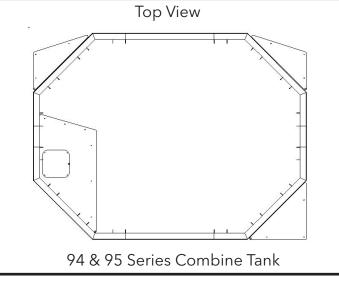


Figure 16

### SENSOR / LIGHT WIRING

Mount the OEM light to the already mounted light bracket on the left front corner. Fasten with the original hardware. Mount the sensor to the slot in the bracket using the original hardware. Use the provided wire harness to connect the sensor to the OEM wiring. Clip and extend the wiring for the tank light.

#### TANK BRACING


#### **STEP 1:**

Install the right tank brace to the vertical support located on the inside of the rear tank wall using three 5/16" self tapping screws. See figure 17A.

#### <u>STEP 2:</u>

Remove existing bolts from the left rear outside corner of the tank, align brace with holes (be sure brace is resting on angle below) and fasten with original bolts. See figure 17B.



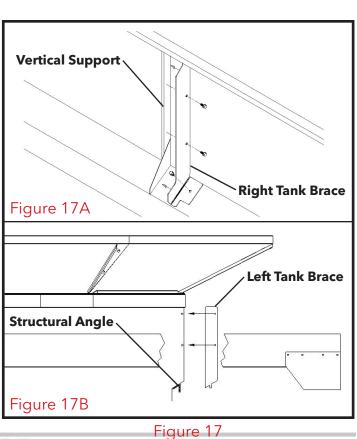

















4010 320th St., Boyden, IA. 51234 Phone: (712) 725-2311 Fax: (712) 725-2380 Toll Free: 1-800-54DEMCO (1-800-543-3626) Demco warranty policies, operator manuals, and product registration can be found online: www.demco-products.com