

SIDEQUEST[®]


by Demco

12-11
AC20061,rev2

John Deere
7720, 7820, 7920
7730, 7830, 7930



NOTE: Front fenders must be removed before installation of brackets.

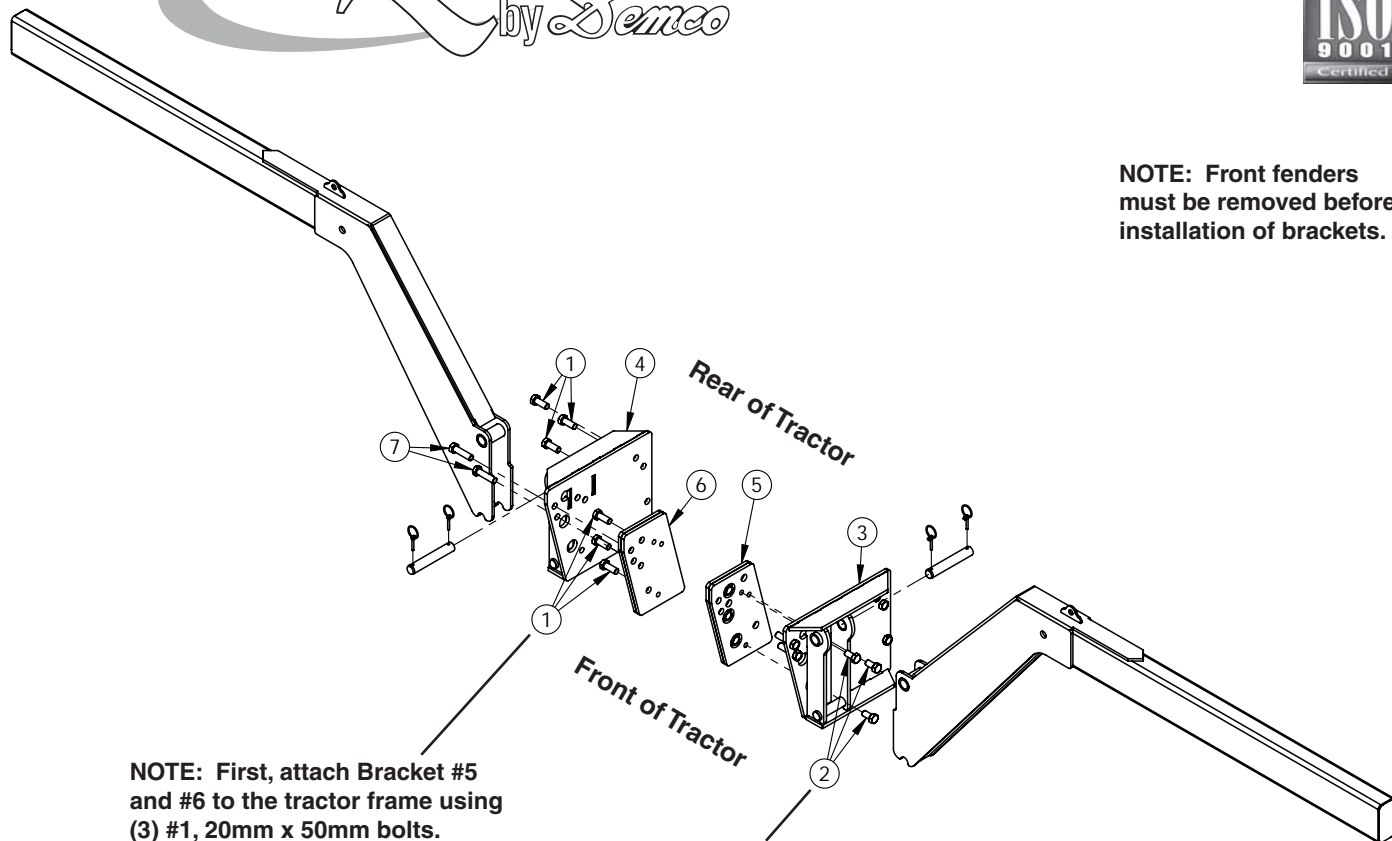

NOTE: First, attach Bracket #5 and #6 to the tractor frame using (3) #1, 20mm x 50mm bolts.

NOTE: Second, bolt Bracket #3 and #4 to Bracket #5 and #6 using (3) #2, 3/4"-10UNC x 1-1/2" Hex Bolt.

ASSEMBLY REPLACEMENT PARTS

REF. PART NO.	PART NO.	QTY.	DESCRIPTION
1.	03840	12	20mm x 2.5mm X 50mm Metric Bolt (Gr. 10.9)
2.	04052	6	3/4"-10UNC x 1-1/2" Hex Bolt (Gr.5)
3.	11739-35	1	Left Baseplate For Sidequest
4.	11740-35	1	Right Baseplate For Sidequest
5.	11741-35	1	Left Spacer Plate Sidequest
6.	11742-35	1	Right Spacer Sidequest
7.	11745	4	20mm X 2.5mm x 75mm Metric (Gr. 10.9)

Please order replacement parts by **PART NO.** and **DESCRIPTION.**

BOLT TORQUE SPECIFICATIONS

STANDARD BOLTS:			METRIC BOLTS:	
Size	Grade	Torque	Size	Torque
1/2"	5	75 ft/lbs.	20mm	515 ft/lbs.
3/4"	5	209 ft/lbs.		

READ complete manual CAREFULLY BEFORE attempting operation.

DEMCO • 4010 320th Street • P.O. Box 189 • Boyden, IA 51234

PH: (712) 725-2311 • Toll Free: 1-800-543-3626 • FAX: (712) 725-2380 or 1-800-845-6420

www.demco-products.com