

Demco SIDEQuest[®] 1200


Demco QUICK TACH 600 Gallon 4WD Tractors

10-14
AC20094,rev1

JOHN DEERE
9230, 9330, 9430,
9530, 9630
9360R, 9410R, 9460R,
9510R, 9560R



#2 & #4 - used for mounting
SideQuest only

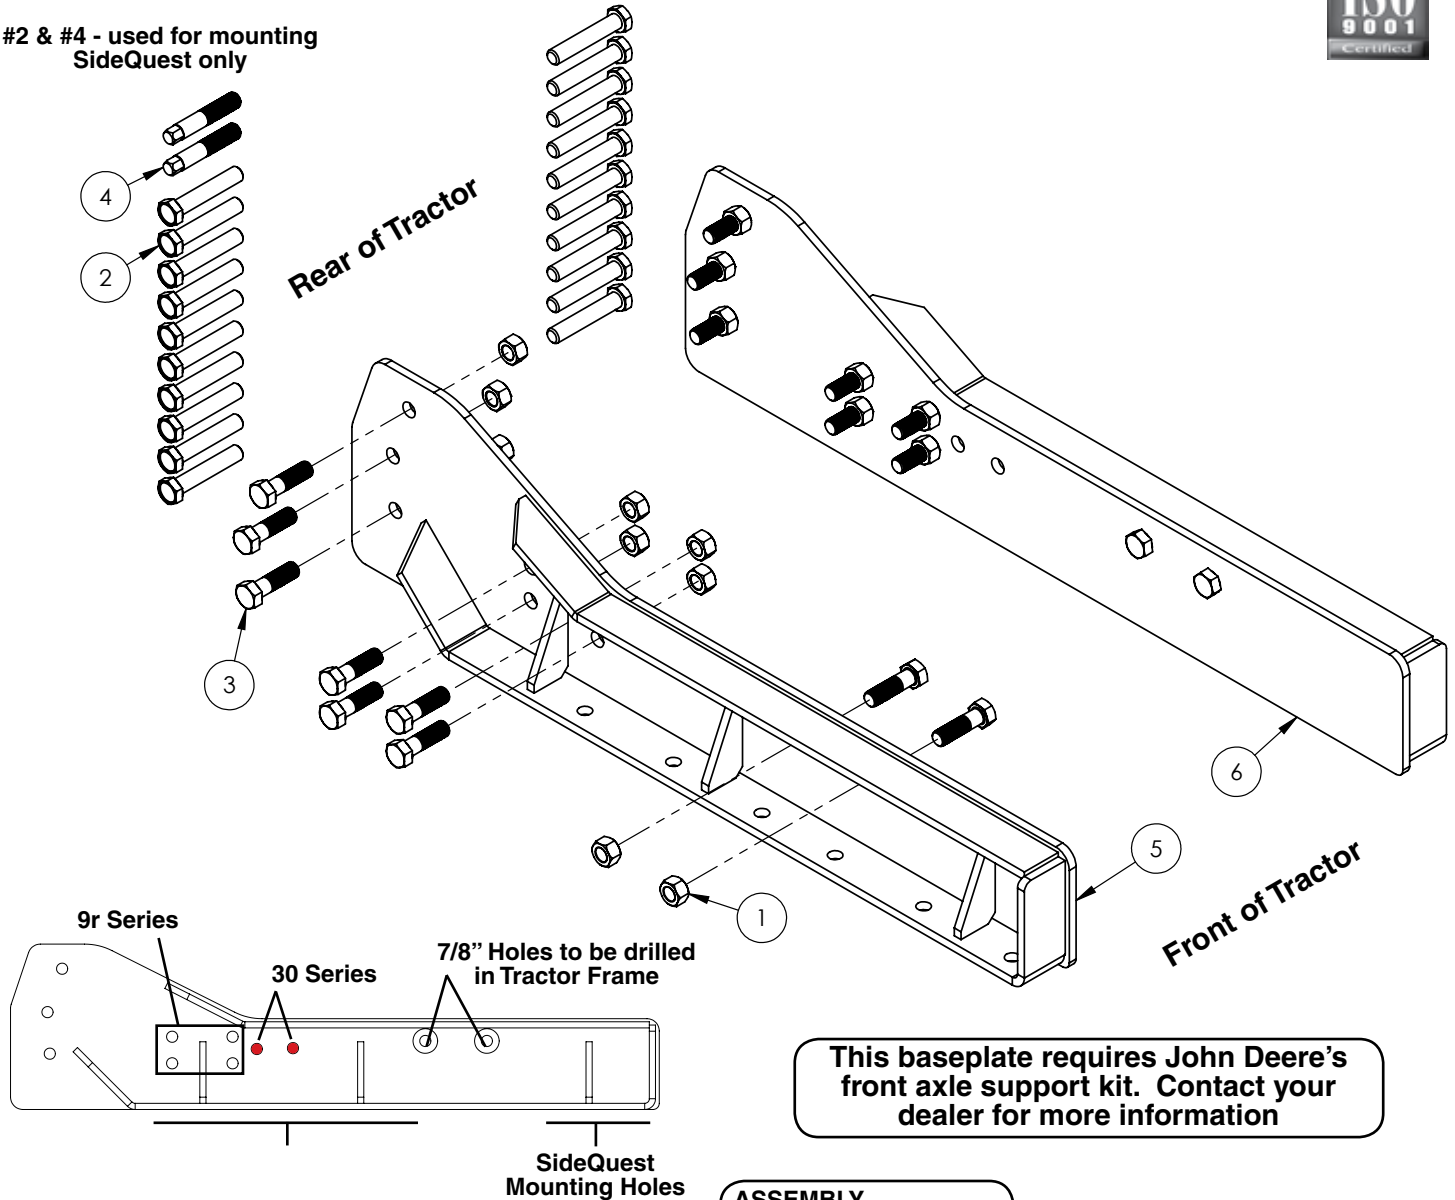

This baseplate requires John Deere's front axle support kit. Contact your dealer for more information

ASSEMBLY REPLACEMENT PARTS

REF. PART NO.	PART NO.	QTY.	DESCRIPTION
1.	10678	18	Nut, .875NC Nylon Lock
2.	13222	20	Bolt, 22MM-2.50 x 120MM Gr10.9
3.	13223	18	Bolt, .875NC x 3.00 Gr8
4.	13919-95	2	Starter Stud
5.	14515-35	1	Right Baseplate f/ JD 30/9r Series
6.	14516-35	1	Left Baseplate f/ JD 30/9r Series

Please order replacement parts by **PART NO.** and **DESCRIPTION.**

BOLT TORQUE SPECIFICATIONS				
STANDARD BOLTS:			METRIC BOLTS:	
Size	Grade	Torque	Size	Torque
7/8"	8	650 ft/lbs.	22mm	702 ft/lbs.

**READ complete manual CAREFULLY
BEFORE attempting operation.**

Baseplate Install Instructions

Preparation: Remove any loader/blade brackets from the tractor. The tractor's duals must be set to 120" wheel spacing for mounting SideQuest.



1. Install John Deere's front axle support kit for tractor mounted tanks.



2. Install the right baseplate using 7/8" x 3.00" bolts and nylon lock nuts. Repeat for opposite side. Tighten 7/8" bolts to specified torque found on front cover.



3. Center punch the drilled hole location and use a 29/32" drill bit to drill holes. Be sure to check for hose clearance on reverse side before drilling.



4. Install 7/8" x 3.00" bolts and nylon lock nuts into drilled holes and tighten to specified torque.