


SIDEQUEST® 1200 & QUICK TACH

READ complete manual CAREFULLY
BEFORE attempting operation.

BOLT TORQUE SPECIFICATIONS		
Size	Grade	Torque
7/8"	8	650 ft/lbs.
22MM	10.9	702 ft/lbs.

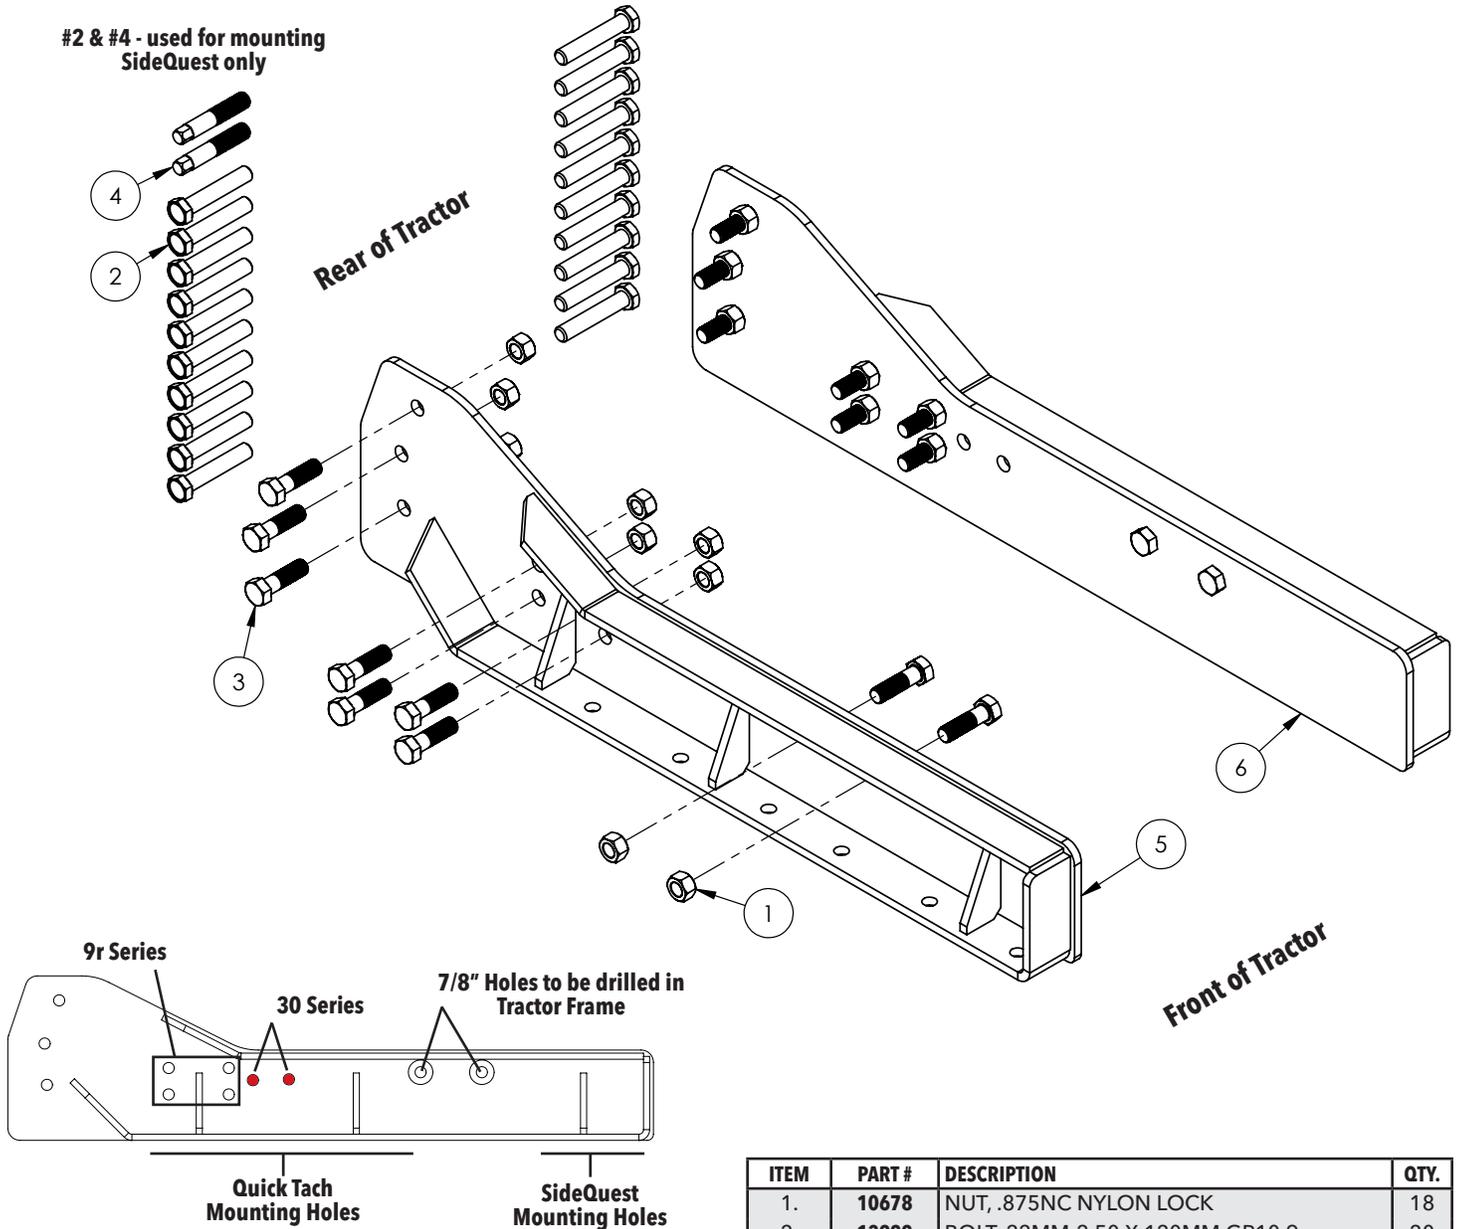

This baseplate requires John Deere's front axle support kit. Contact your dealer for more information

ITEM	PART #	DESCRIPTION	QTY.
1.	10678	NUT, .875NC NYLON LOCK	18
2.	13222	BOLT, 22MM-2.50 X 120MM GR10.9	20
3.	13223	BOLT, .875NC X 3.00 GR8	18
4.	13919-95	STARTER STUD	2
5.	14515-72	RIGHT BASEPLATE F/ JD 30/9R SERIES	1
6.	14516-72	LEFT BASEPLATE F/ JD 30/9R SERIES	1

Please order replacement parts by PART NO. and DESCRIPTION.

Baseplate Install Instructions

Preparation: Remove any loader/blade brackets from the tractor. The tractors duals must be set to 120" wheel spacing for mounting SideQuest.



1. Install John Deere's front axle support kit for tractor mounted tanks.



2. Install the right baseplate using 7/8" x 3.00" bolts and nylon lock nuts. Repeat for opposite side. Tighten 7/8" bolts to specified torque found on front cover.



3. Center punch the drilled hole location and use a 29/32" drill bit to drill holes. Be sure to check for hose clearance on reverse side before drilling.



4. Install 7/8" x 3.00" bolts and nylon lock nuts into drilled holes and tighten to specified torque.