


Demco

QUICK TACH

600 Gallon 4WD Tractors

CASE IH STEIGER
WIDE FRAME
WHEELED 500, 540,
550, 580, 600, 620
QUAD 450, 470, 500,
540, 550, 580, 600, 620
NEW HOLLAND
WIDE FRAME
T9.600, T9.615, T9.645,
T9.670, T9.700

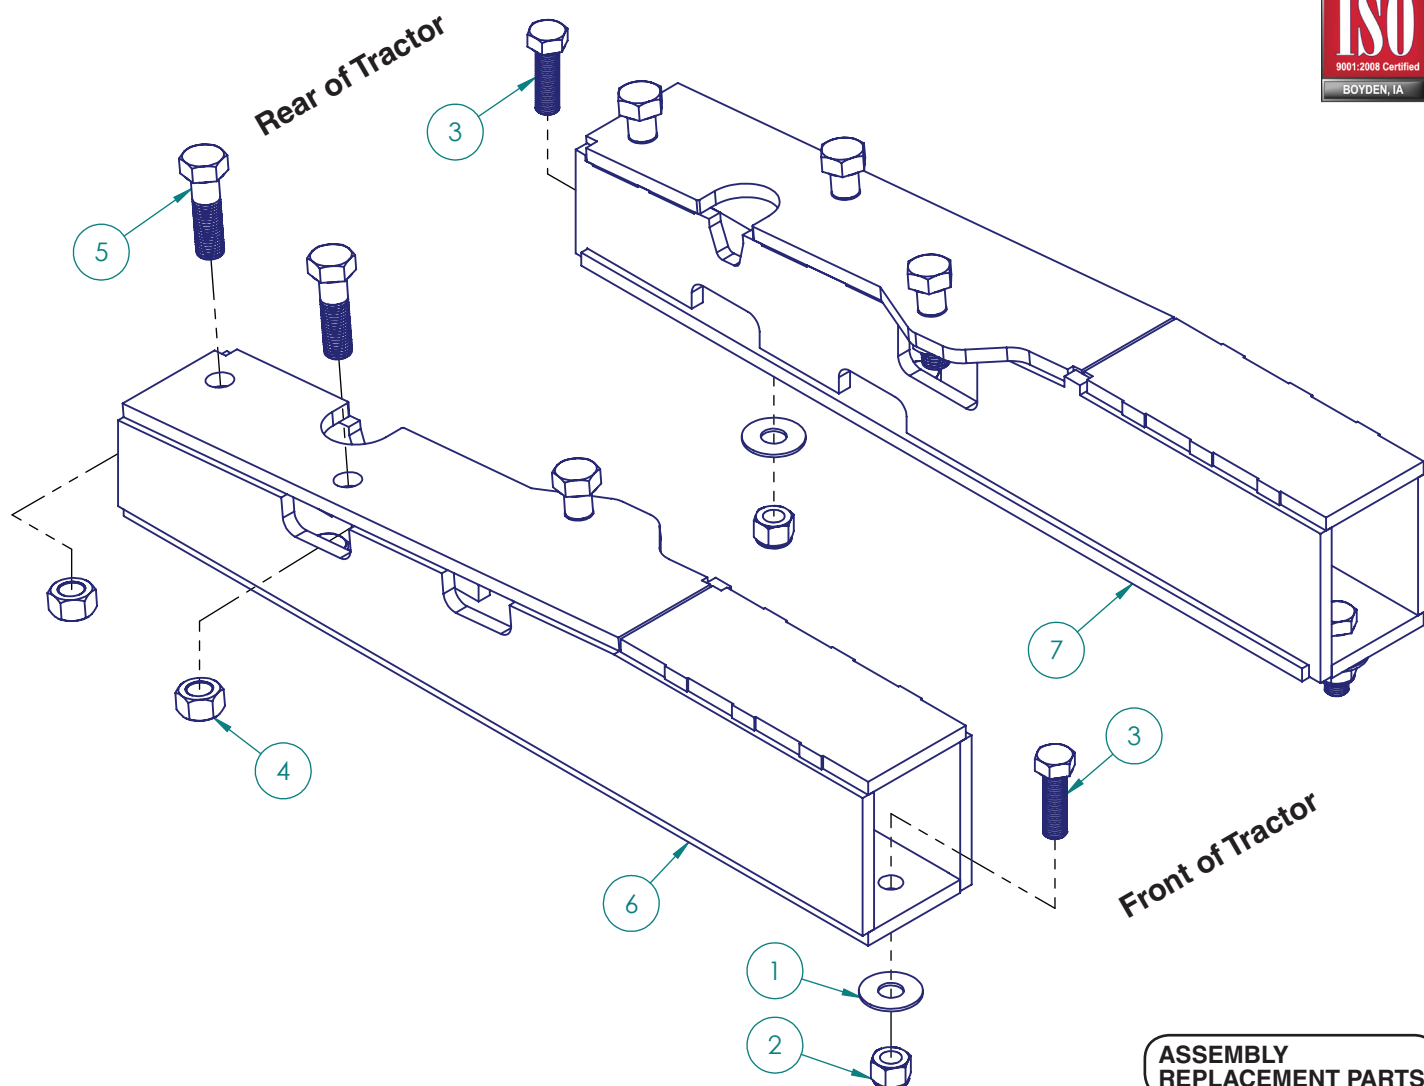

**ASSEMBLY
REPLACEMENT PARTS**

BOLT TORQUE SPECIFICATIONS

STANDARD BOLTS:			METRIC BOLTS:	
Size	Grade	Torque	Size	Torque
3/4"	5	290 ft/lbs.		
7/8"	8	420 ft/lbs.		

**READ complete manual CAREFULLY
BEFORE attempting operation.**

REF. NO.	PART NO.	QTY.	DESCRIPTION
1.	00492	8	Washer, 3/4"
2.	02961	8	Nut, 3/4" Nylon Insert Lock
3.	05047	8	Bolt, 3/4NC x 2.50 Gr5
4.	10678	6	Nut, 7/8" Nylon Insert Lock
5.	13223	6	Bolt, 7/8NC x 3.00 Gr8
6.	15170-35	1	Right Baseplate f/ New Holland/Case
7.	15171-35	1	Left Baseplate f/ New Holland/Case

Please order replacement parts by **PART NO.** and **DESCRIPTION.**

DEMCO • 4010 320th Street • Boyden, IA 51234

PH: (712) 725-2311 • Toll Free: 1-800-543-3626 • FAX: (712) 725-2380 or 1-800-845-6420


www.demco-products.com

Baseplate Install Instructions

Preparation: Remove any loader/blade brackets from the tractor.



1. Remove step/toolboxes brackets and front weight.

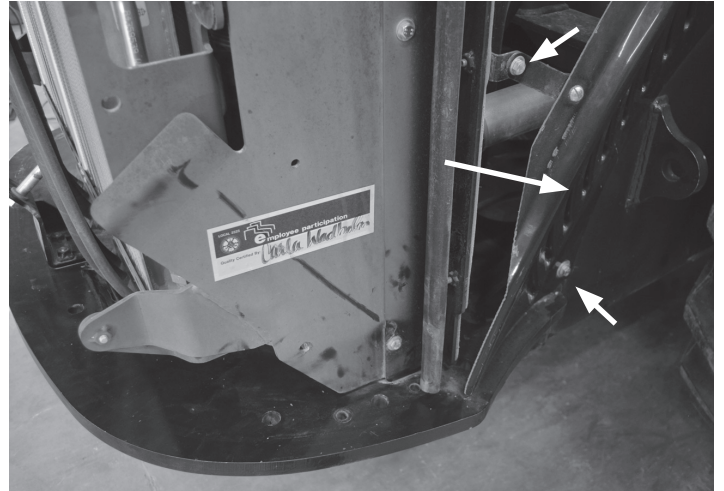

2. Loosen or remove engine shield during installation process.



3. Install Right Baseplate using 7/8" x 3.00" Bolts with 7/8" Nylon Lock Nuts. Tighten to 420 ft-lbs. Repeat for the left side.

4. Reinstall engine shield. Install crosstube hardware and torque to specified values on front cover of instructions.

