




Doing Our Best to Provide You the Best

HJ26140, Rev 2
01/24

B & W ADAPTER

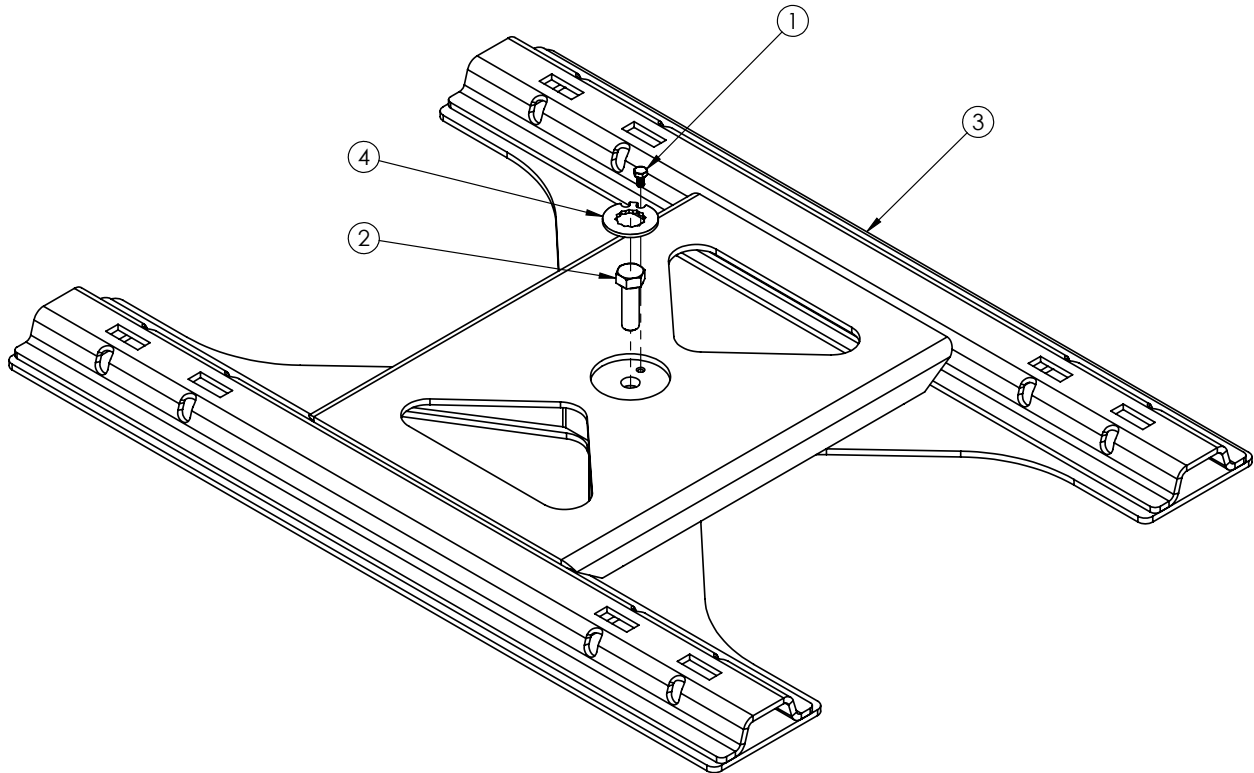

ITEM	PART #	QTY	DESCRIPTION
1	00092	1	BOLT, .25NC X .50 GR5 HEX
2	00290	1	BOLT, .625NC X 2 GR5 HEX
3	15384-76	1	B & W UL FRAME
4	15385-76	1	BOLT LOCK PLATE

Please order replacement parts by **PART NO.** and **DESCRIPTION.**

OPERATOR MANUAL



1. To install the adapter, lay a straight edge on top of the truck bed and measure from the straight edge to the top of cross pin.



2. Adjust the top bolt so the top of the bushing measures approximately 1/16" less than the measurement from the straight edge to pin. Pull the B&W pin and install adapter into the socket. Allow the B&W hitch pin to slide back into place. If pin is not fully going back into place, the adapter may need to be adjusted.



3. Once the B&W hitch pin fully returns into the adapter, tighten the top bolt to 20-25 ft lbs. and use the bolt retainer with 1/4" bolt to hold bolt into place as shown.

Important:

- We **DO NOT** recommend the use of an auto sliding hitch to be used with the B&W UL rail hitch adapter.
- **DOES NOT** work with B&W Model 1257R for 2007-2021 Toyota Tundra.

DEMCO

4010 320th St., Boyden, IA. 51234

Phone: (712) 725-2311

Fax: (712) 725-2380

Toll Free: 1-800-54DEMCO (1-800-543-3626)

**Demco warranty policies, operator manuals, and product registration
can be found online:**

www.demco-products.com