


HEADER TRANSPORTS

9H000107 - SHELBOURNE HEADER BRACKET

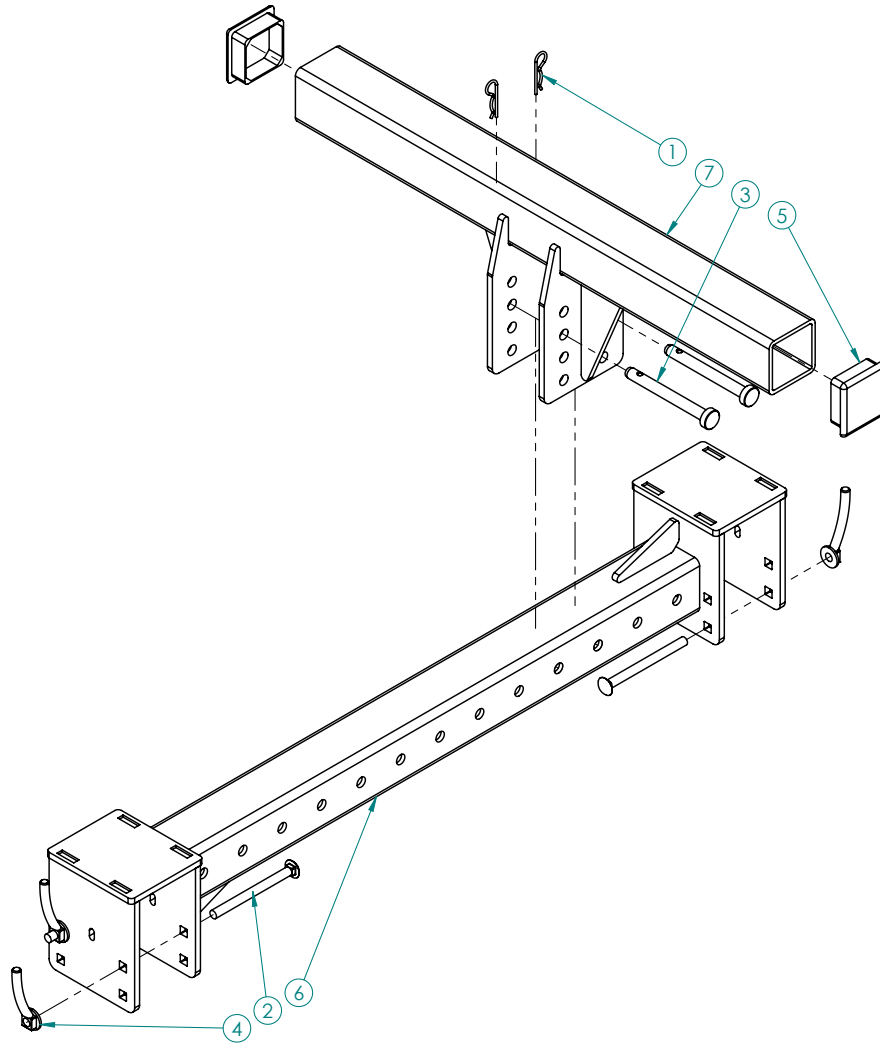

ITEM	PART #	DESCRIPTION	QTY
1	1AF052BBAH0	1/8 x 2-1/2 BRIDGE PIN	2
2	1AFC04HFA00	1/2"-13 X 6" CARR BOLT PLTD	4
3	1AFZ06JEAD0	5/8" X 5-1/4" CLEVIS PIN - ZINC PLATED	2
4	1AFZ29H0000	1/2"-13 HANDLE NUT	4
5	1AR00000049	3-1/2 x 3-1/2 x 8-11ga PLASTIC TUBE CAP	2
6	5H000574	HEADER BRIDGE	1
7	5H000575	HEADER SADDLE	1
Please order replacement parts by PART NO. and DESCRIPTION			

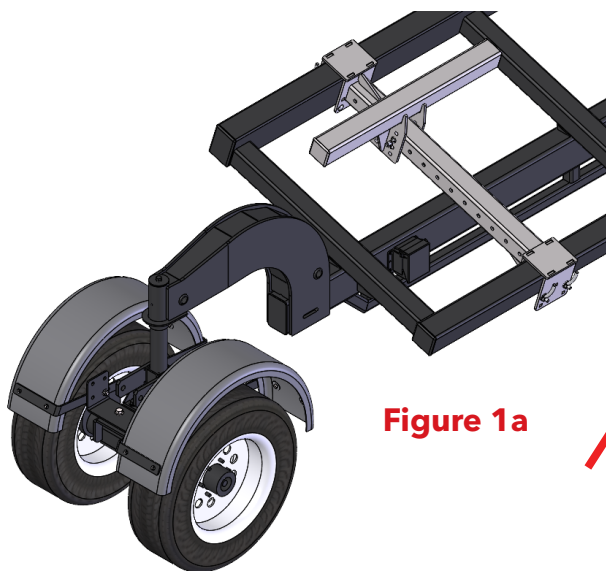


Figure 1a

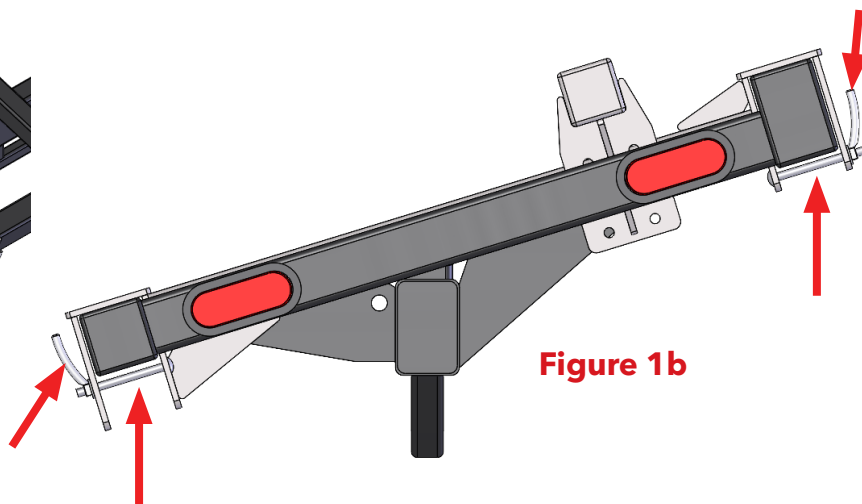


Figure 1b

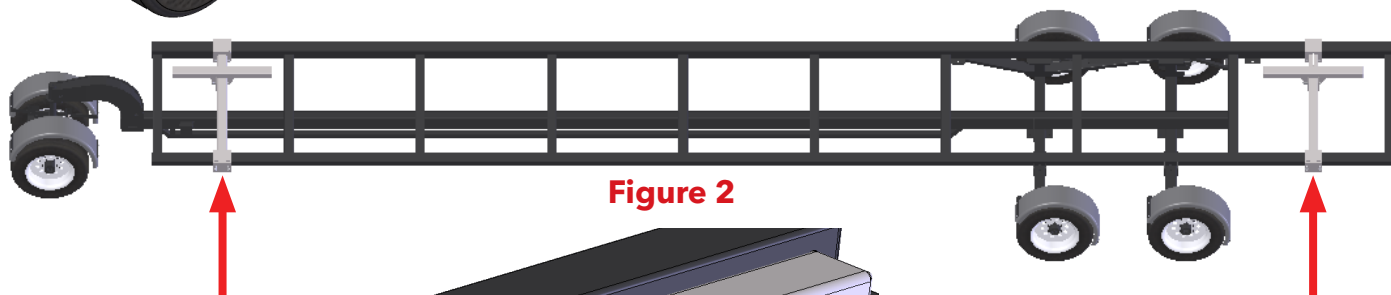


Figure 2

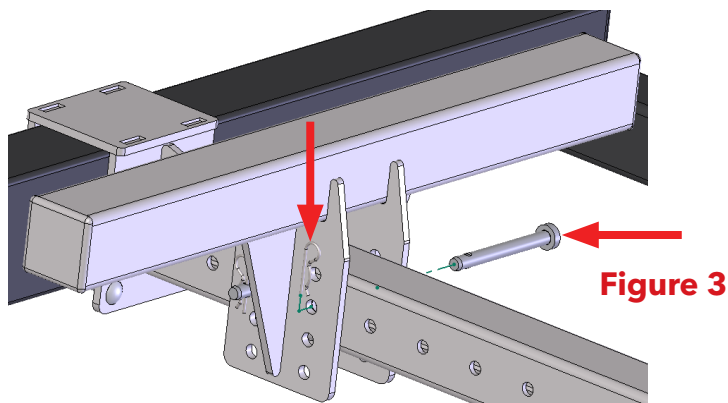


Figure 3

STEP 1:

On both the front and rear of the head transport, slide the "Header Bridge" over the head transport top and bottom rail tubes. Align the "HB" as shown in **Figure 1a & 1b**. Center the "HBs" in between the head transport support tubes as shown in **Figure 2**.

STEP 2:

Using the 1/2" carriage bolts, install the bolts from inside out. Install the 1/2" Handle Nuts and tighten.

STEP 3:

Install the "Header Saddle" to the proper height and location needed for the head. Pin the "HS" using the two 5/8" pins and two 1/8" bridge pins as shown in **Figure 3**. **NOTE:** When not being used, flip the "HS" over.

DEMCO

4010 320th St., Boyden, IA. 51234

Phone: (712) 725-2311

Fax: (712) 725-2380

Toll Free: 1-800-54DEMCO (1-800-543-3626)

**Demco warranty policies, operator manuals, and product registration
can be found online:**

www.demco-products.com