


PTCTK-1 QUICK REFILL PARTS BREAKDOWN

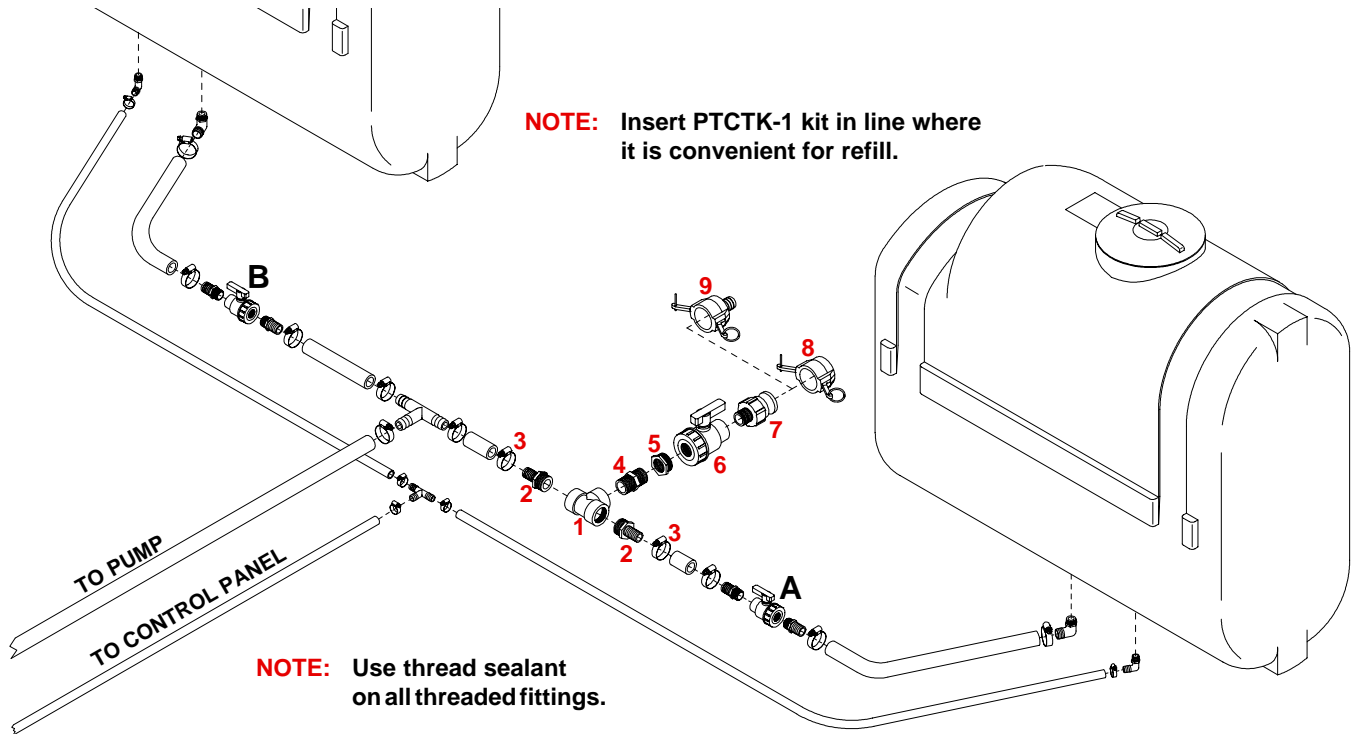

ASSEMBLY INSTRUCTIONS

1. Begin by closing valves **A** and **B**. Now locate a convenient place in the hose which is easily accessible for using the PTCTK-1 quick refill kit, and cut hose.
2. Thread the two 1-1/2" MPT x 1-1/4" HB fittings (#2) to the 1-1/2" Tee fitting (#1). Insert this assembly into the cut hose, and clamp at both ends with hose clamps (#3).
3. Thread fitting (#4) into the tee fitting (#1), and fitting (#5) to fitting (#4) as shown in diagram above.
4. Now thread adapter (#7) to the poly ball valve (#6), and thread this assembly on to fitting (#5).
5. Attach cap (#8) onto the adapter (#7). **Note:** Hose shank (#9) is used when using the PTCTK-1 quick refill. Attach hose shank to the nurse tank hose, and then hook up to the adapter (#7).

(PTCTK-1) KIT PARTS LIST

| REF. NO. | PART NO. | QTY. | DESCRIPTION |
|----------|-----------|------|-------------------------------------|
| 1. | BTT112 | 1 | 1-1/2" FPT Tee |
| 2. | BA112 114 | 2 | 1-1/2" MPT x 1-1/4" Hose Barb |
| 3. | B24H | 2 | 1-1/4" Hose Clamp |
| 4. | BM1120 | 1 | 1-1/2" MPT x 1-1/2" MPT Nipple |
| 5. | RB200 112 | 1 | 2" MPT x 1-1/2" FPT Reducer Bushing |
| 6. | UV200FP | 1 | 2" Poly Ball Valve |
| 7. | 633F2020 | 1 | 2" Adapter - Male N.P.T. |
| 8. | 634B2020 | 1 | 2" Cap for Adapter |
| 9. | 633C2020 | 1 | 2" Hose Shank |

Please order replacement parts by **PART NO.** and **DESCRIPTION.**